


F126-P-EG-IA-TP

FLOW COMPUTER FOR CORRECTED GAS VOLUME

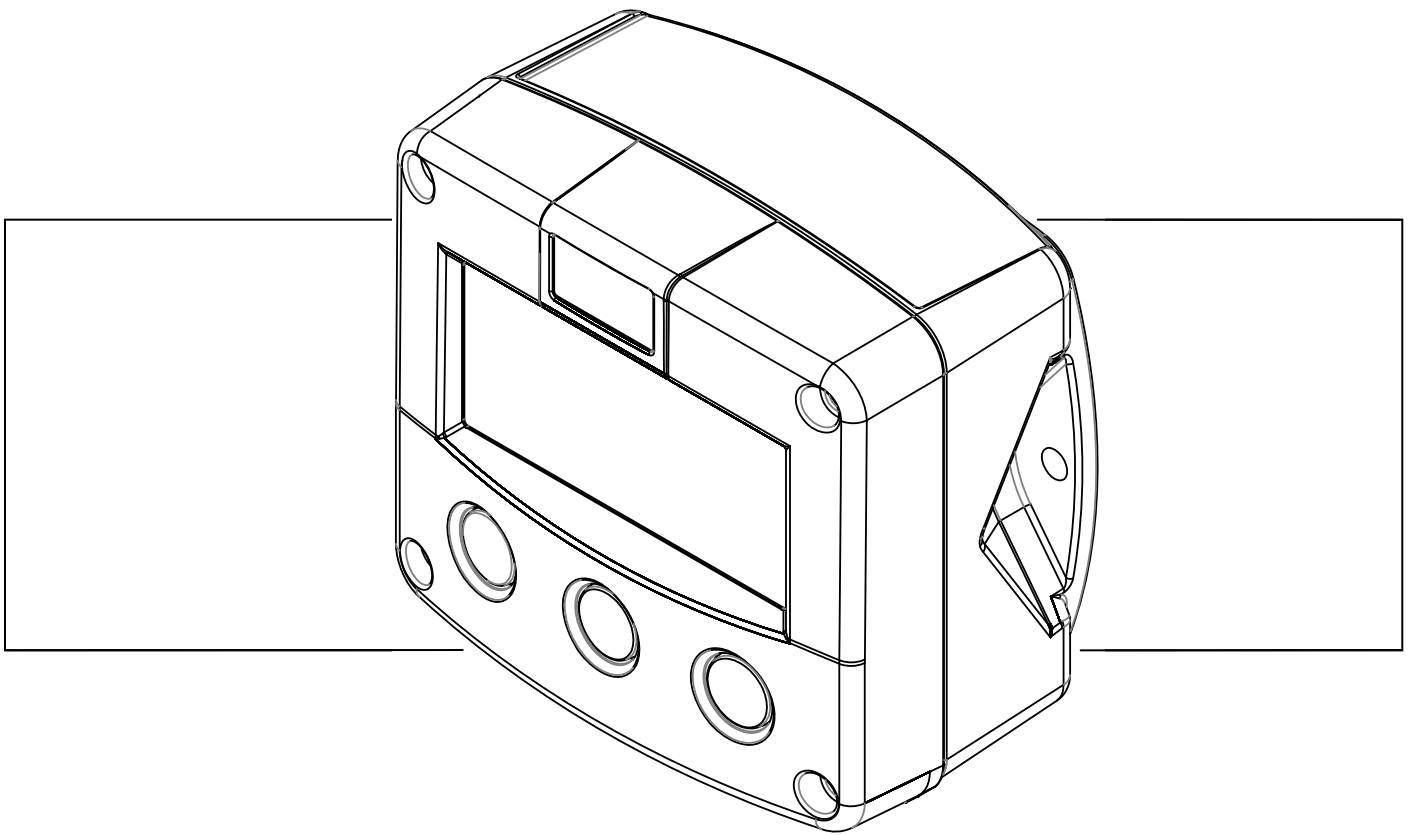

Signal input flowmeter - type P: pulse, Namur and coil

Signal input pressure - type IA: (0)4-20mA

Signal input temperature - type TP: PT100 2- or 3 wire

Signal output: 0/4-20mA / 0-10V ref. corrected flowrate

Options: Intrinsically Safe, Modbus communication



SAFETY INSTRUCTIONS

- Any responsibility is lapsed if the instructions and procedures as described in this manual are not followed.
- **LIFE SUPPORT APPLICATIONS:** The F126-P-EG is not designed for use in life support appliances, devices, or systems where malfunction of the product can reasonably be expected to result in a personal injury. Customers using or selling these products for use in such applications do so at their own risk and agree to fully indemnify the manufacturer and supplier for any damages resulting from such improper use or sale.
- **Electro static discharge does inflict irreparable damage to electronics! Before installing or opening the unit, the installer has to discharge himself by touching a well-grounded object.**
- **This unit must be installed in accordance with the EMC guidelines (Electro Magnetic Compatibility).**
- **Do connect a proper grounding to the aluminum casing as indicated if the F126-P-EG has been supplied with the 115-230V AC power-supply type PM. The green / yellow wire between the back-casing and removable terminal-block may never be removed.**
- **Intrinsically Safe applications: follow the instructions as mentioned in Chapter 5 and consult “Fluidwell F1...-XI - Documentation for Intrinsic Safety”.**

DISPOSAL



At the end of its life this product should be disposed of according to local regulations regarding waste electronic equipment. If a battery is present in this product it should be disposed of separately. The separate collection and recycling of your waste equipment will help to conserve natural resources and ensure that it is recycled in a manner that protects the environment.

SAFETY RULES AND PRECAUTIONARY MEASURES

- The manufacturer accepts no responsibility whatsoever if the following safety rules and precautions instructions and the procedures as described in this manual are not followed.
- Modifications of the F126-P-EG implemented without preceding written consent from the manufacturer, will result in the immediate termination of product liability and warranty period.
- Installation, use, maintenance and servicing of this equipment must be carried out by authorized technicians.
- Check the mains voltage and information on the manufacturer's plate before installing the unit.
- Check all connections, settings and technical specifications of the various peripheral devices with the F126-P-EG supplied.
- Open the casing only if all leads are free of potential.
- Never touch the electronic components (ESD sensitivity).
- Never expose the system to heavier conditions than allowed according to the casing classification (see manufacture's plate and chapter 4.2.).
- If the operator detects errors or dangers, or disagrees with the safety precautions taken, then inform the owner or principal responsible.
- The local labor and safety laws and regulations must be adhered to.

ABOUT THE OPERATION MANUAL

This operation manual is divided into two main sections:

- The daily use of the unit is described in chapter 2 "Operation". These instructions are meant for users.
- The following chapters and appendices are exclusively meant for electricians/technicians. These provide a detailed description of all software settings and hardware installation guidance.

This operation manual describes the standard unit as well as most of the options available. For additional information, please contact your supplier.

A hazardous situation may occur if the F126-P-EG is not used for the purpose it was designed for or is used incorrectly. Please carefully note the information in this operating manual indicated by the pictograms:



A "**warning**" indicates actions or procedures which, if not performed correctly, may lead to personal injury, a safety hazard or damage of the F126-P-EG or connected instruments.



A "**caution**" indicates actions or procedures which, if not performed correctly, may lead to personal injury or incorrect functioning of the F126-P-EG or connected instruments.



A "**note**" indicates actions or procedures which, if not performed correctly, may indirectly affect operation or may lead to an instrument response which is not planned.

| | | |
|-----------------------|---|---------------------------------|
| Hardware version | : | 02.01.xx |
| Software version | : | 02.05.xx |
| Manual | : | HF126PEN_EG_IA_TP_v0501_04 |
| © Copyright 2003-2011 | : | Fluidwell bv - The Netherlands. |

Information in this manual is subject to change without prior notice. The manufacturer is not responsible for mistakes in this material or for incidental damage caused as a direct or indirect result of the delivery, performance or use of this material.

© All rights reserved. No parts of this publication may be reproduced or used in any form or by any means without written permission of your supplier.

CONTENTS MANUAL

| | |
|--|----|
| Safety instructions | 2 |
| Disposal | 2 |
| Safety rules and precautionary measures | 2 |
| About the operation manual | 3 |
| 1. Introduction | 5 |
| 1.1. System description of the F126-P-EG | 5 |
| 2. Operational | 7 |
| 2.1. General | 7 |
| 2.2. Control panel | 7 |
| 2.3. Operator information and functions | 8 |
| 3. Configuration | 9 |
| 3.1. Introduction | 9 |
| 3.2. Programming SETUP-level | 9 |
| 3.2.1. General | 9 |
| 3.2.2. Overview functions SETUP level | 12 |
| 3.2.3. Explanation SETUP-functions | 13 |
| 1 - Total | 13 |
| 2 - Flowrate | 14 |
| 3 - Power management | 15 |
| 4 - Flowmeter | 15 |
| 5 - Temperature | 16 |
| 6 - Pressure | 17 |
| 7 - Formula | 18 |
| 8 - Analog output | 19 |
| 9 - Communication | 20 |
| A - Others | 20 |
| 4. Installation | 21 |
| 4.1. General directions | 21 |
| 4.2. Installation / surrounding conditions | 21 |
| 4.3. Dimensions- Enclosure | 22 |
| 4.4. Installing the hardware | 24 |
| 4.4.1. Introduction | 24 |
| 4.4.2. Voltage selection sensor supply | 25 |
| 4.4.3. Terminal connectors | 26 |
| 5. Intrinsically safe applications | 33 |
| 5.1. General information and instructions | 33 |
| 5.2. Terminal connectors Intrinsically Safe applications | 34 |
| 5.3. Configuration Examples | 36 |
| 5.4. Battery replacement instructions | 38 |
| 6.1. General directions | 39 |
| 6.2. Repair | 39 |
| Appendix A: Technical specification | 40 |
| Appendix B: Problem solving | 44 |
| Appendix C: Communication variables | 45 |
| Index of this manual | 49 |
| List of figures in this manual | 49 |
| Notes | 50 |

1. INTRODUCTION

1.1. SYSTEM DESCRIPTION OF THE F126-P-EG

Functions and features

The flowrate / totalizer model F126-P-EG-IA-TP is a microprocessor driven instrument designed for the calculation of corrected gas volume using flow equations. The unit displays compensated flowrate / total, line temperature and pressure.

This product has been designed with a focus on:

- ultra-low power consumption to allow long-life battery powered applications (type PB and PC),
- intrinsic safety for use in hazardous applications (type XI),
- several mounting possibilities with aluminum or GRP enclosures for harsh industrial surroundings,
- ability to process all types of flowmeter signals,
- transmitting possibilities with analog / pulse / alarm and communication (option) outputs.

Flowmeter and sensor inputs

For gas applications, one flowmeter, one temperature and one pressure sensor have to be connected to the F126-P-EG-TP-IA. This manual describes the unit with a pulse signal input for the flowmeter "-P version". Other input versions are available to process (0)4-20mA or 0-10V flowmeter signals. The pressure sensor required is a (0)4-20mA signal; alternatively, a 0-10V sensor input can be supplied. The temperature sensor requires a 2-wire or 3-wire PT100 element; alternatively, a (0)4-20mA or 0-10V sensor input can be supplied.

To power the sensors, several options are available.

Standard output

- Configurable linear (0)4-20mA or 0-10V analog output with 10-bits resolution mirroring the actual flowrate at standard conditions. Flowrate levels as well as the minimum and maximum signal output can be tuned.

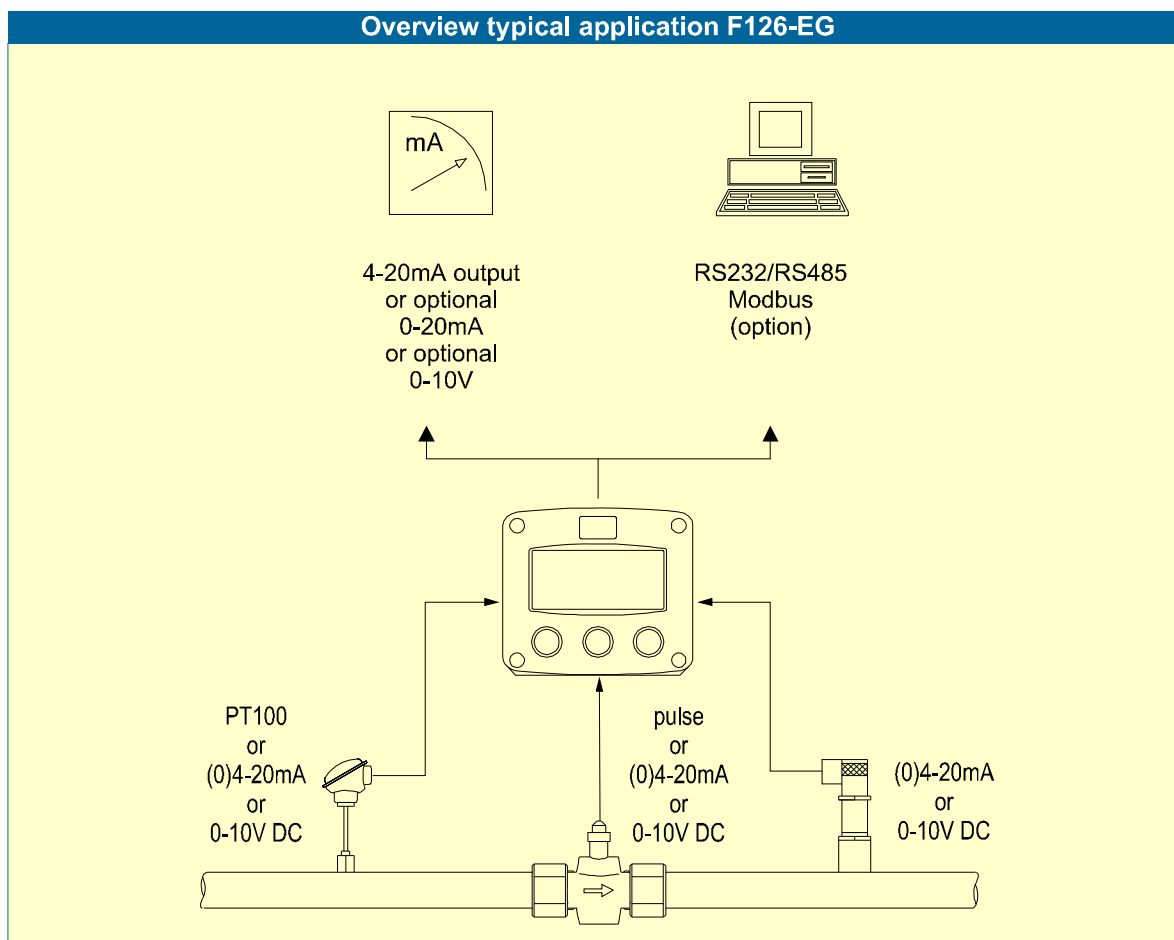


Fig. 1: Typical application for the F126-P-EG.

Configuration of the unit

The F126-P-EG was designed to be implemented in many types of applications. For that reason, a SETUP-level is available to configure your F126-P-EG according to your specific requirements. SETUP includes several important features, such as Span, measurement units, signal selection etc. All settings are stored in EEPROM memory and will not get lost in case of power break-down or empty battery.

To extend the battery-life time (option), please make use of the power-management functions as described in chapter 3.2.3.

Display information

The unit has a large transfective LCD with all kinds of symbols and digits to display measuring units, status information, trend-indication and key-word messages.

Flowrate and totals can be displayed either with the small 8mm digits or with the 17mm digits.

A backup of the total and accumulated total in EEPROM memory is made every minute.

Options

Following options are available: isolated or active 4-20mA / 0-10V / 0-20mA analog output, full Modbus communication RS232/485 (also battery powered), intrinsic safety, power- and sensor-supply options, panel-mount, wall-mount and weather-proof enclosures, flame proof enclosure.

2. OPERATIONAL

2.1. GENERAL



- *The F126-P-EG may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.*
- *Take careful notice of the " Safety rules, instructions and precautionary measures " in the front of this manual.*

This chapter describes the daily use of the F126-P-EG. This instruction is meant for users / operators.

2.2. CONTROL PANEL

The following keys are available:



Fig. 2: Control Panel.

Functions of the keys



This key is used to program and save new values or settings.
It is also used to get access to SETUP-level; please read chapter 3.



This key is used to SELECT accumulated total.
The arrow-key ▲ is used to increase a value after PROG has been pressed or to configure the unit; please read chapter 3.



Press this key twice to CLEAR the value for total.
The arrow-key ► is used to select a digit after PROG has been pressed or to configure the unit; please read chapter 3.

2.3. OPERATOR INFORMATION AND FUNCTIONS

In general, the F126-P-EG will always act function at Operator level. The information displayed is dependant up on the SETUP-settings. The signal generated by the connected flowmeter are measured by the F126-P-EG in the background, whichever screen refresh rate setting is chosen. After pressing a key, the display will be updated very quickly during a 30 second period, after which it will slow-down again.



Fig. 3: Example of display information during process.

For the Operator, the following functions are available:

- **Display calculated flowrate / total or calculated flowrate**
This is the main display information of the F126-P-EG. After selecting any other information, it will always return to this main display automatically.
Total is displayed at the upper-line of the display and flowrate and the bottom line.
Possibly, only flowrate will be displayed with the large 17mm digits; do press the SELECT-key to read the total. When "-----" is shown, then the flowrate value is too high to be displayed.
The arrows \blacktriangle \blacktriangledown indicate the increase / decrease of the flowrate trend.
- **Clear total**
The value for total can be re-initialized. To do so, press CLEAR twice. After pressing CLEAR once, the flashing text "PUSH CLEAR" is displayed. To avoid re-initialization in this stage, press an other key as CLEAR or wait for 20 seconds. Re-initialization of total DOES NOT influence the accumulated total.
- **Display calculated accumulated total**
When the SELECT-key is pressed, total and accumulated total are displayed. The accumulated total cannot be re-initialized. The value will count up to 99,999,999,999. The unit and number of decimals are displayed according to the configuration settings for total.
- **Display line pressure**
After pressing SELECT, the actual measured pressure is displayed.
- **Display line temperature**
After pressing SELECT, the actual measured temperature is displayed.
- **Low-battery alarm**
When the battery voltage drops, it must be replaced. At first "low-battery" will flash, but as soon as it is displayed continuously, the battery MUST be replaced shortly after!
Only original batteries supplied by the manufacturer may be used, else the guarantee and liability will be terminated. The remaining lifetime after the first moment of indication is generally several days up to some weeks.



Fig. 4: Example of low-battery alarm.

- **Alarm 01-03**
When "alarm" is displayed, please consult Appendix B: problem solving.

3. CONFIGURATION

3.1. INTRODUCTION

This and the following chapters are exclusively meant for electricians and non-operators. In these, an extensive description of all software settings and hardware connections are provided.



- *Mounting, electrical installation, start-up and maintenance of the instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.*
- *The F126-P-EG may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.*
- *Ensure that the measuring system is correctly wired up according to the wiring diagrams. The housing may only be opened by trained personnel.*
- *Take careful notice of the " Safety rules, instructions and precautionary measures " in the front of this manual.*

3.2. PROGRAMMING SETUP-LEVEL


3.2.1. GENERAL


Configuration of the F126-P-EG is done at SETUP-level. SETUP-level is reached by pressing the PROG/ENTER key for 7 seconds; at which time, both arrows \blacktriangle will be displayed. In order to return to the operator level, PROG will have to be pressed for three seconds. Alternatively, if no keys are pressed for 2 minutes, the unit will exit SETUP automatically. SETUP can be reached at all times while the F126-P-EG remains fully operational.




Note: A password may be required to enter SETUP. Without this password access to SETUP is denied.

To enter SETUP-level:

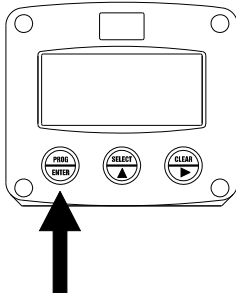

Press  for 7 seconds


Matrix structure SETUP-level:

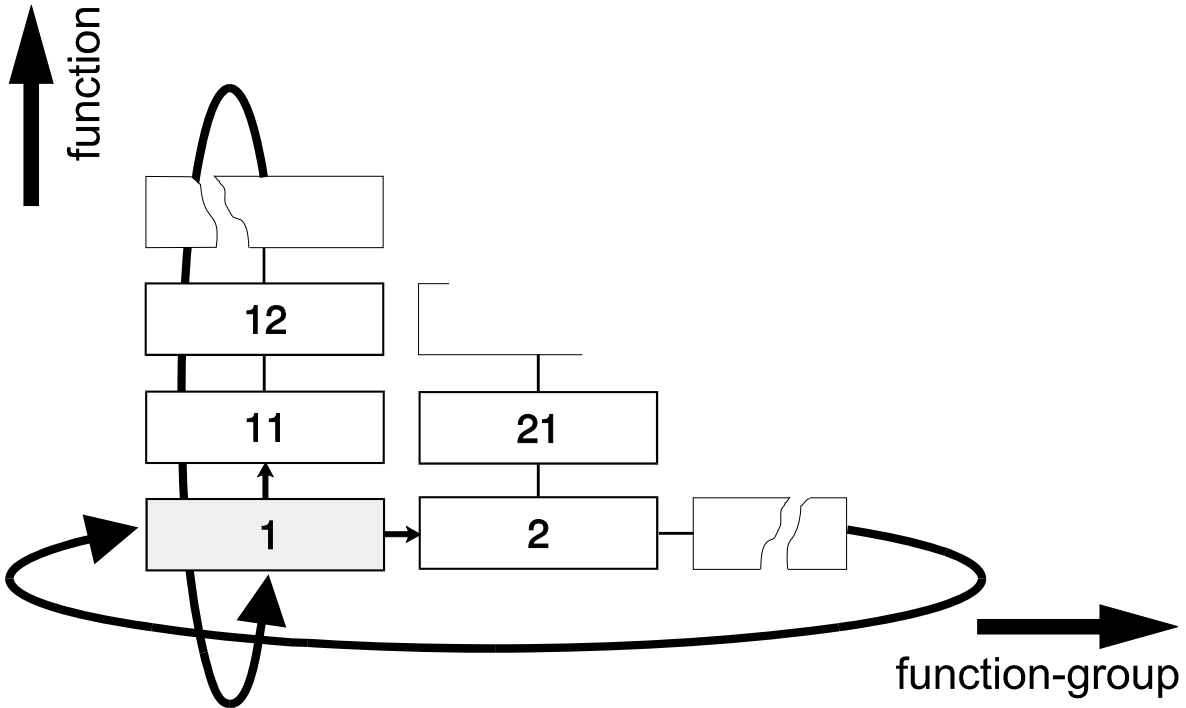


SCROLLING THROUGH SETUP-LEVEL

Selection function-group and function:

SETUP is divided into several function groups and functions.

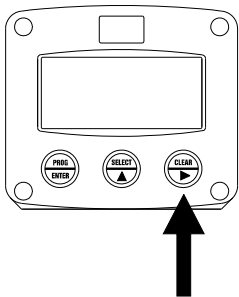

Select function-group with

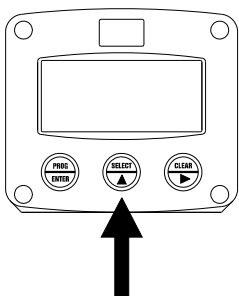


Select function with







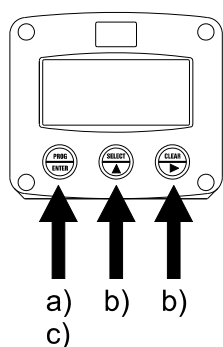

Each function has a unique number, which is displayed below the word "SETUP" at the bottom of the display. The number is a combination of two figures. The first figure indicates the function-group and the second figure the function. Additionally, each function is expressed with a keyword.



After selecting a sub-function, the next main function is selected after scrolling through all "active" sub-functions (e.g. 1[▲], 11[▲], 12[▲], 13[▲], 14[▲], 1[▶], 2[▶], 3[▲], 31 etc.).



To change or a select a value or value:



- a) press  briefly; **PROGRAM** will start flash
- b) select or enter value with  and / or 
- c) press  to confirm the value / selection.

To change a value, use  to select the digits and  to increase that value.

To select a setting, both  and  can be used.

When the new value is not valid, the increase sign  or decrease-sign  will be displayed while you are programming.


When data is altered but ENTER is not pressed, then the alteration can still be cancelled by waiting for 20 seconds or by pressing ENTER for three seconds: the PROG-procedure will be left automatically and the former value reinstated.



Note !

Note: alterations will only be set after ENTER has been pressed!

To return to OPERATOR-level:

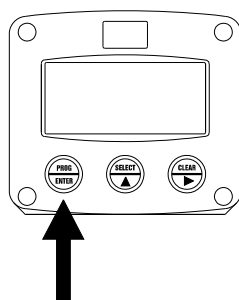

Press  for 3 seconds

In order to return to the operator level, PROG will have to be pressed for three seconds. Also, when no keys are pressed for 2 minutes, SETUP will be left automatically.

3.2.2. OVERVIEW FUNCTIONS SETUP LEVEL

| SETUP FUNCTIONS AND VARIABLES | | | |
|-------------------------------|-------------------------|----------------------|--|
| 1 | TOTAL | | |
| | 11 | UNIT | L - m3 - kg - lb - GAL - USGAL - bbl - no unit |
| | 12 | DECIMALS | 0 - 1 - 2 - 3 (Ref: displayed value) |
| | 13 | K-FACTOR: | 0.000010 - 9,999,999 |
| | 14 | DECIMALS K-FACTOR | 0 - 6 |
| 2 | FLOWRATE | | |
| | 21 | UNIT | mL - L - m3 - mg - g - kg - ton - GAL - bbl - lb - cf - REV - no unit - scf - Nm3 - NL - P |
| | 22 | TIME UNIT | sec - min - hour - day |
| | 23 | DECIMALS | 0 - 1 - 2 - 3 (Ref: displayed value) |
| | 24 | K-FACTOR | 0.000010 - 9,999,999 |
| | 25 | DECIMALS K-FACTOR | 0 - 6 |
| | 26 | FILTER | 1 - 99 |
| | 27 | PERIOD | 0.1 - 99.9 seconds |
| 3 | POWER MANAGEMENT | | |
| | 31 | LCD UPDATE | fast - 1 sec - 3 sec - 15 sec - 30 sec - off |
| | 32 | BATTERY MODE | operational - shelf |
| 4 | FLOWMETER | | |
| | 41 | SIGNAL | npn - npn_lp - reed - reed_lp - pnp - pnp_lp - namur - coil_hi - coil_lo - act_8.1 - act_12 - act_24 |
| 5 | TEMPERATURE | | |
| | 51 | NR. OF WIRES | 2 - 3 |
| | 52 | FILTER | 1 - 99 |
| | 53 | DISPLAY | °C - °F - K |
| 6 | PRESSURE | | |
| | 61 | UNIT | mbar - bar- psi - no unit |
| | 62 | SPAN | 0.000001 - 9,999,999 unit |
| | 63 | DECIMALS SPAN | 0 - 6 |
| | 64 | OFF-SET | 0.000 - 9,999.999 unit |
| | 65 | FILTER | 1 - 99 |
| | 66 | CALIBRATE LOW | default - calibrate - calibrate set |
| | 67 | CALIBRATE HIGH | default - calibrate - calibrate set |
| 7 | FORMULA | | |
| | 71 | EQUATIONS TYPE | EG - (fixed) |
| | 72 | NORMAL TEMPERAT. | 0.000 - 9,999.999 |
| | 73 | NORMAL PRESSURE | 0.000 - 9,999.999 |
| | 74 | NORMAL COMPRESS. | 0 - 9,999.999 |
| | 75 | COMPRESSIBILITY | 0 - 9,999.999 |
| 8 | ANALOG | | |
| | 81 | OUTPUT | disable - enable |
| | 82 | 4mA / 0V | 0000.000 - 9,999.999 |
| | 83 | 20mA / 10V | 0000.000 - 9,999.999 |
| | 84 | CUT-OFF | 0.0 - 9.9% |
| | 85 | TUNE MIN - 4mA / 0V | 0 - 9,999 |
| | 86 | TUNE MAX- 20mA / 10V | 0 - 9,999 |
| | 87 | FILTER | 00 - 99 |
| 9 | COMMUNICATION | | |
| | 91 | SPEED / BAUDRATE | 1200 - 2400 - 4800 - 9600 |
| | 92 | ADDRESS | 1 - 255 |
| | 93 | MODE | rtu - off |
| A | OTHERS | | |
| | A1 | TYPE / MODEL | |
| | A2 | SOFTWARE VERSION | |
| | A3 | SERIAL NO. | |
| | A4 | PASSWORD | 0000 - 9999 |
| | A5 | TAGNUMBER | 0000000 - 9999999 |

3.2.3. EXPLANATION SETUP-FUNCTIONS

| 1 - TOTAL | |
|---------------------------------|--|
| MEASUREMENT UNIT 11 | <p>SETUP - 11 determines the measurement unit for total and accumulated total. The following units can be selected:</p> <p style="text-align: center;">L - m3 - kg - lb. - GAL - USGAL - bbl - _ (no unit).</p> <p>Alteration of the measurement unit will have consequences for operator and SETUP-level values. Please note that the K-factor has to be adapted as well; the calculation is not done automatically.</p> |
| DECIMALS 12 | <p>The decimal point determines for total and accumulated total the number of digits following the decimal point. The following can be selected:</p> <p style="text-align: center;">000000 - 111111.1 - 22222.22 - 3333.333</p> |
| K-FACTOR 13 | <p>With the K-factor, the flowmeter pulse signals are converted to a quantity. The K-factor is based on the number of pulses generated by the flowmeter per selected measurement unit (SETUP 11), for example per cubic meter. The more accurate the K-factor, the more accurate the functioning of the system will be.</p> <p>Example 1: Calculating the K-factor. <i>Let us assume that the flowmeter generates 2.4813 pulses per liter and the selected unit is "cubic meters / m3". A cubic meter consists of 1000 parts of one liter which implies 2,481.3 pulses per m3. So, the K-factor is 2,481.3. Enter for SETUP - 13: "2481300" and for SETUP - 14 - decimals K-factor "3".</i></p> <p>Example 2: Calculating the K-factor. <i>Let us assume that the flowmeter generates 6.5231 pulses per gallon and the selected measurement unit is gallons. So, the K-Factor is 6.5231. Enter for SETUP - 13: "6523100" and for SETUP - 14 decimals K-factor "6".</i></p> |
| DECIMALS K-FACTOR 14 | <p>This setting determines the number of decimals for the K-factor (SETUP 13). The following can be selected:</p> <p style="text-align: center;">0 - 1 - 2 - 3 - 4 - 5 - 6</p> <p>Please note that this function influences the accuracy of the K-factor indirectly. This setting has NO influence on the displayed number of digits for total (SETUP 12)!</p> |

2 - FLOWRATE

The settings for total and flowrate are entirely separate. In this way, different units of measurement can be used for each e.g. cubic meters for total and liters for flowrate.
The display update time for flowrate is one second or more.

Note: these settings also influence the analog output.

| | | | | |
|---------------------------------|---|---------------|---------------|---------------|
| MEASUREMENT UNIT 21 | SETUP - 21 determines the measurement unit for flowrate. The following units can be selected: mL - L - m3 - mg - g - kg - ton - GAL - bbl - lb - cf - REV - no unit - scf - Nm3 - NL - P. Alteration of the measurement unit will have consequences for operator and SETUP-level values. Please note that the K-factor has to be adapted as well; the calculation is not done automatically. | | | |
| TIME UNIT 22 | The flowrate can be calculated per second (SEC), minute (MIN), hour (HR) or day (DAY). | | | |
| DECIMALS 23 | This setting determines for flowrate the number of digits following the decimal point. The following can be selected: 00000 - 1111.1 - 2222.22 - 3333.333 | | | |
| K-FACTOR 24 | With the K-factor, the flowmeter pulse signals are converted to a flowrate. The K-factor is based on the number of pulses generated by the flowmeter per selected measurement unit (SETUP 21), for example per liter. The more accurate the K-factor, the more accurate the functioning of the system will be. For examples read SETUP 13. | | | |
| DECIMALS K-FACTOR 25 | This setting determines the number of decimals for the K-factor (SETUP 24). The following can be selected: 0 - 1 - 2 - 3 - 4 - 5 - 6 Please note that this SETUP - influences the accuracy of the K-factor indirectly. This setting has NO influence on the displayed number of digits for "flowrate" (SETUP 23)! | | | |
| FILTER 26 | This function is used to stabilize the flowrate reading. With the help of this digital filter a more stable but less actual reading can be obtained. The filter principal is based on three input values: the filter level (01-99), the last calculated flowrate and the last average value. The higher the filter level, the longer the response time on a value change will be. Below, several filter levels with there response times are indicated: | | | |
| FILTER VALUE | RESPONSE TIME ON STEP CHANGE OF ANALOG VALUE. TIME IN SECONDS | | | |
| | 50% INFLUENCE | 75% INFLUENCE | 90% INFLUENCE | 99% INFLUENCE |
| 10 | 0.7 second | 1.4 seconds | 2.2 seconds | 4.4 seconds |
| 20 | 1.4 seconds | 2.8 seconds | 4.5 seconds | 9.0 seconds |
| 30 | 2.1 seconds | 4 seconds | 7 seconds | 14 seconds |
| 50 | 3.5 seconds | 7 seconds | 11 seconds | 23 seconds |
| 75 | 5.2 seconds | 10 seconds | 17 seconds | 34 seconds |
| 99 | 6.9 seconds | 14 seconds | 23 seconds | 45 seconds |
| PERIOD 27 | The flowrate is calculated by counting the number of pulses within a certain time, for example 1 second. The longer the time the more accurate the flowrate will be. The maximum value is 999.9 seconds. Note: this setting does influence the update time for the analog output directly (maximum update 10 times a second). If the output response is too slow, decrease the number of pulses. Note: the shorter the time, the higher the power consumption of the unit will be (important for battery powered applications). | | | |



Note !

3 - POWER MANAGEMENT

When used with the internal battery option, the user may hold the concern of reliable measurement over a long period of time. The F126-P-EG has several smart power management functions to extend the battery life time significantly. Two of these functions can be set:

LCD NEW 31

The calculation of the display-information influences the power consumption significantly. When the application does not require a fast display update, it is **strongly advised** to select a slow refresh-rate. Please understand that NO information will be lost; the input signal will be processed normally as well as the output-signals. The following can be selected:

Fast - 1 sec - 3 sec - 15 sec - 30 sec - off.

Example Battery life-time

battery life-time with a FAST update: about 2 years.

battery life-time with a 1 sec update: about 5 years.

Note: after a button has been pressed by the operator - the display refresh-rate will always be FAST during 30 seconds. When "OFF" is selected, the display will be switched-off after 30 seconds and will be switched-on as soon as a button has been pressed.

BATTERY-MODE 32

The unit has two modes: operational or shelf. After "shelf" has been selected, the unit can be stored for several years; it will not process the signal, the display is switched-off but all settings and totals are stored. In this mode, power consumption is extremely low. To wake-up the unit again; press the SELECT-key twice.



Note !

4 - FLOWMETER

SIGNAL 41

The F126-P-EG is able to handle several types of signals. The type of flowmeter pickup / signal is selected with SETUP 41.

Note: The selections "active pulse" offer a detection level of 50% of the supply voltage.

Read also par. 4.4.3. Flowmeter input terminal 09-11.



Note !

| TYPE OF SIGNAL | EXPLANATION | RESISTANCE | FREQ. / mV | REMARK |
|----------------|---|----------------------|----------------|------------------------------------|
| NPN | NPN input | 100K pull-up | 6 kHz. | (open collector) |
| NPN - LP | NPN input with low pass filter | 100K pull-up | 2.2 kHz. | (open collector) less sensitive |
| REED | Reed-switch input | 1M pull-up | 1.2 kHz. | |
| REED - LP | Reed-switch input with low pass filter | 1M pull-up | 120 Hz. | Less sensitive |
| PNP | PNP input | 100K pull-down | 6 kHz. | |
| PNP - LP | PNP input with low pass filter | 100K pull-down | 700 Hz. | Less sensitive |
| NAMUR | Namur input | 820 Ohm pull-down | 4 kHz. | External power required |
| COIL HI | High sensitive coil input | - | 20mV p.t.p. | Sensitive for disturbance! |
| COIL LO | Low sensitive coil input | - | 90mV p.t.p. | Normal sensitivity |
| ACT_8.1 | Active pulse input 8.1 VDC | 3K9 | 10KHz. | External power required |
| ACT_12 | Active pulse input 12 VDC | 4K | 10KHz. | External power required |
| ACT_24 | Active pulse input 24 VDC | 3K | 10KHz. | External power required |

| 5 - TEMPERATURE | | | | |
|--|---|---------------|---------------|---------------|
| Conversion formula's temperature units: | | | | |
| $xK = (x-273,15)^{\circ}C = (9/5x-459,67)^{\circ}F$ $x^{\circ}C = (x+273,15)K = 9/5x+32^{\circ}F$ $x^{\circ}F = 5/9(x-32)^{\circ}C = 5/9(x+459,67)K$ | | | | |
| DISPLAY UNIT 51 | SETUP - 51 determines the displayed unit for the Operator The following units can be selected: °C - °F - K | | | |
| NO. OF WIRES 52 | Do select here the number of wires of the two PT100 elements - two or three. | | | |
| FILTER 53 | <p>The output signal of a sensor does mirror the actual temperature. This signal is measured several times a second. The value measured is a "snap-shot" of the real temperature as it will be fluctuating.</p> <p>With the help of this digital filter a stable and accurate reading can be obtained while the filter level can be set to a desired value.</p> <p>The filter principal is based on three input values: the filter level (10-99), the last measured analog value and the last average value. The higher the filter level, the longer the response time on a value change will be.</p> | | | |
| FILTER VALUE | RESPONSE TIME ON STEP CHANGE OF ANALOG VALUE. TIME IN SECONDS | | | |
| | 50% INFLUENCE | 75% INFLUENCE | 90% INFLUENCE | 99% INFLUENCE |
| 10 | 1.8 seconds | 3.5 seconds | 5.6 seconds | 11 seconds |
| 20 | 3.5 seconds | 7.0 seconds | 11 seconds | 23 seconds |
| 30 | 5.3 seconds | 10 seconds | 17 seconds | 34 seconds |
| 50 | 8.8 seconds | 17 seconds | 29 seconds | 57 seconds |
| 75 | 13 seconds | 26 seconds | 43 seconds | 86 seconds |
| 99 | 17 seconds | 34 seconds | 57 seconds | 114 seconds |

6 - PRESSURE

| | | | | |
|------------------------------|---|----------------------|----------------------|----------------------|
| MEASURING UNIT 61 | SETUP - 61 determines the measurement unit for pressure. The following units can be selected: <p style="text-align: center;">mbar - bar - psi - no unit</p> | | | |
| SPAN 62 | With this setting, the measurement range of the (0)4-20mA pressure sensor is determined according to the selected measurement unit (setting 61). See also setting 63 - decimals span. Example Calculating the span for pressure. <i>Let us assume that the sensor generates the minimum signal (e.g. 4mA) at a pressure of 2.5 bar and the maximum signal (e.g. 20mA) is generated at 50 bar. Then the span is 47.5 bar. Enter for SETUP - 62: "0004750" if decimals for span are two.</i> | | | |
| DECIMALS SPAN 63 | According to setting 62, the number of decimals for span has to be set. | | | |
| OFFSET 64 | Calculations are based on absolute pressures. The flow computer must know the measured pressure at minimum signal. (2.5 bar in above example) <ul style="list-style-type: none"> When using a gauge type pressure indicator enter an offset to compensate environmental pressure (e.g. air pressure, 1.013 bar) When working with a "fixed" pressure, enter the fixed line pressure here and make sure that the span is set to zero. Value to be entered: 0.000 - 9,999.999 unit. | | | |
| FILTER 65 | The analog output signal of a sensor does mirror the actual pressure. This signal is measured several times a second. The value measured is a "snap-shot" of the real temperature as it will be fluctuating. With the help of this digital filter a stable and accurate reading can be obtained while the filter level can be set to a desired value. The filter principle is based on three input values: the filter level (01-99), the last measured analog value and the last average value. The higher the filter level, the longer the response time on a value change will be. | | | |
| FILTER VALUE | RESPONSE TIME ON STEP CHANGE OF ANALOG VALUE. TIME IN SECONDS | | | |
| | 50% INFLUENCE | 75% INFLUENCE | 90% INFLUENCE | 99% INFLUENCE |
| 01 | filter disabled | filter disabled | filter disabled | filter disabled |
| 03 | 0.5 seconds | 1.0 seconds | 1.5 seconds | 3 seconds |
| 05 | 1.0 seconds | 1.8 seconds | 2.8 seconds | 5.3 seconds |
| 10 | 1.8 seconds | 3.5 seconds | 5.6 seconds | 11 seconds |
| 20 | 3.5 seconds | 7.0 seconds | 11 seconds | 23 seconds |
| 50 | 8.8 seconds | 17 seconds | 29 seconds | 57 seconds |
| 99 | 17 seconds | 34 seconds | 57 seconds | 114 seconds |
| CALIBRATE LOW 66 | With this setting it is possible to calibrate the input value for (0)4mA as the signal from the sensor might not be exact 4.0 mA (or 0.0 mA) at minimum pressure. This function will measure the real output value minimum signal. <ul style="list-style-type: none"> <i>Warning: be very sure that the offered signal is correct before the calibration is executed as this function has major influences on the accuracy of the system!</i> After pressing PROG, three settings can be selected: <ul style="list-style-type: none"> CALIBRATE: with this setting, the input will be calibrated with the actual "(0)4mA" value. After pressing enter, CAL SET will be displayed as soon as the calibration is completed. From that moment, the analog value must be more than the calibrated value before the signal will be processed. DEFAULT: with this setting, the manufacturer's value is re-installed. CAL SET: to select the last calibrated value. | | | |

Continued next page >>>

| | |
|------------------------------------|---|
| CALIBRATE HIGH 67 | <p>With this setting it is possible to calibrate the input value for 20mA as the signal from the sensor might not be exact 20.0 mA at maximum signal. This function will measure the real output value at maximum signal.</p> <ul style="list-style-type: none"> ▪ <i>Warning: be very sure that the offered signal is correct before the calibration is executed as this function has major influences on the accuracy of the system!</i> <p>After pressing PROG, three settings can be selected:</p> <ul style="list-style-type: none"> ▪ CALIBRATE: with this setting, the input will be calibrated with the actual "20mA" value. After pressing enter, CAL SET will be displayed as soon as the calibration is completed. From that moment, the analog value must be less than the calibrated value for a reliable measurement. ▪ DEFAULT: with this setting, the manufactures value is re-installed. ▪ CAL SET: to select the last calibrated value. |
|------------------------------------|---|

7 - FORMULA

| | |
|---|---|
| EQUATIONS TYPE 71 | <p>This display function describes the supplied equations. The supplied Model is the F126-P-EG. "EG" stands for Equations Gas - flow computer for corrected gas volume.</p> <p>The formula used:</p> $Q_{normal} = Q * (P / P_{normal}) * (T_{normal} / T) * (C_{normal} / C)$ <p>where</p> <ul style="list-style-type: none"> Q_{normal} = calculated volume at normal conditions Q = measured volume P = line pressure P_{normal} = normal pressure T_{normal} = normal temperature T = line temperature C_{normal} = normal compressibility factor C = compressibility |
| NORMAL TEMPERATURE 72 | <p>Enter here the reference temperature T_{normal} in degrees Kelvin (K). In most applications, the gas volume has to be calculated at 0°C which is 273,15 K.</p> |
| NORMAL PRESSURE 73 | <p>Enter here the reference pressure P_{normal} in the selected pressure unit. In most applications, the volume has to be calculated at 1.013 Bar.</p> |
| NORMAL COMPRESSABILITY FACTOR 74 | <p>Enter here the compressibility factor for the gas at reference conditions.</p> |
| COMPRESSABILITY FACTOR 75 | <p>Enter here the compressibility factor for the gas at operating conditions. The C factor indicates how different a "real" gas behaves from an "ideal" gas which exactly obeys the "general gas law" ($P \times V / T = \text{constant}$) where the C factor is 1. If SETUP 74 or 75 is set to zero: the compressibility factor is disabled.</p> |

8 - ANALOG OUTPUT

A linear analog (0)4-20mA or 0-10V signal is generated according to the flowrate with a 10 bits resolution. The settings for flowrate (SETUP - 2) influence the analog output directly. The relationship between rate and analog output is set with the following functions:

| | |
|--------------------------------------|---|
| DISABLE / ENABLE 81 | The analog output can be disabled. In case of a passive analog output type AP, 3.5mA will be generated if a power supply is available but the output is disabled. |
| MINIMUM FLOWRATE 82 | Enter here the flowrate at which the output should generate the minimum signal (0/4mA or 0V) - in most applications at flowrate "zero". The number of decimals displayed depend upon SETUP 23. The time and measuring units (L/min for example) are dependant upon SETUP 21 and 22 but are not displayed. |
| MAXIMUM FLOWRATE 83 | Enter here the flowrate at which the output should generate the maximum signal (20mA or 10V) - in most applications at maximum flow. The number of decimals displayed depend upon SETUP 23. The time and measuring units (L/min for example) are dependant upon SETUP 21 and 22 but can not be displayed. |
| CUT-OFF 84 | To ignore leakage of the flow for example, a low flow cut-off can be set as a percentage of the full range of 16mA, 20mA or 10V. When the flow is less than the required rate, the current will be the minimum signal (0/4mA or 10V). Examples: |

| 4mA (SETUP 82) | 20mA (SETUP 83) | CUT-OFF (SETUP 84) | REQUIRED RATE | OUTPUT |
|-------------------|--------------------|-----------------------|---------------------------------------|--------------------------------|
| 0 L/min | 100 L/min | 2% | $(100-0)*2\% = 2.0 \text{ L/min}$ | $4+(16*2\%) = 4.32\text{mA}$ |
| 20 L/min | 800 L/min | 3.5% | $(800-20)*3.5\% = 27.3 \text{ L/min}$ | $4+(16*3.5\%) = 4.56\text{mA}$ |

| | |
|------------------------------------|---|
| TUNE MIN / 4MA 85 | <p>The initial minimum analog output value is 0/4mA or 0V. However, this value might differ slightly due to external influences such as temperature for example. The 0/4mA or 0V value can be tuned precisely with this setting.</p> <ul style="list-style-type: none"> ▪ <i>Before tuning the signal, be sure that the analog signal is not being used for any application!</i> <p>After pressing PROG, the current will be about 4mA (or 0mA / 0V). The current can be increased / decreased with the arrow-keys and is <u>directly active</u>. Press ENTER to store the new value. Remark: the analog output value can be programmed "up-side-down" if desired, so 20mA at minimum flowrate for example!</p> |
|------------------------------------|---|

| | |
|-------------------------------------|---|
| TUNE MAX / 20MA 86 | <p>The initial maximum analog output value is 20mA (or 10V). However, this value might differ slightly due to external influences such as temperature for example. The 20mA value (or 10V) can be tuned precisely with this setting.</p> <ul style="list-style-type: none"> ▪ <i>Before tuning the signal, be sure that the analog signal is not being used for any application!</i> <p>After pressing PROG, the current will be about 20mA. The current can be increased / decreased with the arrow-keys and is <u>directly active</u>. Press ENTER to store the new value. Remark: the analog output value can be programmed "up-side-down" if desired, so 4mA at maximum flowrate for example!</p> |
|-------------------------------------|---|

Continued next page >>>



8 - ANALOG OUTPUT (CONTINUED)

| | | | | |
|----------------------|---|----------------------|----------------------|----------------------|
| FILTER 87 | This function is used to stabilize the analog output signal. The output value is updated every 0.1 second. With the help of this digital filter a more stable but less precise reading can be obtained. The filter principal is based on three input values: the filter level (01-99), the last analog output value and the last average value. The higher the filter level, the longer the response time on a value change will be. Below, several filter levels with their response times are indicated: | | | |
| FILTER VALUE | RESPONSE TIME ON STEP CHANGE OF ANALOG VALUE. TIME IN SECONDS | | | |
| | 50% INFLUENCE | 75% INFLUENCE | 90% INFLUENCE | 99% INFLUENCE |
| 01 | filter disabled | filter disabled | filter disabled | filter disabled |
| 02 | 0.1 second | 0.2 second | 0.4 second | 0.7 second |
| 03 | 0.2 second | 0.4 second | 0.6 second | 1.2 seconds |
| 05 | 0.4 second | 0.7 second | 1.1 seconds | 2.1 seconds |
| 10 | 0.7 second | 1.4 seconds | 2.2 seconds | 4.4 seconds |
| 20 | 1.4 seconds | 2.8 seconds | 4.5 seconds | 9.0 seconds |
| 30 | 2.1 seconds | 4 seconds | 7 seconds | 14 seconds |
| 50 | 3.5 seconds | 7 seconds | 11 seconds | 23 seconds |
| 75 | 5.2 seconds | 10 seconds | 17 seconds | 34 seconds |
| 99 | 6.9 seconds | 14 seconds | 23 seconds | 45 seconds |

9 - COMMUNICATION

| | |
|---|---|
| Functions as described below deal with hardware that are not part of the standard delivery. Programming of these functions does not have any effect if this hardware has not been installed. Consult Appendix C and the Modbus communication protocol description for a detailed explanation. | |
| BAUDRATE 91 | For external control, following communication speeds can be selected: 1200 - 2400 - 4800 - 9600 baud |
| BUS ADDRESS 92 | For communication purposes, a unique identity can be attributed to every F126-P-EG. This address can vary from 1-255. |
| MODE 93 | The communication is executed according Modbus protocol RTU mode. With OFF, the communication is disabled. |

A - OTHERS

| | |
|--------------------------------|--|
| TYPE OF MODEL A1 | For support and maintenance it is important to have information about the characteristics of the F126-P-EG. Your supplier will ask for this information in the case of a serious breakdown or to assess the suitability of your model for upgrade considerations. |
| VERSION SOFTWARE A2 | For support and maintenance it is important to have information about the characteristics of the F126-P-EG. Your supplier will ask for this information in the case of a serious breakdown or to assess the suitability of your model for upgrade considerations. |
| SERIAL NUMBER A3 | For support and maintenance it is important to have information about the characteristics of the F126-P-EG. Your supplier will ask for this information in the case of a serious breakdown or to assess the suitability of your model for upgrade considerations. |
| PASSWORD A4 | All SETUP-values can be password protected. This protection is disabled with value 0000 (zero). Up to and including 4 digits can be programmed, for example 1234. |
| TAGNUMBER A5 | For identification of the unit and communication purposes, a unique tagnumber of maximum 7 digits can be entered. |


4. INSTALLATION



4.1. GENERAL DIRECTIONS

- Mounting, electrical installation, start-up and maintenance of this instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.
- The F126-P-EG may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.
- Ensure that the measuring system is correctly wired up according to the wiring diagrams. Protection against accidental contact is no longer assured when the housing cover is removed or the panel cabinet has been opened (danger from electrical shock). The housing may only be opened by trained personnel.
- Take careful notice of the " Safety rules, instructions and precautionary measures " at the front of this manual.


4.2. INSTALLATION / SURROUNDING CONDITIONS

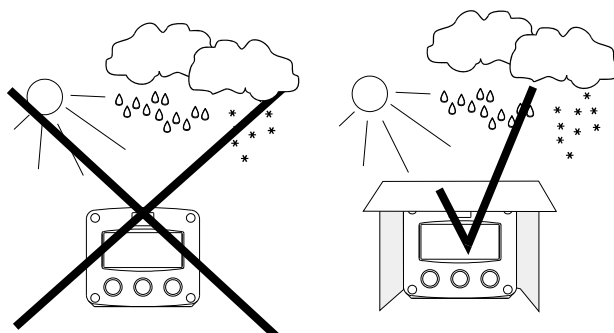

Take the relevant IP classification of the casing into account (see manufactures plate). Even an IP67 (NEMA 4X) casing should NEVER be exposed to strongly varying (weather) conditions.

When panel-mounted, the unit is IP65 (NEMA 4X)!

When used in very cold surroundings or varying climatic conditions, take the necessary precautions against moisture by placing a dry sachet of silica gel, for example, inside the instrument case.

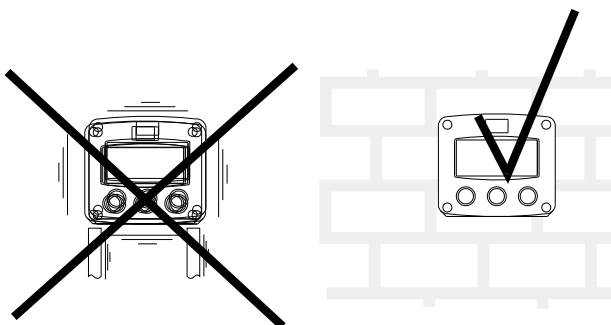

Mount the F126-P-EG on a solid structure to avoid vibrations.

4.3. DIMENSIONS- ENCLOSURE

Aluminum enclosures:



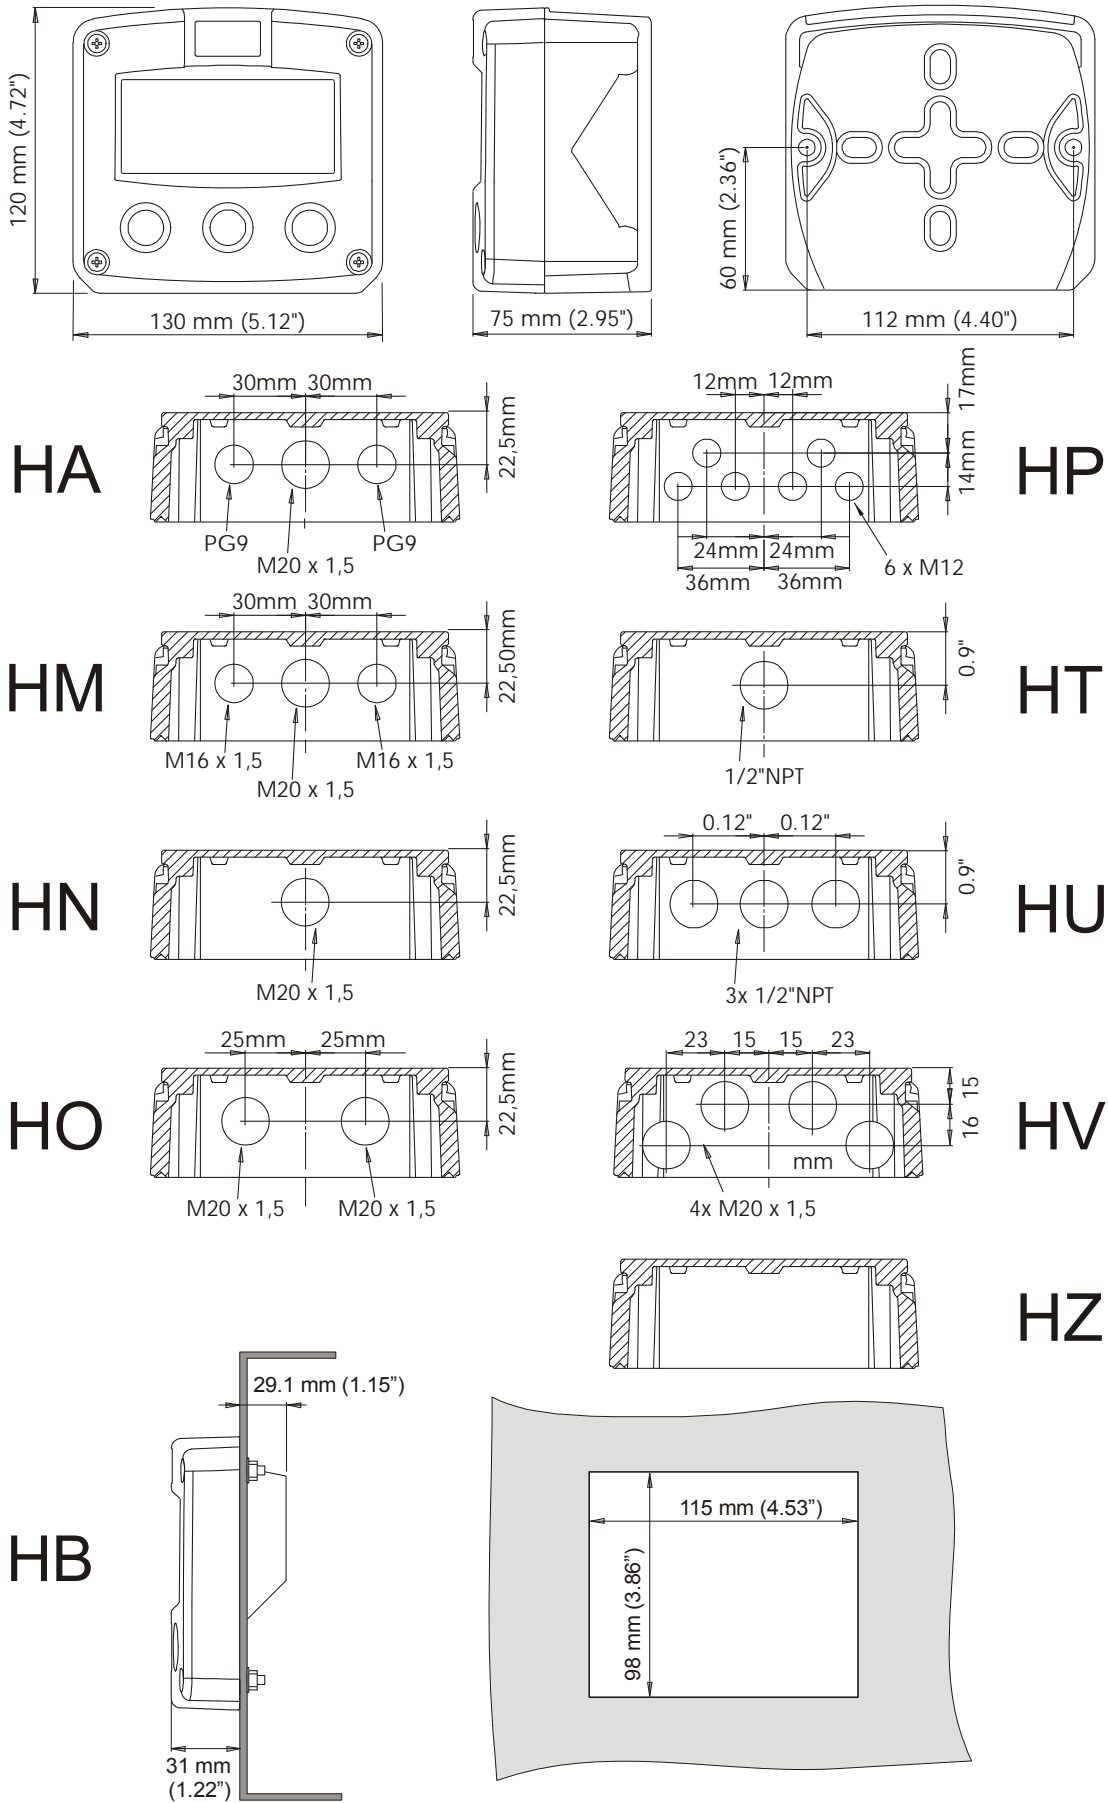


Fig. 5: Dimensions aluminum enclosures.



GRP enclosures:

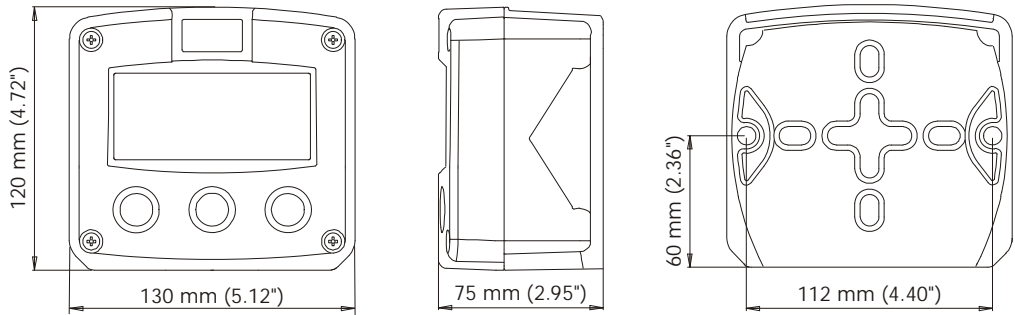

HK back box:
(flat bottom)


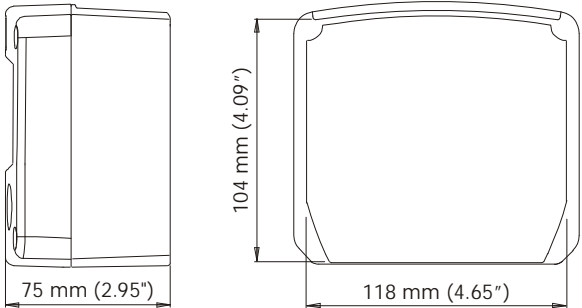


HD
HK

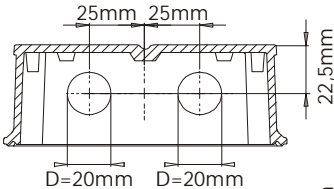 



HG

HE

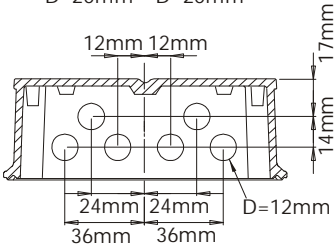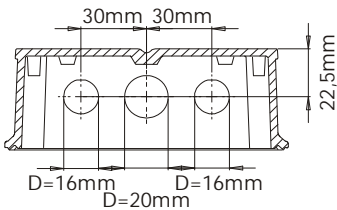

HH

HF

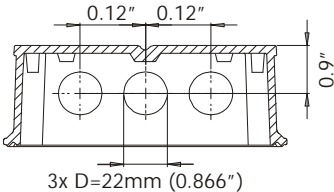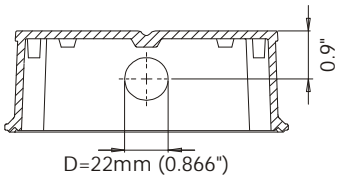

HJ

HC


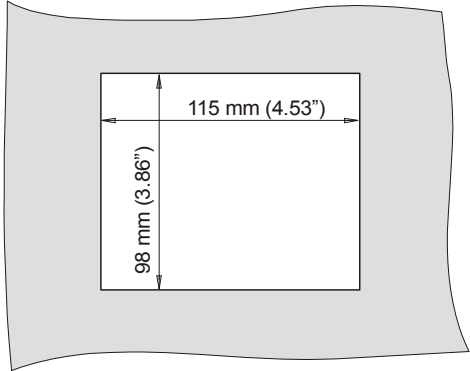


Fig. 6: Dimensions GRP enclosures.

4.4. INSTALLING THE HARDWARE

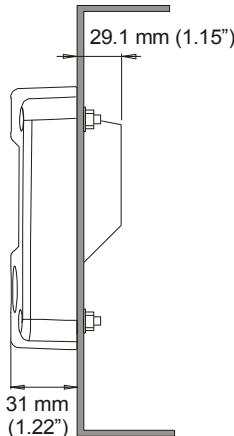

4.4.1. INTRODUCTION

- Electro static discharge does inflict irreparable damage to electronics! Before installing or opening the unit, the installer has to discharge himself by touching a well-grounded object.
- This unit must be installed in accordance with the EMC guidelines (Electro Magnetic Compatibility).



Aluminum enclosures

- When installed in an aluminum enclosure and a potentially explosive atmosphere requiring apparatus of equipment protection level Ga and Da, the unit must be installed such that, even in the event of rare incidents, an ignition source due to impact or friction sparks between the enclosure and iron/steel is excluded.
- Do ground the aluminum enclosure properly as indicated, if the F126-P-EG has been supplied with the 115-230V AC power-supply type PM. The green / yellow wire between the back-casing and removable terminal-block may never be removed.

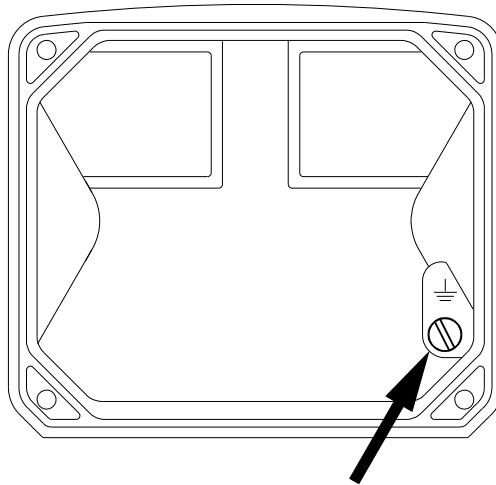


Fig. 7: Grounding aluminum enclosure with type PM 115-230V AC.

FOR INSTALLATION, PAY EMPHATIC ATTENTION TO:

- Separate cable glands with effective IP67 (NEMA4X) seals for all wires.
- Unused cable entries: ensure that you fit IP67 (NEMA4X) plugs to maintain rating.
- A reliable ground connection for both the sensor, and if applicable, for the metal casing.
- An effective screened cable for the input signal, and grounding of its screen to terminal 9 (GND) or at the sensor itself, whichever is appropriate to the application.

4.4.2. VOLTAGE SELECTION SENSOR SUPPLY

For Intrinsically Safe applications: read chapter 5.

Type PB / PC / PX (AP) - battery powered and output loop-powered applications:

Terminal 11 provides a limited supply voltage of 3.2 V DC (coil signals 1.2V) for the signal output of the flowmeter.



Note !

Note: This voltage **MAY NOT** be used to power the flowmeters electronics, converters etc, as it will not provide adequate sustained power ! All energy used by the flowmeters pick-up will directly influence the battery life-time. It is strongly advised to use a "zero power" pickup such as a coil or reed-switch when operating without external power. It is possible to use some low power NPN or PNP output signals, but the battery life time will be significantly reduced (consult your distributor).

Type PD / PF / PM: Sensor supply: 1.2 / 3.2V / 8.2V / 12V or 24 V DC:

With this option, a real power supply for the sensor is available. The flowmeter can be powered with 8.2 / 12 or 24 V DC.

Total power consumption PD: max. 50mA@24V and PF / PM: max. 400mA@24V.

The voltage is selected with the three switches inside the enclosure.



- **Warning:** be sure that all the leads to the terminals are disconnected from the unit when the internal plastic protection cover has been removed !
- **HIGH VOLTAGE 400V !! NEVER connect the mains power supply to the unit when the plastic protection cover has been removed !!!**

First, remove the terminal strip(s) after which the internal plastic cover can be removed. The switches are located in the top left corner (type PD) or on the right hand (type PF / PM) as indicated:

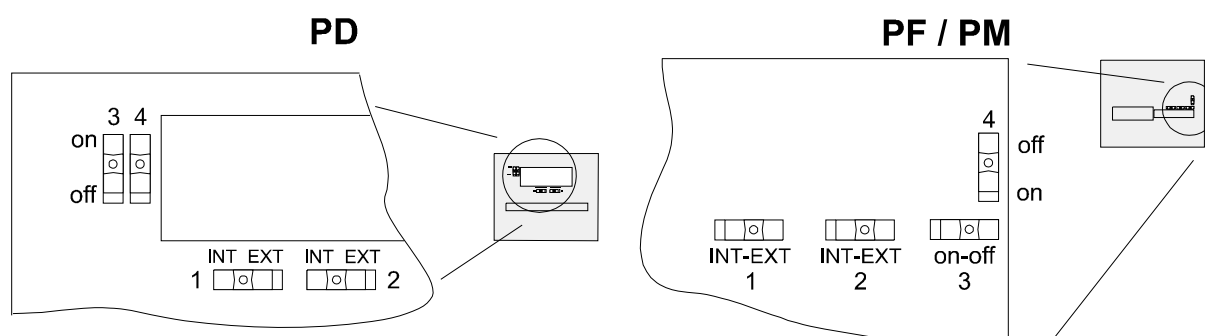


Fig. 8: Switch setting sensor supply voltage.

Switch positions

| SENSOR A | |
|----------|------------|
| SWITCH 1 | VOLTAGE |
| internal | 3.2 V DC |
| external | switch 3+4 |

| SENSOR B | |
|----------|------------|
| SWITCH 2 | VOLTAGE |
| internal | 3.2 V DC |
| external | switch 3+4 |

| VOLTAGE SELECTION | | |
|-------------------|----------|----------|
| SWITCH 3 | SWITCH 4 | VOLTAGE |
| on | on | 8.2 V DC |
| off | on | 12 V DC |
| on | off | 12 V DC |
| off | off | 23 V DC |

Function switch 1: voltage selection sensor A (flow) - terminal 11.

Function switch 2: voltage selection sensor B (temperature) - terminal 14.

Function switch 3+4: the combination of these switches determine the voltage as indicated. Do move switch 1 and / or switch 2 to the OFF position to enable the selected voltage with switch 3+4.

4.4.3. TERMINAL CONNECTORS

For Intrinsically Safe applications: read chapter 5.

The following terminal connectors are available:

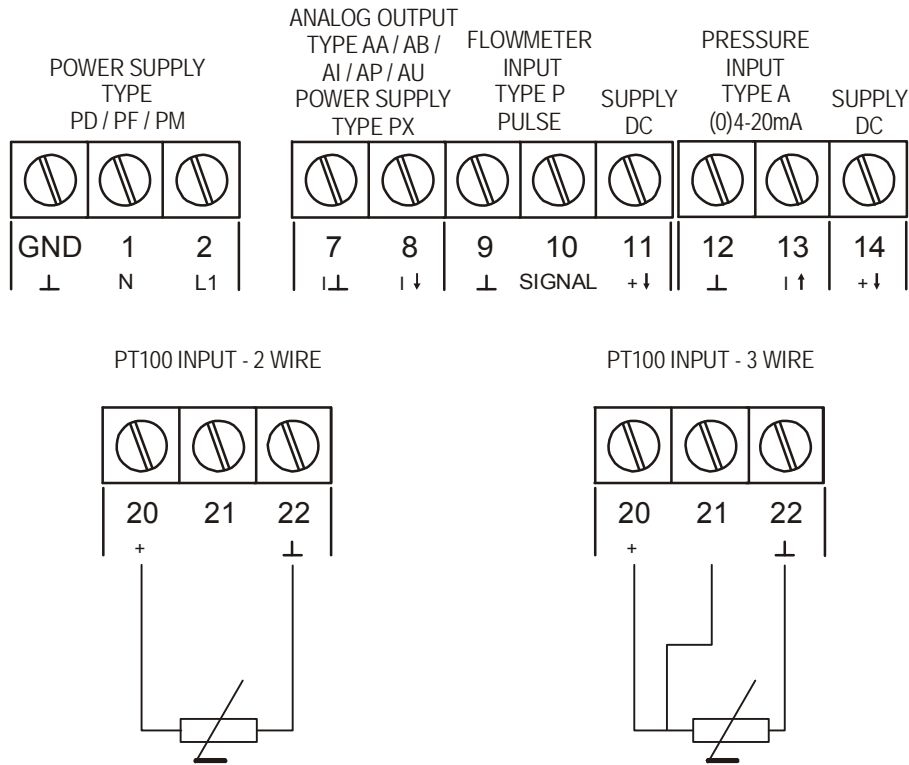


Fig. 9 Overview terminal connectors F126-P-EG-IA-TP and most options.

REMARKS TERMINAL CONNECTORS:

Terminal GND- 01- 02: Power Supply - only available with type PD / PF or PM:

| TYPE | SENSOR SUPPLY | Terminal | | | backlight | TYPE AA | TYPE AU | Type OA | Type OR |
|----------------------|---|----------|----|----|-----------|---------|---------|---------|---------|
| | | GND | 01 | 02 | | | | | |
| PD 8-24V AC | 8,2 / 12 / 24V max. 50mA | | AC | AC | ◇ | ◇ | ◇ | | |
| PD 8-30V DC | 8,2 / 12 / 24V max. 50mA | L- | L+ | | ◇ | ◇ | ◇ | | |
| PF 24V AC ± 15% | 8,2 / 12 / 24V max. 400mA | | AC | AC | ◇ | ◇ | | ◇ | |
| PF 24V DC ± 15% | 8,2 / 12 / 24V max. 400mA | L- | L+ | | ◇ | ◇ | | ◇ | |
| PM 115-230V AC ± 15% | 8,2 / 12 / 24V max. 400mA | EARTH | AC | AC | ◇ | ◇ | ◇ | ◇ | |
| Note PD | do not use a AC autotransformer (Spartrafo) without a galvanic isolation. | | | | | | | | |
| Note PF / PM | The total consumption of the sensors and outputs may not exceed 400mA@24V | | | | | | | | |

◇=option



Note !

Note: for power supply type PX: please read Terminal 07-08 !

Terminal 07-08; basic POWER SUPPLY - type PX - output loop powered:

Connect an external power supply of 8-30VDC to these terminals or a 4-20mA loop.

Do connect the "-" to terminal 7 and the "+" to terminal 8. When power is applied to these terminals, the (optional) internal battery will be disabled / enabled automatically to extend the battery life time.



Caution! *Only valid for standard passive output type AP!*

Terminal 07-08 analog output (SETUP 8) :


An analog output signal proportional to the flowrate is available as standard.

Type AA:

An active 4-20mA signal proportional to the flowrate is available with this option.


When the output is disabled, a 3.5mA signal will be generated on these terminals.

Max. driving capacity 1000 Ohm @ 24VDC. (Requires power supply type PD / PF / PM).

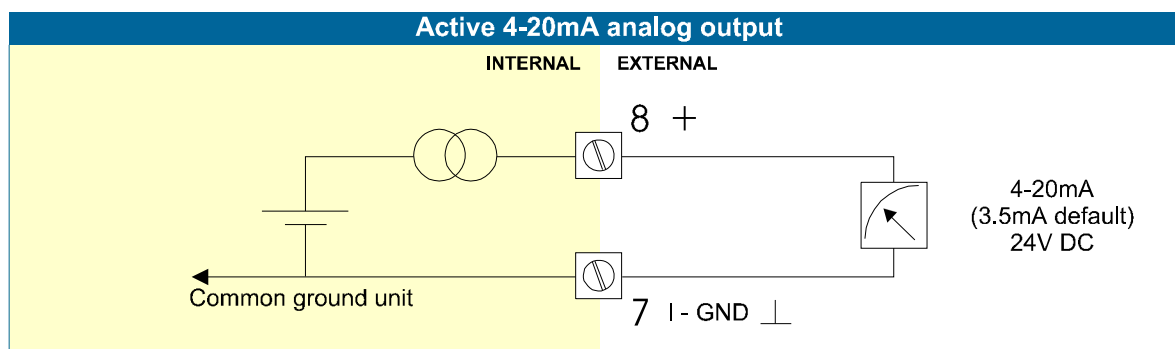**Type AB:**

An active 0-20mA signal proportional to the flowrate is available with this option.

Max. driving capacity 1000 Ohm @ 24VDC. (Requires power supply type PD / PF / PM).

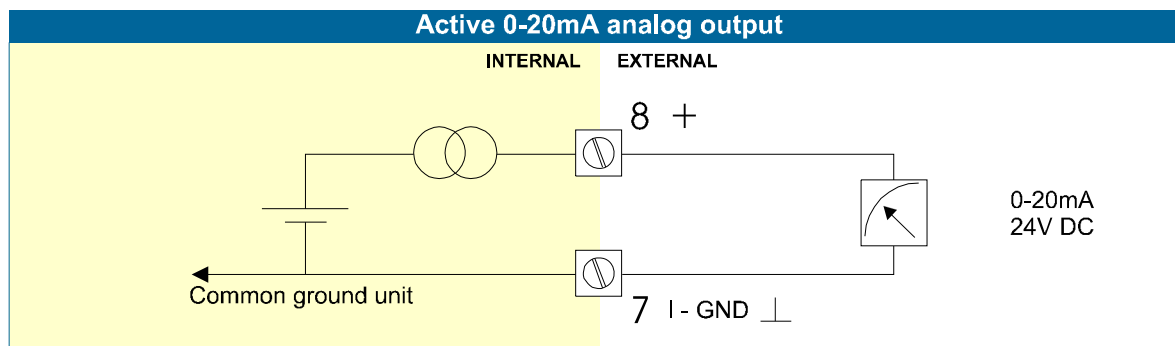
**Type AF:**

For the Intrinsically Safe floating 4-20mA signal: please read Chapter 5.

Type AI:


An isolated 4-20mA signal proportional to the flowrate is available with this option. When the output is disabled, a 3.5mA signal will be generated on these terminals. Max. driving capacity 1000 Ohm @ 30VDC.

This option can be used with a battery powered unit but the life time of the battery is about 2 -3 years.

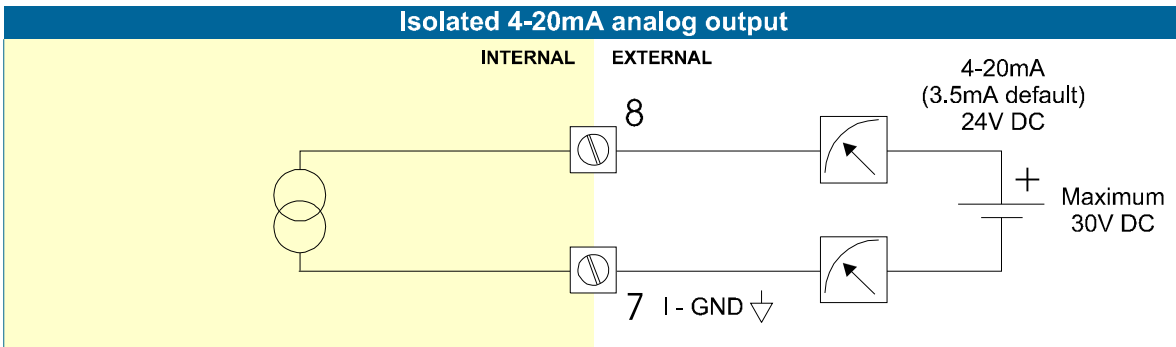


Type AP:

A passive 4-20mA signal proportional to the flowrate is available with this option. When a power supply is connected but the output is disabled, a 3.5mA signal will be generated. Max. driving capacity 1000 Ohm. This output does loop power the unit as well (type PX).

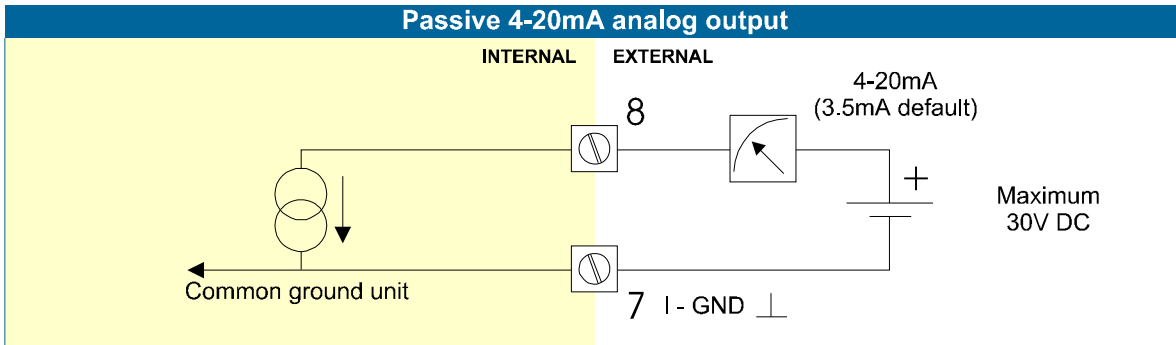

Type AU:

A 0-10VDC signal proportional to the flowrate is available with this option. Max. load 10mA @ 10VDC. (Requires power supply type PD / PF / PM).

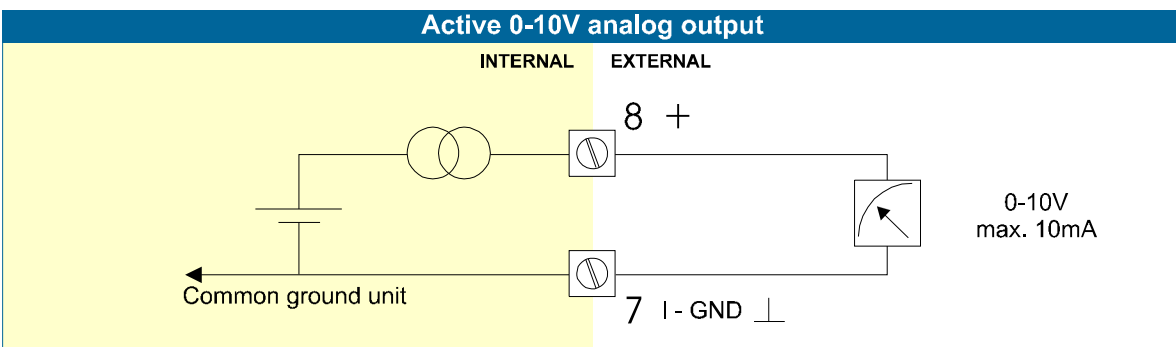

Terminal 09-11; Flowmeter input:

Three basic types of flowmeter signals can be connected to the unit: pulse, active pulse or sine-wave (coil). The screen of the signal wire must be connected to the common ground terminal 09 (unless earthed at the sensor itself).

The maximum input frequency is approximately 10 kHz (depending on the type of signal). The input signal type has to be selected with the correct SETUP-function (read par. 3.2.3.)

Sine-wave signal (Coil):


The F126-P is suitable for use with flowmeters which have a coil output signal. Two sensitivity levels can be selected with the SETUP-function:

COIL LO: sensitivity from about 120mVp-p.


COIL HI: sensitivity from about 20mVp-p.

Type ZF offers for setting COIL HI : sensitivity from about 10mVp-p.

Type ZG offers for setting COIL HI : sensitivity from about 5mVp-p.

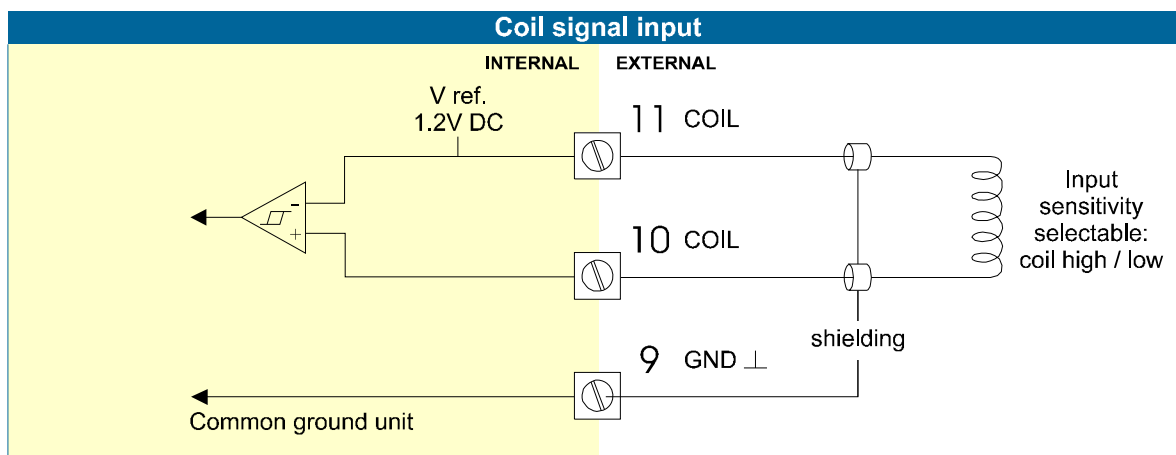**Pulse-signal NPN / NPN-LP:**


The F126-P is suitable for use with flowmeters which have a NPN output signal. For reliable pulse detection, the pulse amplitude has to go below 1.2V. Signal setting NPN-LP employs a low-pass signal noise filter, which limits the maximum input frequency - read par. 3.2.3.

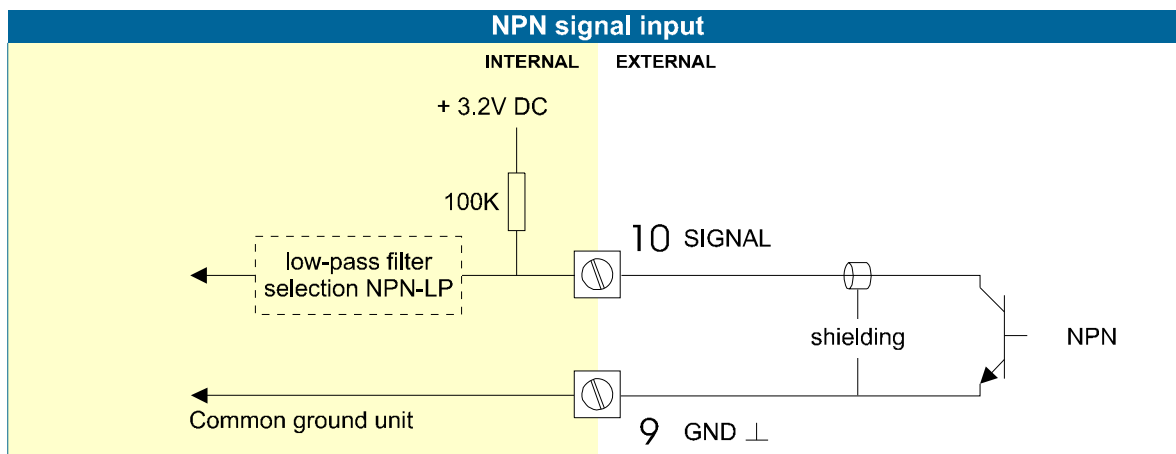

Pulse-signal PNP / PNP-LP:

The F126-P is suitable for use with flowmeters which have a PNP output signal. 3.2V is offered on terminal 11 which has to be switched by the sensor to terminal 10 (SIGNAL). For a reliable pulse detection, the pulse amplitude has to go above 1.2V. Signal setting PNP-LP employs a low-pass signal noise filter, which limits the maximum input frequency - read par. 3.2.3.


A sensor supply voltage of 8.1, 12 or 24V DC can be provided with power supply type PD, PF, PM. For a signal detection level of 50% of the supply voltage: please refer to "active signals".

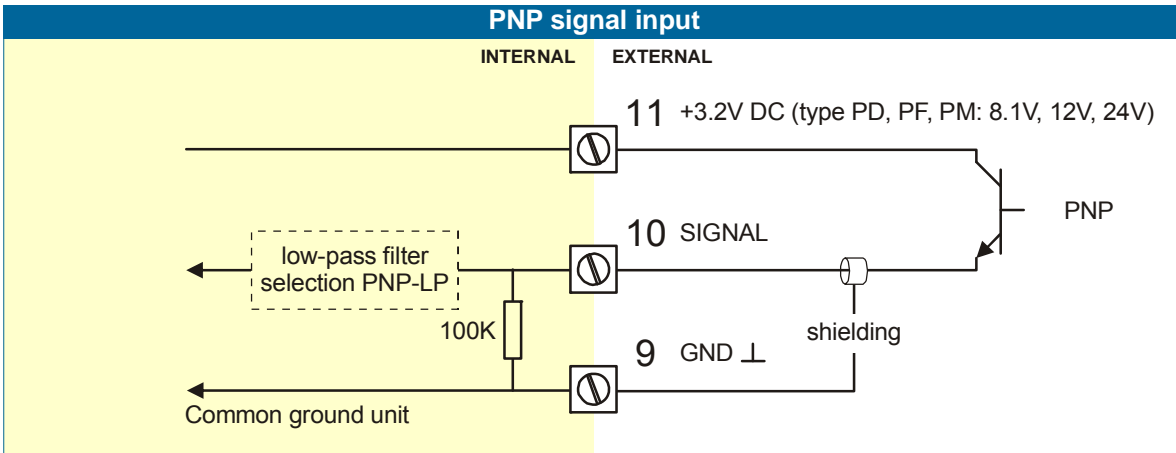

Active signals 8.1V - 12V and 24V:


If a sensor gives an active signal, please read par. 3.2.3. The detection levels are 50% of the selected supply voltage; approximately 4V (ACT_8.1) or 6V (ACT_12) or 12V (ACT_24).

Active signal selection may well be desired in the case of power supply type PD, PF, PM being supplied for sensor supply.

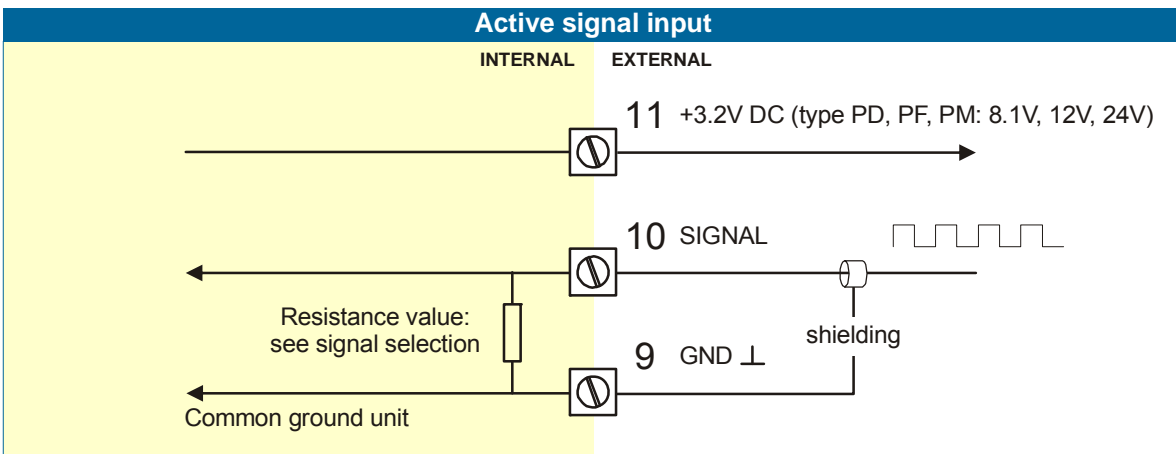


Reed-switch:

The F126-P is suitable for use with flowmeters which have a reed-switch. To avoid pulse bounce from the reed-switch, it is advised to select REED LP - low-pass filter (read par. 3.2.3.)

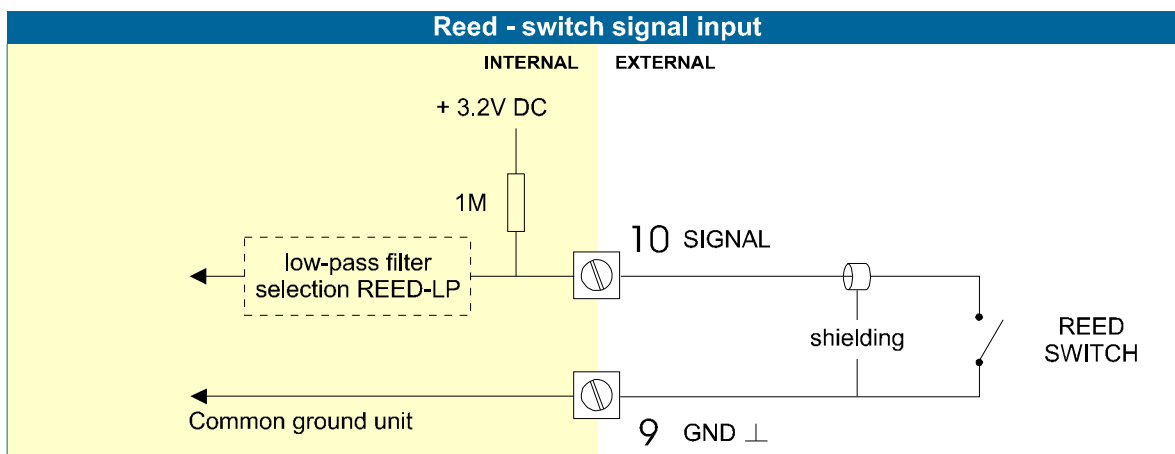


NAMUR-signal:

The F126-P is suitable for flowmeters with an Namur signal. The standard F126-P is not able to power the Namur sensor, as an external power supply for the sensor is required. However, a 8.2V sensor supply voltage (terminal 11) can be provided with power supply type PD, PF, PM.

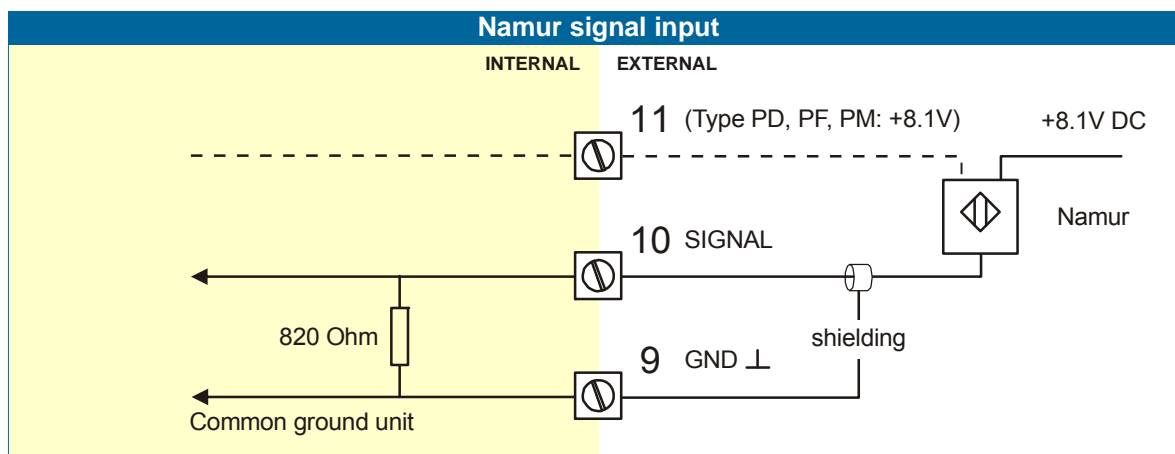

Terminal 12-13; Pressure input (0)4-20mA:

The F126-P-EG-IA-TP requires a (0)4-20mA signal for pressure which will be processed 4 times a second with a 14 bits accuracy. The input is not isolated.


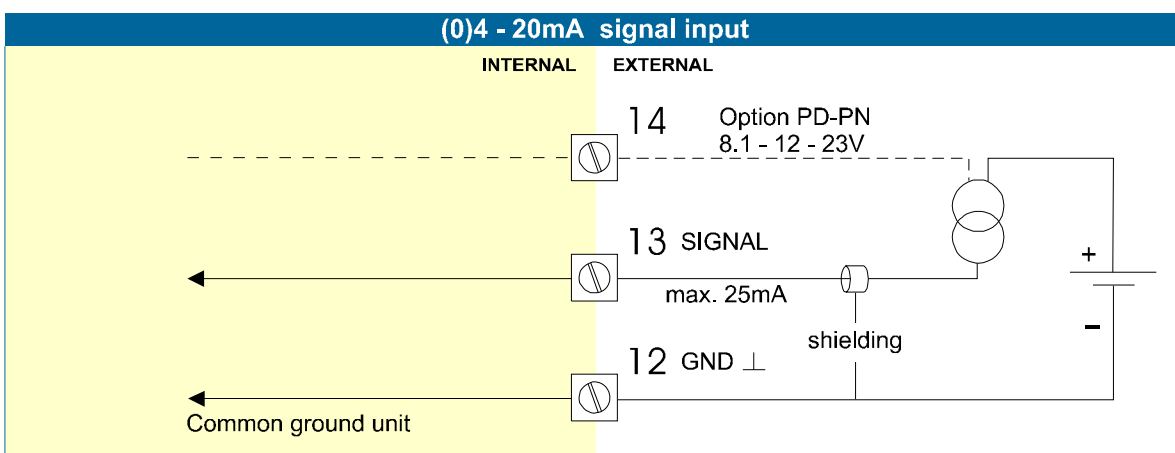


Terminal 20-22; Temperature input TP - PT100:

Two types of PT100 elements can be connected to the F126-P-EG-IA-TP: 2 or 3-wire.

PT100 INPUT - 2 WIRE

PT100 INPUT - 3 WIRE

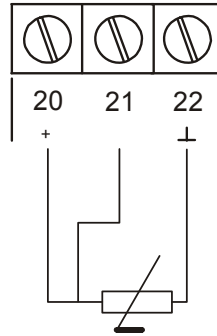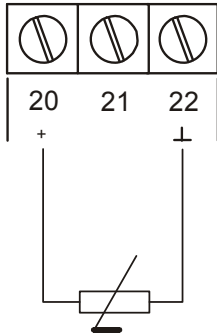

Terminal 26-31: type CB / CH / CI / CT - communication RS232 / RS485 / TTL (option)

- Full serial communications and computer control in accordance with RS232 (length of cable max. 15 meters) or RS485 (length of cable max. 1200 meters) is possible.
- Read the Modbus communication protocol and Appendix C.

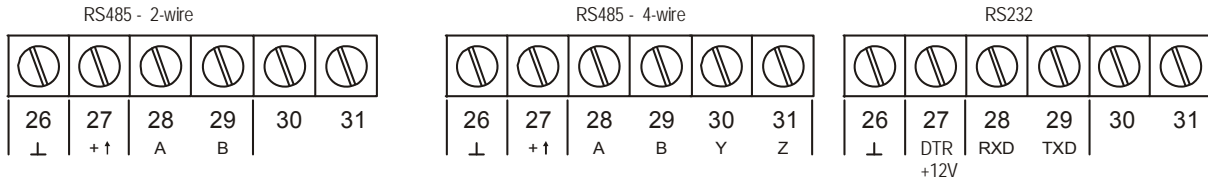


Fig. 10: Overview terminal connectors communication option.

When using the RS232 communication option, terminal 27 is used for supplying the interface. Please connect the DTR (or the RTS) signal of the interface to this terminal and set it active (+12V). If no active signal is available it is possible to connect a separate supply between terminals 26 and 27 with a voltage between 8V and 24V.

Terminal 26-31: backlight - type ZB (option):



Note !

Note: if the unit is supplied with a power supply type PD, PF or PM, the backlight supply is integrated, so the text following is not applicable.

To power the backlight, provide a 12-24V DC to terminal 26 (-) and 27 (+). An external trimmer 1kOhm trimmer can be used to tune the brightness of the backlight, or if not desired, a short-cut between these terminals have to be made which will result in the maximum brightness.



Note !

Note: Intrinsically Safe as well as 4-wire RS485 communication is not possible in combination with type ZB, except if a PD, PF or PM power supply is being used.

Option type ZB: adjustable backlight

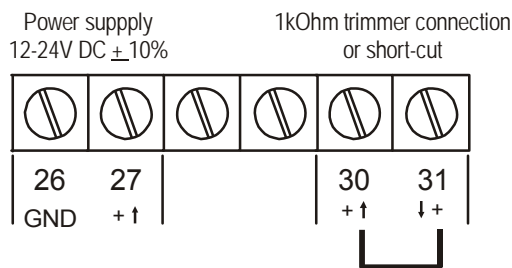


Fig. 11: Overview terminal connectors backlight option.

5. INTRINSICALLY SAFE APPLICATIONS

5.1. GENERAL INFORMATION AND INSTRUCTIONS



Cautions

- Mounting, electrical installation, start-up and maintenance of this device may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.
- This device may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.
- Ensure that the measuring system is correctly wired up according to the wiring diagrams. Protection against accidental contact is no longer assured when the housing cover is removed or the cabinet has been opened (danger of electric shock). The housing may only be opened by trained personnel.
- To maintain the degree of protection of at least IP65 in accordance with IEC 60529, certified cable entries in accordance with IEC 61241-0 must be used and correctly installed. Unused openings must be closed with suitable blanking elements.
- When the enclosure of the Indicator is made of aluminum alloy, when used in a potentially explosive atmosphere requiring apparatus of equipment protection level Ga and Da, the unit must be installed such that, even in the event of rare incidents, an ignition source due to impact or friction sparks between the enclosure and iron/steel is excluded.
- Take careful notice of the " Safety rules, instructions and precautionary measures " in the front of this manual.



Safety Instructions

- When two or more active intrinsically safe circuits are connected to the indicator, in order to prevent voltage and/or current addition, applicable to the external circuits, precautions must be taken to separate the intrinsically safe circuits in accordance with IEC 60079-11.
- For the combined connection of the different supply, input and output circuits, the instructions in this manual must be observed.
- From the safety point of view the circuits shall be considered to be connected to earth.
- For installation under ATEX directive: this intrinsically safe device must be installed in accordance with the ATEX directive 94/9/EC and the product certificate KEMA 03ATEX1074 X.
- For installation under IECEx scheme: this intrinsically safe device must be installed in accordance with the product certificate IECEx DEK 11.0042X.
- Exchange of Intrinsically Safe battery FWLiBAT-0xx with certificate number KEMA 03ATEX1071 U or IECEx KEM 08.0005U is allowed in Hazardous Area. See paragraph 5.4. for detailed battery replacement instructions.




Please Note

- Certificates, safety values and declaration of compliance can be found in the document named: "Fluidwell F1...-XI - Documentation for Intrinsic Safety".
- Special conditions for safe use mentioned in both the certificate and the installation instructions must be observed for the connection of power to both input and / or output circuits.
- When installing this device in hazardous areas, the wiring and installation must comply with the appropriate installation standards for your industry.
- Study the following pages with wiring diagrams per classification.

Label information (inside and outside the enclosure)


Indicated labels on the back cover (below) and on the inside cover (right) show the type labels for intrinsically safe certified units.

For details on usage see the separate “Fluidwell F1...-XI Documentation for Intrinsic Safety”.

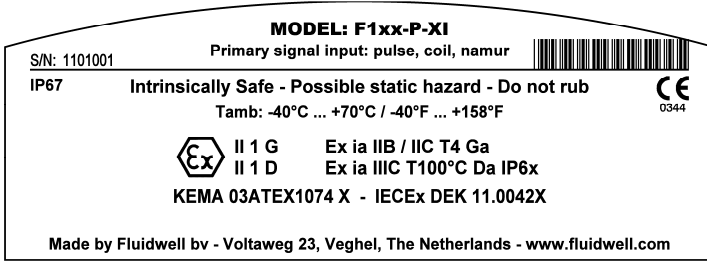

Serial number and year of production

This information can be looked-up on the display: See setup function (par. 3.2.2.) for details.

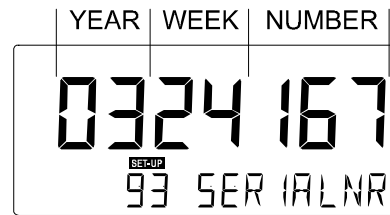

5.2. TERMINAL CONNECTORS INTRINSICALLY SAFE APPLICATIONS



The unit is classified as group IIB/IIIC by default.

Classification of the unit as group IIC is only possible under the following conditions:

- The indicator is either supplied by
 - the internal supply (option -PC); or
 - the external supply connected to terminals 0 and 1 (option -PD); or
 - the circuit supply connected to terminals 7 and 8 (option -AP);
 The maximum values for any of those circuits are those as defined for group IIB/IIIC;
- No other active external intrinsically safe circuits may be connected to the indicator, with exception of circuits connected to terminals 3 and 4 and/or terminals 5 and 6; the maximum values for any of those circuits are those as defined for group IIB/IIIC

Terminal connectors F126-P-EG-IA-TP-XI:

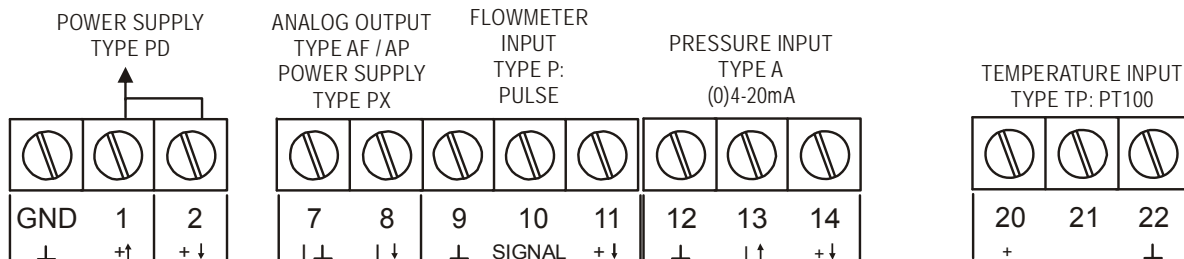


Fig. 12: Overview of Intrinsically Safe terminal connectors and options.


Explanation Intrinsically Safe options:

Type AF - Intrinsically Safe floating 4-20mA analog output - Terminal 7-8:

A floating 4-20mA signal proportional to the flowrate is available with this option. When the output is disabled, a 3.5mA signal will be generated. Max. driving capacity 1000 Ohm @ 30V DC.



Note! It is required to link the minus from the analog output - terminal 7 - with a ground terminal of the unit; terminal: GND, 3, 5, 9, 12 or 15.

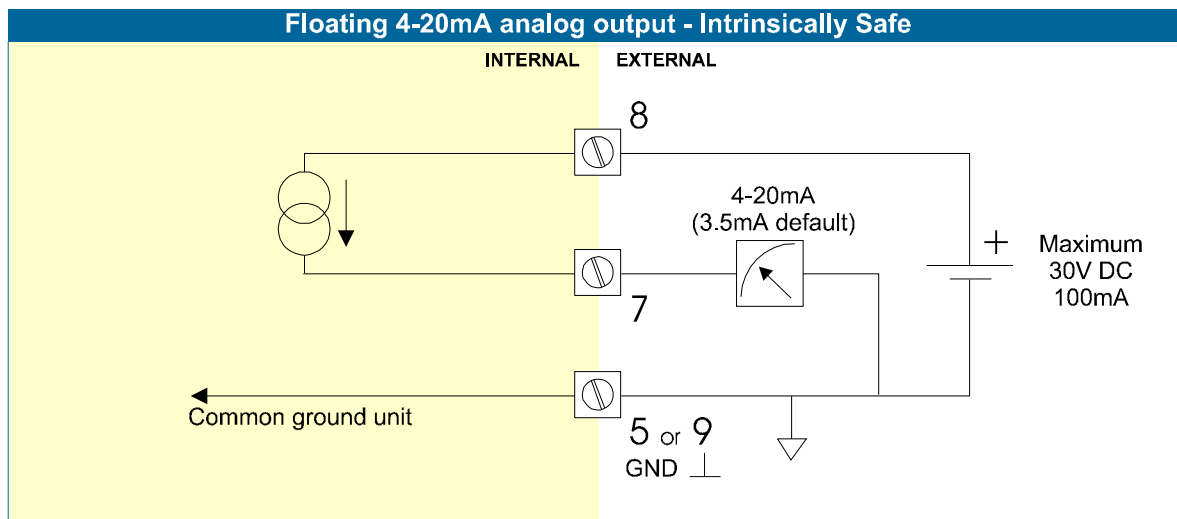

Type PD - Intrinsically Safe power supply and sensor supply - Terminal GND- 01 and 11.

| TYPE | SENSOR SUPPLY | Terminal | | |
|------|----------------------------|------------|----|---|
| | | GND | 01 | 02 |
| PD | Input voltage: 8-30V DC | 3,2 - 8,1V | L- | L+ internally linked with terminal 01. |

Terminal 02: this terminal offers the same voltage as connected to terminal 01.
Terminal 11 and 14: these terminals offers a 3.2V or 8.1V to power the sensor.
This voltage is selected with the switch(es) inside the enclosure. First, remove the terminals after which the internal plastic cover can be removed.

| Switch position terminal 11 | | Switch position no function | |
|-----------------------------|----------|-----------------------------|----------|
| SWITCH 1 | VOLTAGE | SWITCH 2 | |
| on | 8.1 V DC | on | 8.1 V DC |
| off | 3.2 V DC | off | 3.2 V DC |

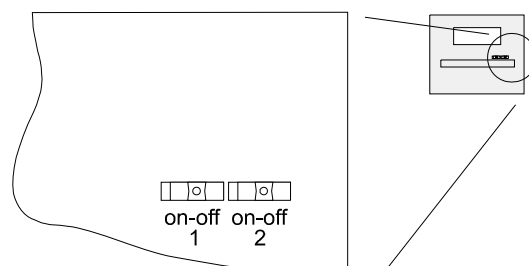


Fig. 13: Switch position voltage selection type PD-XI..

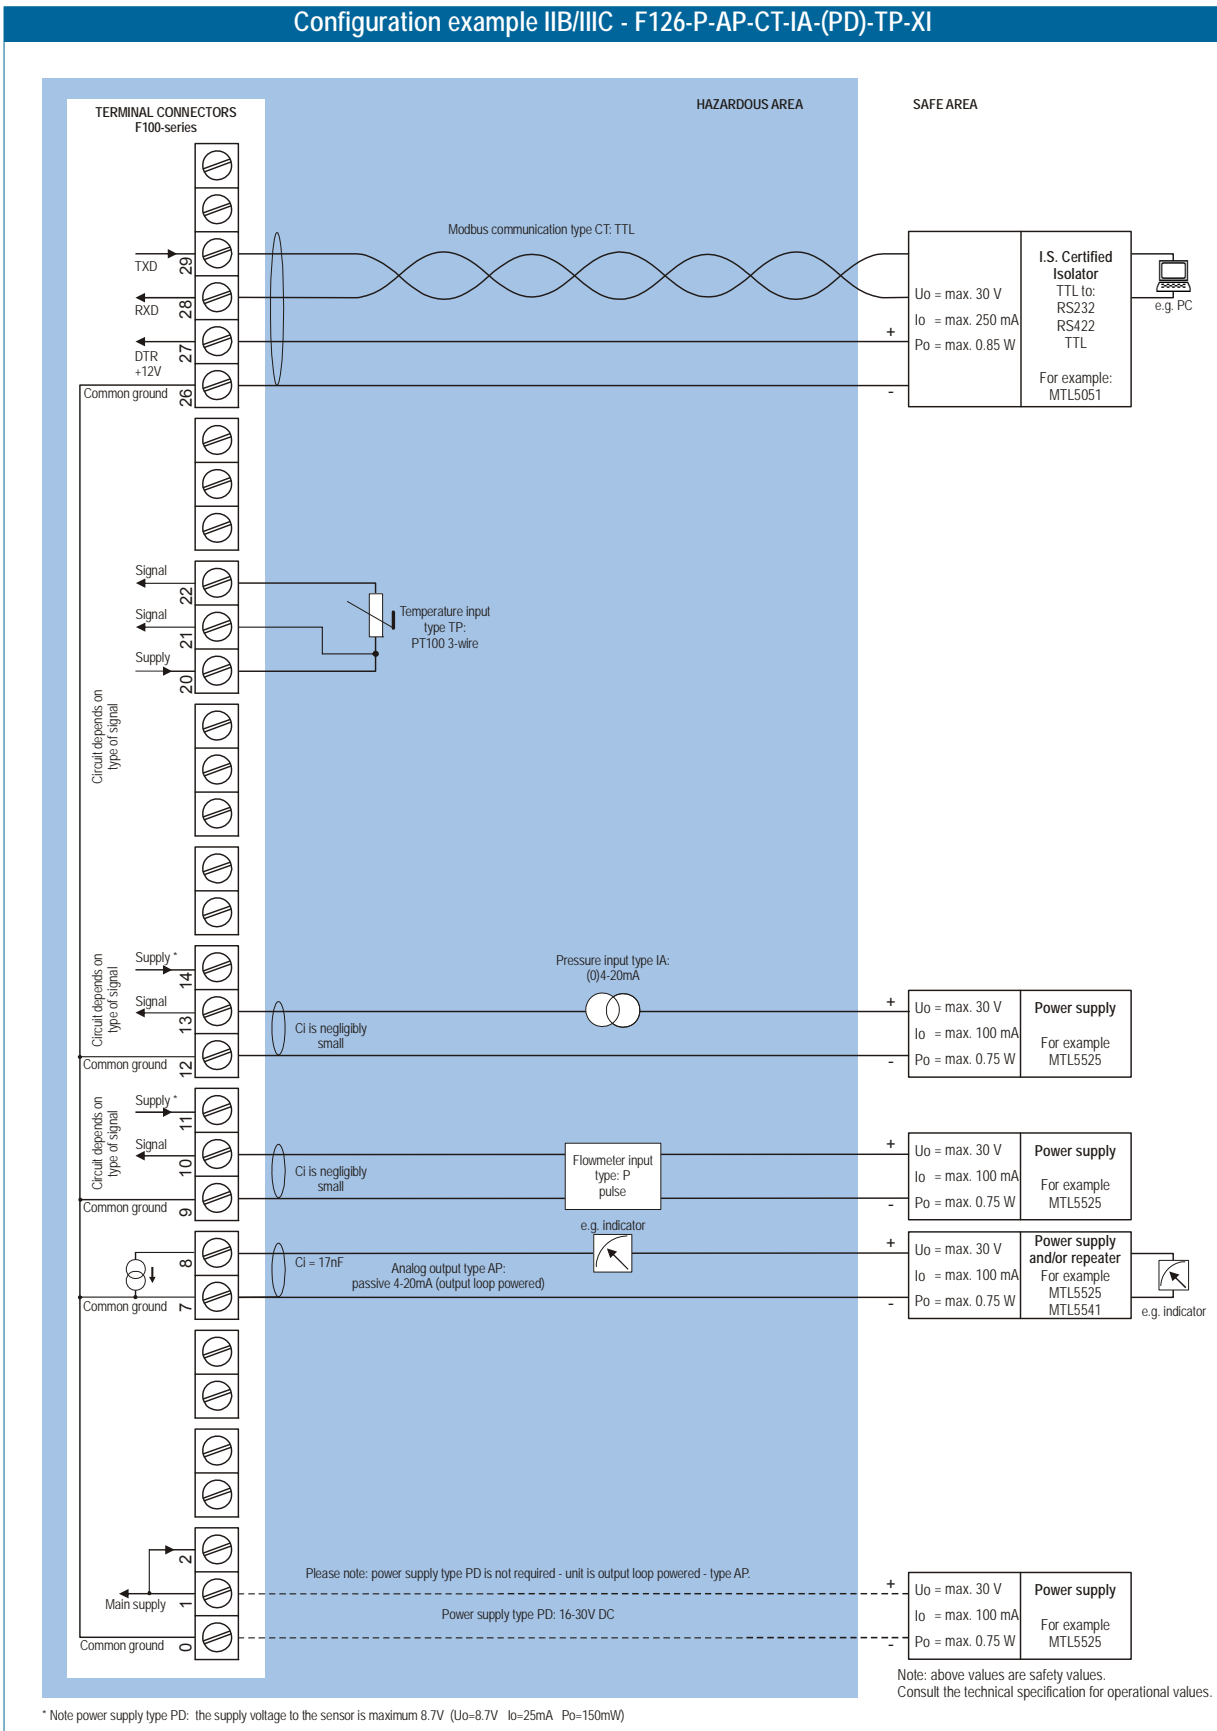


Fig. 14: Configuration example 1 Intrinsically Safe

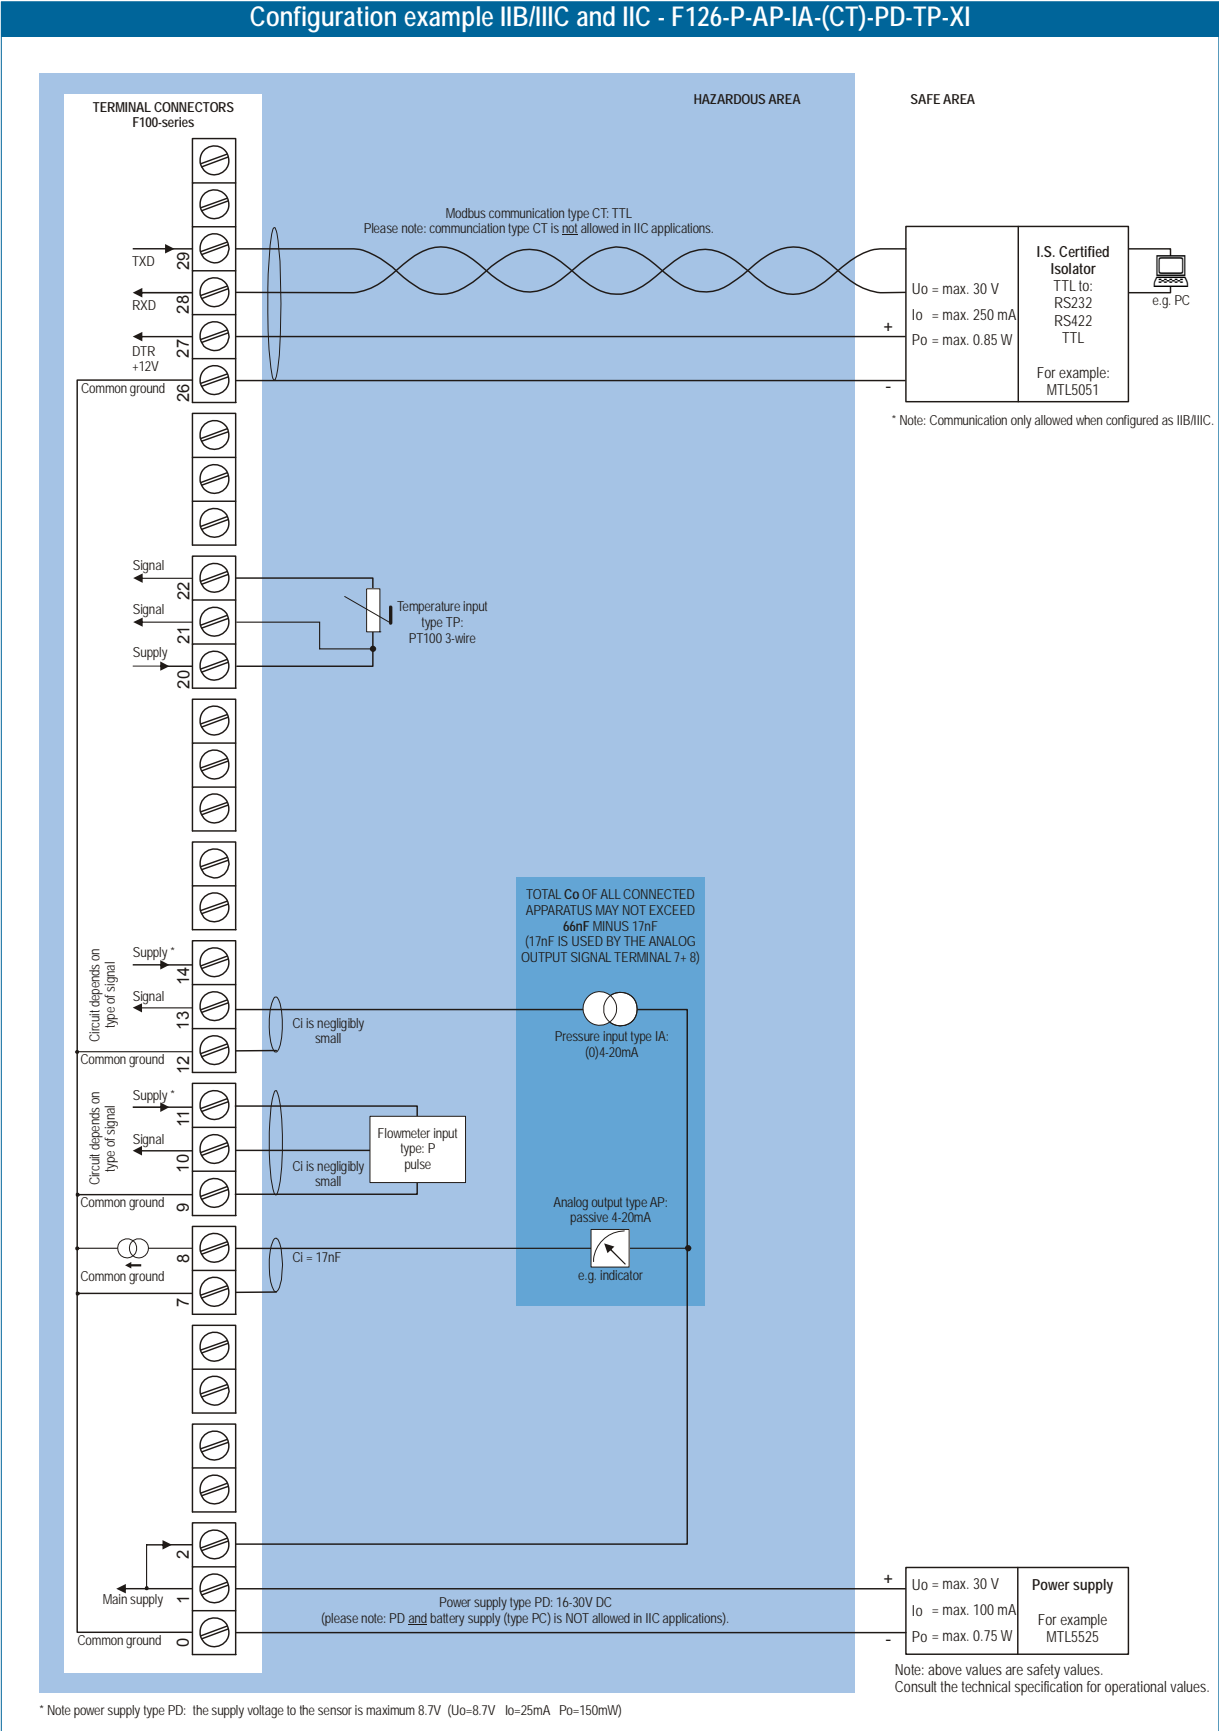


Fig. 15: Configuration example 2 Intrinsically Safe

5.4 BATTERY REPLACEMENT INSTRUCTIONS



Safety Instructions

- **Fire, explosion or severe burns may result if mistreated.** Do not recharge, crush, disassemble, incinerate, heat above 100°C (212°F) or expose contents to water.
- Mounting, electrical installation, start-up and maintenance of this device may only be carried out by trained personnel authorized by the plant operator. Personnel must read and understand this instruction before carrying out the replacement procedure.
- Always follow the instructions listed in the supplied Battery Replacement Instruction Sheet.
- Batteries pose an environmental hazard. Return used batteries to a recycling point.







Safety instructions for hazardous areas

- Verify the correct battery is supplied: **Only batteries with indicated Ex label are certified for replacement and use in hazardous areas.** Batteries for use in safe areas have no Ex label. **DO NOT EXCHANGE:** Using the wrong type of battery can pose a SERIOUS RISK.
- **For use in hazardous areas Fluidwell recommends FW-LiBAT batteries (manufactured by Fluidwell bv) only.**

Battery replacement procedure



Depending on the production batch, one of two visualized Intrinsically Safe certified battery types may have been installed in the unit. They are interchangeable.
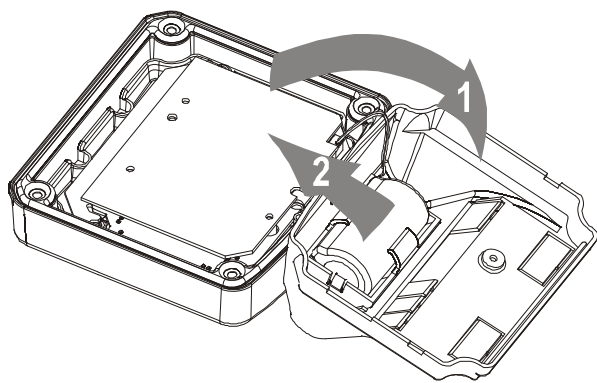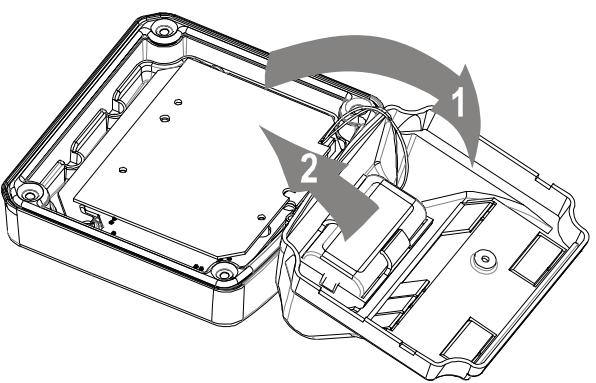
| FW-LiBAT-001 battery | FW-LiBAT-021 battery |
|--|---|
|  <p style="font-size: small;">KEMA 03ATEX1071 U IECEX KEM 08.0005U</p> <p>Fluidwell bv Intrinsically Safe Battery Part. no.: FW-LiBAT-001</p> <p style="font-size: x-small;">U_o = 3.9V Co = 100µF I_o = 35mA Lo = 25mH Po = 35mW Ta = -40°C...+70°C</p> <p style="text-align: center; font-weight: bold;">Primary Lithium Battery</p> <p style="text-align: center; font-size: x-small;">Only replace with Fluidwell I.S. battery pack!</p> |  <p style="font-size: small;">KEMA 03ATEX1071 U IECEX KEM 08.0005U</p> <p>Fluidwell bv Intrinsically Safe Battery Part. no.: FW-LiBAT-021</p> <p style="font-size: x-small;">U_o = 3.9V Co = 100µF I_o = 35mA Lo = 25mH Po = 35mW Ta = -40°C...+70°C</p> <p style="text-align: center; font-weight: bold;">Primary Lithium Battery</p> <p style="text-align: center; font-size: x-small;">Only replace with Fluidwell I.S. battery pack!</p> |
|  |  |

1. To replace the battery, open the unit to gain access to the back inside cover of the unit.
2. Unplug the field connectors from the back inside of the unit.
3. Remove the screw that holds the plastic inside cover.
4. Open the cover and unplug the battery connector.
5. Remove the battery from the inside of the plastic cover. *Do not remove the battery clip!*
6. Install the new battery and re-assemble the unit in reverse order.
7. Start-up the unit

6. Maintenance

6.1. GENERAL DIRECTIONS



- *Mounting, electrical installation, start-up and maintenance of the instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.*
- *The F126-P-EG may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.*
- *Ensure that the measuring system is correctly wired up according to the wiring diagrams. Protection against accidental contact is no longer assured when the housing cover is removed or the panel cabinet has been opened (danger from electrical shock). The housing may only be opened by trained personnel.*
- *Take careful notice of the " Safety rules, instructions and precautionary measures " in the front of this manual.*

The F126-P-EG does not require special maintenance unless it is used in low-temperature applications or surroundings with high humidity (above 90% annual mean). It is customers responsibility to take all precautions to dehumidify the internal atmosphere of the F126-P-EG in such a way that no condensation will occur, for example by placing dry silica-gel in the casing just before closing the enclosure.

Furthermore, is required to replace or dry the silica gel from time to time as advised by the silica gel supplier.

Battery life-time:

It is influenced by several issues as:

- Input frequency: the higher the frequency the shorter the battery life-time.
- Display update: fast display update has major influence; SETUP 51.
- Pulse output and communication.
- Low temperatures; the available power will be less due to battery chemistry.



Note !

Note: *It is strongly advised to disable unused functions.*

Check periodically:

- The condition of the casing, cable glands and front panel.
- The input/output wiring for reliability and aging symptoms.
- The process accuracy. As a result of wear and tear, re-calibration of the flowmeter might be necessary. Do re-enter any subsequent Span alterations.
- The indication for low-battery.
- Clean the casing with soapy-water. Do not use any aggressive solvents as these might damage the coating.

6.2. REPAIR

This product cannot be repaired by the user and must be replaced with an equivalent certified product. Repairs should only be carried out by the manufacturer or his authorized agent.

APPENDIX A: TECHNICAL SPECIFICATION

GENERAL

| Display | |
|--------------|--|
| Type | High intensity reflective numeric and alphanumeric LCD, UV-resistant. |
| Digits | Seven 17mm (0.67") and eleven 8mm (0.31"). Various symbols and measuring units. |
| Refresh rate | User definable: 8 times/sec - 30 secs. |
| Option ZB | Transflective LCD with green LED backlight. Good readings in full sunlight and darkness. Note: only available for safe area applications. Power requirements: 12-24V DC + 10% or type PD, PF, PM. Power consumption max. 1 Watt. |

| Enclosures | |
|-----------------------------|--|
| General | Die-cast aluminum or GRP (Glassfibre Reinforced Polyamide) enclosure with Polycarbonate window, silicone and EPDM gaskets. UV stabilized and flame retardant material. |
| Control Keys | Three industrial micro-switch keys. UV-stabilized silicone keypad. |
| Painting | Aluminum enclosure only: UV-resistant 2-component industrial painting. |
| Panel-mount enclosures | Dimensions: 130 x 120 x 60mm (5.10" x 4.72" x 2.38") – LxHxD. |
| Classification | IP65 / NEMA4X |
| Panel cut-out | 115 x 98mm (4.53" x 3.86") LxH. |
| Type HC | GRP panel-mount enclosure |
| Type HB | Aluminum panel-mount enclosure |
| Field/wall-mount enclosures | Dimensions: 130 x 120 x 75mm (5.10" x 4.72" x 2.95") – LxHxD. |
| Classification | IP67 / NEMA4X |
| Aluminium enclosures | |
| Type HA | Drilling: 2x PG9 – 1x M20. |
| Type HM | Drilling: 2x M16 – 1x M20. |
| Type HN | Drilling: 1x M20. |
| Type HO | Drilling: 2x M20. |
| Type HP | Drilling: 6x M12. |
| Type HT | Drilling: 1x ½"NPT. |
| Type HU | Drilling: 3x ½"NPT. |
| Type HV | Drilling: 4x M20 |
| Type HZ | No drilling. |
| GRP enclosures | |
| Type HD | No drilling. |
| Type HE | Drilling: 2x 16mm (0.63") – 1x 20mm (0.78"). |
| Type HF | Drilling: 1x 22mm (0.87"). |
| Type HG | Drilling: 2x 20mm (0.78"). |
| Type HJ | Drilling: 3x 22mm (0.87"). |
| Type HH | Drilling: 6x 12mm (0.47"). |
| Type HK | Flat bottom - no drilling. |
| ABS enclosure | |
| Type HS | Silicone free ABS enclosure with EPDM and PE gaskets. UV-resistant polyester keypad. (no drilling) |


| Operating temperature | |
|-----------------------|----------------------------------|
| Operational | -40°C to +80°C (-40°F to +176°F) |
| Intrinsically Safe | -40°C to +70°C (-40°F to +158°F) |

| Power supply | |
|------------------------|--|
| Type PB | Lithium battery - life-time depends upon settings - up to 5 years. |
| Type PC | Intrinsically Safe lithium battery - life-time depends upon settings - up to 5 years. |
| Type PD | 8-24V AC / DC \pm 10%. Power consumption max. 10 Watt. Intrinsically safe: 16-30V DC; power consumption max. 0.75 Watt. |
| Type PF | 24V AC / DC \pm 10%. Power consumption max. 15 Watt. |
| Type PL | Input loop powered from sensor signal 4-20mA (type A, non IS). |
| Type PM | 115-230V AC + 10%. Power consumption max. 15 Watt. |
| Type PX | Output loop powered: 8-30V DC. Power consumption max. 0.5 Watt. |
| Note PF / PM | The total consumption of the sensors, backlight and outputs may not exceed 400mA@24V. |
| Note I.S. applications | For intrinsically safe applications, consult the safety values in the certificate. |

| Sensor excitation | |
|-------------------|--|
| Type PB / PC / PX | 3.2V DC for pulse signals and 1.2V DC for coil pick-up. Note: This is not a real sensor supply. Only suitable for pulse sensors with a very low power consumption like coils (sine wave) and reed-switches. |
| Type PD | 1.2 - 3.2 - 8.2 - 12 and 24V DC - max. 50mA@24V DC |
| Type PD-XI | Intrinsically safe: Pulse signals: 1.2 - 3.2 - 8.2 - max. 7mA@8.2V DC. Analog signals: the sensor supply voltage is according to the power supply voltage connected to terminal 1. Also terminal 2 offers the same voltage. |
| Type PF / PM | 1.2 - 3.2 - 8.2 - 12 and 24V DC - max. 400mA@24V DC. |

| Terminal connections | |
|----------------------|--|
| Type: | Removable plug-in terminal strip. Wire max. 1.5mm ² and 2.5mm ² (Type PM / PF) |

| Data protection | |
|-----------------|---|
| Type | EEPROM backup of all setting. Backup of running totals every minute. Data retention at least 10 years. |
| Pass code | Configuration settings can be pass code protected. |

| Hazardous area (option) | |
|----------------------------|---|
| Intrinsically safe Type XI | ATEX approval:  II 1 G Ex ia IIB/IIC T4 Ga II 1 D Ex ia IIIC T100°C Da IP6x IECEx approval: Ex ia IIB/IIC T4 Ga Ex ia IIIC T100°C Da IP6x |
| Explosion proof Type XD/XF | ATEX approval ref.: <EX> II 2 GD EEx d IIB T5. Weight appr. 15kg. Dimensions of enclosure: 350 x 250 x 200mm (13.7" x 9.9" x 7.9") LxHxD. |

| Environment | |
|-----------------------------|--|
| Electromagnetic compatibil. | Compliant ref: EN 61326 (1997), EN 61010-1 (1993). |

INPUTS

| Flowmeter | |
|-----------------|---|
| Type P | Coil/sine wave (minimum 20mVp-p or 80mVp-p - sensitivity selectable), NPN/PNP, open collector, reed-switch, Namur, active pulse signals 8 - 12 and 24V. |
| Frequency | Minimum 0 Hz - maximum 7 kHz for total and flowrate. Maximum frequency depends on signal type and internal low-pass filter. E.g. Reed switch with low-pass filter: max. frequency 120 Hz. |
| K-Factor | 0.000010 - 9,999,999 with variable decimal position. |
| Low-pass filter | Available for all pulse signals. |
| Type A | (0)4-20mA - with signal calibration feature at any current within the range. |
| Type U | 0-10 V - with signal calibration feature at any voltage within the range. |
| Accuracy | Resolution: 14 bit.. Error < 0.025mA / ±0.125% FS. Low level cut-off programmable. |
| Span | 0.000010 - 9,999,999 with variable decimal position. |
| Update time | Four times a second. |
| Voltage drop | 2.5 Volt. |
| Load impedance | 3kOhm |
| Relationship | Linear and square root calculation. |
| Note | For signal type A and U: external power to sensor is required; e.g. Type PD. |

| Temperature | |
|----------------|--|
| Type TP | 2 or 3 wire PT100. |
| Standard | range: -100°C to +200°C (-148°F to 392°F) - accuracy 0.1 °C (0.18°F). |
| Update time | four times a second. |
| Note | The linearity is internally compensated. |
| Type ZV | range: -200°C to +800°C (-328°F to 1832°F) - accuracy 0.5 °C (0.9°F). |
| Type TA | (0)4-20mA - with signal calibration feature at any current within the range. |
| Type TU | 0-10 V - with signal calibration feature at any voltage within the range. |
| Accuracy | Resolution: 14 bit.. Error < 0.025mA / ±0.125% FS. Low level cut-off programmable. |
| Span | 0.000010 - 9,999,999 with variable decimal position. |
| Update time | Four times a second. |
| Voltage drop | 2.5 Volt @ 20mA. |
| Load impedance | 3kOhm |
| Note | For signal type TA and TU: external power to sensor required; e.g. Type PD. |

| Pressure | |
|----------------|---|
| Type IA | (0)4-20mA - with signal calibration feature. Resolution: 14 bit. |
| Type IU | 0-10 V, 0-5 V, 1-5 V - with signal calibration feature. Resolution: 14 bit. |
| Accuracy | 0.05%. Low level cut-off programmable. |
| Span | 0.000010 - 9,999,999 with variable decimal position. |
| Off-set | 0.000 - 9,999.999 unit |
| Update time | Four times a second. |
| Voltage drop | 2.5 Volt @ 20mA. |
| Load impedance | 3kOhm |
| Note | For signal type IA and IU: external power to sensor required; e.g. type PD. |

OUTPUTS

| Analog output | |
|---------------|--|
| Function | transmitting compensated flowrate. |
| Accuracy | 10 bit. Error < 0.05% - update 10 times a second. Software function to calibrate the 4.00mA and 20.00mA levels precisely within set-up. |
| Load | max. 1 kOhm |
| Type AA | Active 4-20mA output (requires type OA + PD, PF or PM). |
| Type AB | Active 0-20mA output (requires type OA + PD, PF or PM). |
| Type AF | Passive floating 4-20mA output for Intrinsically Safe applications (requires PC, PD or PL). |
| Type AI | Passive galvanically isolated output (requires PB, PD, PF, PL or PM). |
| Type AP | Passive 4-20mA output - output loop powered (type PX). |
| Type AU | Active 0-10V output (requires type OA + PD, PF or PM). |

| Communication option | |
|----------------------|--|
| Functions | reading display information, reading / writing all settings. |
| Protocol | Modbus RTU |
| Speed | 1200 - 2400 - 4800 - 9600 baud |
| Addressing | maximum 255 addresses. |
| Type CB | RS232 |
| Type CH | RS485 2-wire |
| Type CI | RS485 4-wire |
| Type CT | TTL Intrinsically Safe communication. |
| Type CX | no communication. |

OPERATIONAL

| Operator functions | |
|---------------------------|--|
| Displayed functions | <ul style="list-style-type: none"> • compensated total and/or compensated flowrate. • compensated total and compensated accumulated total. • line pressure. • line temperature. • compensated total can be reset to zero by pressing the CLEAR-key twice. |

| Total | |
|--------------|--|
| Digits | 7 digits. |
| Units | L, m3, GAL, USGAL, KG, lb, bbl, no unit. |
| Decimals | 0 - 1 - 2 or 3. |
| Note | total can be reset to zero. |

| Accumulated total | |
|--------------------------|--------------------------------|
| Digits | 11 digits. |
| Units / decimals | according selection for total. |

| Flowrate | |
|-----------------|--|
| Digits | 7 digits. |
| Units | mL, L, m3, Gallons, KG, Ton, lb, bl, cf, RND, ft3, scf, Nm3, NI, - no units. |
| Decimals | 0 - 1 - 2 or 3. |
| Time units | /sec - /min - /hr - /day. |

| Line temperature | |
|-------------------------|---|
| Digits | 6 digits. |
| Units | °C, °F or K |
| Decimals | 1 |
| Normal temperature | default: 273.15 K - any temperature can be set. |

| Line pressure | |
|----------------------|---|
| Digits | 6 digits. |
| Units | mbar, bar, PSI, no-unit |
| Decimals | 1 |
| Normal pressure | default: 1.013 bar - any pressure can be set. |

APPENDIX B: PROBLEM SOLVING

In this appendix, several problems are included that can occur when the F126-P-EG is going to be installed or while it is in operation.

Analog output does not function properly:

Check:

- SETUP 81 - is the function enabled?
- SETUP 82 / 83: are the flow-levels programmed correctly?
- connection of the external power-supply according specification.
- SETUP 27 - when 4mA should be generated as soon as the flowrate is zero, it might take this time worst case. To get a quick response, decrease this time according to you desired response time.

The password is unknown:

If the password is not 1234, there is only one possibility left: call your supplier.

ALARM

When the alarm flag starts to blink an internal alarm condition has occurred. Press the "select button" several times to display the 5-digit error code. The codes are:

0001: irrecoverable display-data error: data on the display might be corrupted.

0002: irrecoverable data-storage error: the programming cycle might have gone wrong: check programmed values.

0003: error 1 and error 2 occurred simultaneously

The alarm condition will almost certainly be handled internally and if all mentioned values still appear correct, no intervention by the operator is needed. If the alarm occurs more often or stays active for a longer time, please contact your supplier.

APPENDIX C: COMMUNICATION VARIABLES

Remarks:

- Below, an overview of the F126-P-EG specific variables; other common variables are described in the standard table.
- All numbers are decimal numbers, unless otherwise noted.
- Following variables of the standard table (var00-var30) are not valid for this product and will be responded with value 1: var00, 03-05, 07,08, 16-22, 24, 26-29.

| CONFIGURATION VARIABLES F126-P-EG - SETUP-LEVEL: | | | | |
|--|-------------------|-------|---|---|
| VAR | DESCRIPTION | BYTES | VALUE | REMARKS |
| TOTAL | | | | |
| 32 (20h) | unit | 1 | 0=L 1=m3 2=kg 3=lb 4=gal 5=usgal 6=bbl 7=none | |
| 33 (21h) | decimals | 1 | 0...3 | |
| 34 (22h) | K-factor | 3 | 1....9.999.999 | K-f 0000001 - K-f 0000009 is allowed when decs < 6! (VAR37) |
| 37 (25h) | decimals K-factor | 1 | 0...6 | |
| FLOWRATE | | | | |
| 48 (30h) | unit | 1 | 0=mL 1=L 2=m3 3=mg 4=g 5=kg 6=ton 7=gal 8=bbl 9=lb 10=cf 11=rev (revolutions for RPM) 12=none 13=scf 14=NM3 15=NL 16=p | |
| 49 (31h) | time unit | 1 | 0=sec 1=min 2=hour 3=day | |
| 50 (32h) | decimals | 1 | 0...3 | |
| 51 (33h) | K-factor | 3 | 1....9.999.999 | K-f 0000001 - K-f 0000009 is allowed when decs < 6! (VAR54) |
| 54 (36h) | decimals K-factor | 1 | 0...6 | |
| 55 (37h) | number of pulses | 1 | 1..255 | |
| 56 (38h) | cut-off time | 2 | 1 .. 9999 | steps of 100ms |

| VAR | DESCRIPTION | BYTES | VALUE | REMARKS |
|------------------------|----------------------|-------|--|---------|
| DISPLAY | | | | |
| 64 (40h) | display function | 1 | 0=total 1=flowrate | |
| 68 (44h) | set flowrate monitor | 1 | 0=operator level 1=SETUP level | |
| POWERMANAGEMENT | | | | |
| 80 (50h) | LCD update time | 1 | 0=fast 1=1sec 2=3sec 3=15sec 4=30sec 5=off | |
| 81 (51h) | power-mode battery | 1 | 0=operational 1=shelf | |
| FLOWMETER | | | | |
| 96 (60h) | flowmeter signal | 1 | 0=npn 1=npn-lp 2=reed 3=reed LP 4=PNP 5=PNP-lp 6=namur 7=coil hi 8=coil lo | |
| TEMPERATURE | | | | |
| 144 (08Dh) | No. of wires | 1 | 0= 2 wires 1= 3 wires | |
| 99 (063h) | filter | 1 | 0....99 | |
| 528 (210h) | display | 1 | 0= °C 1= °F 2= K | |

| VAR | DESCRIPTION | BYTES | VALUE | REMARKS |
|----------------------|----------------------------|-------|---------------------------------------|------------------------------------|
| PRESSURE | | | | |
| 544 (220h) | unit | 1 | 0=mbar 1=bar 2=psi 3=no unit | |
| 546 (222h) | span | 3 | 1....9,999,999 | |
| 549 (225h) | decimals span | 1 | 0...6 | |
| 550 (226h) | offset | 3 | 0.000....9,999.999 | unit as var544 step 0.001 |
| 90 (5Ah) | calibration low (4mA) | 1 | 0=default 1=calibrate 2=cal set | |
| 91 (5Bh) | calibration high (20mA) | 1 | 0=default 1=calibrate 2=cal set | |
| 89 (59h) | filter | 1 | 0....99 | |
| FORMULA | | | | |
| 537 (219h) | normal temperature | 3 | 0.00....99,999.99 | step: 0.01 K |
| 555 (229h) | normal pressure | 3 | 0.000....9,999.999 | unit as var544 step 0.001 |
| 227 (E3h) | compressibility | 3 | 0....9,999,999 | |
| 40 (28h) | normal compress. | 3 | 0....9,999,999 | |
| ANALOG OUTPUT | | | | |
| 112 (70h) | analog output | 1 | 0=disable 1=enable | |
| 113 (71h) | minimum rate | 3 | 0..9999999 | unit, time, decimals acc. var48-50 |
| 116 (74h) | maximum rate | 3 | 0..9999999 | unit, time, decimals acc. var48-50 |
| 119 (77h) | cut off percentage | 1 | 0..99 | steps of 0.1% |
| 120 (78h) | tune minimum rate | 2 | 0..9999 | |
| 122 (7Ah) | tune maximum rate | 2 | 0..9999 | |
| 117 (7Fh) | filter | 1 | 0....99 | |
| OTHERS | | | | |
| 01 (1h) | Model | 2 | | read only! |
| 06 (6h) | Software version | 2 | | read only! |
| 02 (2h) | Serial number | 4 | | read only! |
| 168 (A8h) | password | 2 | xxxx | read only! |
| 170 AAh | tagnumber | 3 | 0..9999999 | Other vars: see standard table |

OTHER F126-P-EG VARIABLES FOR COMMUNICATION

TOTAL - variable number 566 (236h) – 6 bytes

Read total: The value of total read using communication might differ from the value that appears on the display. This is due to the fact that the display can only display up to seven digits (for example when two decimals are selected for total and total has a value of 123456,78 the display will show 23456,78 while communication will read a “total” of 12345678 and a “total decimals” of 2).

Write total: total can only be cleared. This means writing a value different from 0 will result in the reply of an error message. Only writing 6 bytes of zero’s to total will be accepted.

ACCUMULATED TOTAL - variable number 560 (230h) – 6 bytes

Read acc. total: A difference between the read value and the display value, as explained for “Read total”, might appear here too.

Write acc. total: Impossible.

When reading or writing total or accumulated total it should be noted that the used values are given including the decimals. This means a read/write to one of these variables should be accompanied with a read/write to the variable that holds the number of decimals for this variable:

Example: read var. 566 for total:

Read var. 33 for total decimals and calculate the real value of total by multiplying total with $10^{(total\ decimals)}$

FLOWRATE - variable number 572 (23Ch) – 4 bytes

Read flowrate: The value difference as mentioned with total/acc. total might appear here too.

Write flowrate: Impossible.

TEMPERATURE - variable number 540 (21Ch) – 4 bytes

Read temperature: possible.

Write temperature: Not possible.

Pressure - variable number 556 (22Ch) – 4 bytes

Read pressure: possible.

Write pressure: Not possible.

INDEX OF THIS MANUAL

| | | | |
|-----------------------------|--------|---------------------------------|--------|
| accumulated Total | 8 | low-battery | 8 |
| actual settings | 50, 51 | Low-battery alarm | 8 |
| analog | | main-function | 10 |
| floating output. | 35 | maintenance | 39 |
| flowrate min. | 19 | model | 20 |
| intrinsically safe output. | 35 | NAMUR-signal | 31 |
| <i>output loop powered.</i> | 27 | Operator level | 8 |
| Analog output | 27 | password | 20, 44 |
| Backlight | 32 | power supply | 26, 27 |
| battery life time | 15, 39 | power supply intrinsically safe | 35 |
| Clear Total | 8 | pressure | 17 |
| Coil-signal | 29 | pressure - normal | 18 |
| communication | 20, 32 | Problem solving | 44 |
| family-specific variables | 45 | Pulse-signal active pulse | 30 |
| compressibility factor | 18 | Pulse-signal NPN/PNP | 29, 30 |
| Configuration | 9 | rate/Total | 8 |
| Dimension enclosures | 22, 23 | Reed-switch: | 31 |
| display update | 15 | serial number | 20 |
| equations | 18 | SETUP-level | 9 |
| filter | 16, 17 | software version | 20 |
| flowmeter | | subfunction | 10 |
| signal | 15 | tagnumber | 20 |
| Flowmeter input | 29 | Technical specification | 40 |
| flowrate | | temperature | 16 |
| calculation | 14 | temperature - normal | 18 |
| decimals | 14 | temperature input | 31, 32 |
| decimals k-factor | 14 | terminal connectors | 26 |
| measuring unit | 14 | time/date | 8 |
| time unit | 14 | total | |
| formula | 18 | decimals | 13 |
| Installation | 21 | decimals k-factor | 13 |
| Intrinsic safety | 33 | k-factor | 13, 14 |
| Intrinsically Safe options | 35 | measuring unit | 13 |
| IP classification | 21 | version software | 20 |
| keys | 7 | Voltage selection sensor | 25, 35 |

LIST OF FIGURES IN THIS MANUAL

| | |
|--|----|
| Fig. 1: Typical application for the F126-P-EG. | 5 |
| Fig. 2: Control Panel..... | 7 |
| Fig. 3: Example of display information during process. | 8 |
| Fig. 4: Example of low-battery alarm..... | 8 |
| Fig. 5: Dimensions aluminum enclosures. | 22 |
| Fig. 6: Dimensions GRP enclosures. | 23 |
| Fig. 7: Grounding aluminum enclosure with type PM 115-230V AC..... | 24 |
| Fig. 8: Switch setting sensor supply voltage. | 25 |
| Fig. 9 Overview terminal connectors F126-P-EG-IA-TP and most options. | 26 |
| Fig. 10: Overview terminal connectors communication option..... | 32 |
| Fig. 11: Overview terminal connectors backlight option..... | 32 |
| Fig. 12: Overview of Intrinsically Safe terminal connectors and options..... | 34 |
| Fig. 13: Switch position voltage selection type PD-XI..... | 35 |
| Fig. 14: Configuration example 1 Intrinsically Safe | 36 |
| Fig. 15: Configuration example 2 Intrinsically Safe | 37 |

NOTES

| LIST OF CONFIGURATION SETTINGS | | | |
|---------------------------------------|--------------------------|---------------|---------------|
| SETTING | DEFAULT | DATE : | DATE : |
| 1 - TOTAL | Enter your settings here | | |
| 11 unit | L | | |
| 12 decimals | 0000000 | | |
| 13 K-factor | 0000001 | | |
| 14 decimals K-factor | 0 | | |
| 2 - FLOWRATE | | | |
| 21 unit | L | | |
| 22 time unit | /min | | |
| 23 decimals | 0000000 | | |
| 24 K-factor | 0000001 | | |
| 25 decimals K-factor | 0 | | |
| 26 filter | 10 | | |
| 27 period | 1.0 sec. | | |
| 3 - POWER MANAGEMENT | | | |
| 31 LCD-new | 1 sec. | | |
| 32 mode | operational | | |

| SETTING | DEFAULT | DATE : | DATE : |
|---------------------------|-----------|--------|--------|
| 4 - FLOWMETER | | | |
| 41 signal | coil-lo | | |
| 5 - TEMPERATURE | | | |
| 51 nr. of wires | 3 | | |
| 52 filter | 01 (off) | | |
| 53 display unit | °C | | |
| 6 - PRESSURE | | | |
| 61 unit | BAR | | |
| 62 span | 00001600 | | |
| 63 decimals span | 0 | | |
| 64 off-set | 0.000 BAR | unit | unit |
| 65 filter | 01 (off) | | |
| 66 calibrate low-(0)4mA | default | | |
| 67 calibrate high-20mA | default | | |
| 7 - FORMULA | | | |
| 72 normal temperature | 0 K | K | K |
| 73 normal pressure | 0.000 BAR | | |
| 74 normal compressibility | 0 | | |
| 75 compressibility | 0 | | |
| 8 - ANALOG OUTPUT | | | |
| 81 output | disabled | | |
| 82 min. flowrate 4-mA | 0000000 | | |
| 83 max. flowrate 20mA | 9999999 | | |
| 84 cut off percentage | 0.0% | | |
| 85 tune min - 4mA | 0208 | | |
| 86 tune max - 20mA | 6656 | | |
| 87 filter | 01 (off) | | |
| 9 - COMMUNICATION | | | |
| 91 baud-rate | 2400 | | |
| 92 address | 1 | | |
| 93 mode | BUS-PSC | | |
| A - OTHERS | | | |
| A4 password | 0000 | | |
| A5 tagnumber | 0000000 | | |

