

Signal input flowmeter: (0)4-20mA.

Options: Intrinsically Safe.





SAFETY INSTRUCTIONS

Any responsibility is lapsed if the instructions and procedures as described in this manual are not followed.

- LIFE SUPPORT APPLICATIONS: The F012-A is not designed for use in life support appliances, devices, or systems where malfunction of the product can reasonably be expected to result in a personal injury. Customers using or selling these products for use in such applications do so at their own risk and agree to fully indemnify the manufacturer and supplier for any damages resulting from such improper use or sale.
- Electro static discharge does inflict irreparable damage to electronics! Before installing
 or opening the unit, the installer has to discharge himself by touching a well-grounded
 object.
- This unit must be installed in accordance with the EMC guidelines (Electro Magnetic Compatibility).
- Do connect a proper grounding to the aluminum casing as indicated if the F012-A has been supplied with the 115-230V AC power-supply type PM. The green / yellow wire between the back-casing and removable terminal-block may never be removed.
- Intrinsically Safe applications: follow the instructions as mentioned in Chapter 5 and consult "Fluidwell F0..-..-XI - Documentation for Intrinsic Safety".

DISPOSAL

At the end of its life this product should be disposed of according to local regulations regarding waste electronic equipment. If a battery is present in this product it should be disposed of separately. The separate collection and recycling of your waste equipment will help to conserve natural resources and ensure that it is recycled in a manner that protects the environment.

SAFETY RULES AND PRECAUTIONARY MEASURES

- The manufacturer accepts no responsibility whatsoever if the following safety rules and precautions instructions and the procedures as described in this manual are not followed.
- Modifications of the F012-A implemented without preceding written consent from the manufacturer, will result in the immediate termination of product liability and warranty period.
- Installation, use, maintenance and servicing of this equipment must be carried out by authorized technicians.
- Check the mains voltage and information on the manufacturer's plate before installing the unit.
- Check all connections, settings and technical specifications of the various peripheral devices with the F012-A supplied.
- Open the casing only if all leads are free of potential.
- Never touch the electronic components (ESD sensitivity).
- Never expose the system to heavier conditions than allowed according to the casing classification (see manufacture's plate and chapter 4.2.).
- If the operator detects errors or dangers, or disagrees with the safety precautions taken, then
 inform the owner or principal responsible.
- The local labor and safety laws and regulations must be adhered to.

ABOUT THE OPERATION MANUAL

This operation manual is divided into two main sections:

- The daily use of the unit is described in chapter 2 "Operation". These instructions are meant for users.
- The following chapters and appendices are exclusively meant for electricians/technicians. These
 provide a detailed description of all software settings and hardware installation guidance.

This operation manual describes the standard unit as well as most of the options available. For additional information, please contact your supplier.

A hazardous situation may occur if the F012-A is not used for the purpose it was designed for or is used incorrectly. Please carefully note the information in this operating manual indicated by the pictograms:



A "**warning**" indicates actions or procedures which, if not performed correctly, may lead to personal injury, a safety hazard or damage of the F012-A or connected instruments.



A "**caution**" indicates actions or procedures which, if not performed correctly, may lead to personal injury or incorrect functioning of the F012-A or connected instruments.



A "**note**" indicates actions or procedures which, if not performed correctly, may indirectly affect operation or may lead to an instrument response which is not planned.

Hardware version	
Software version	
Manual	
© Copyright 2012	

FB03.03.xx 03.02.xx HF012AEN_v0403_03 Atex_IECEx_CSA_FM Fluidwell bv - The Netherlands.

Information in this manual is subject to change without prior notice. The manufacturer is not responsible for mistakes in this material or for incidental damage caused as a direct or indirect result of the delivery, performance or use of this material.

© All rights reserved. No parts of this publication may be reproduced or used in any form or by any means without written permission of your supplier.

CONTENTS MANUAL

Safety instru	ictions	2
Disposal		2
Safety rules	and precautionary measures	2
About the op	peration manual	3
Contents ma	anual	4
1.	Introduction	5
1.1.	System description of the F012-A	5
2.	Operational	6
2.1.	General	6
2.2.	Control panel	6
2.3.	Operator information and functions	7
3.	Configuration	9
3.1.	Introduction	9
3.2.	Programming SETUP-level	9
3.2.1.	General	9
3.2.2.	Overview functions SETUP level	12
3.2.3.	Explanation of SETUP-functions	13
	1 - Total	13
	2 - Flowrate	14
	3 - Display	15
	4 - Power management	15
	5 - Flowmeter	15
	6 - Others	17
4.	Installation	18
4.1.	General directions	18
4.2.	Installation / surrounding conditions	18
4.3.	Dimensions- Enclosure	19
4.4.	Installing the hardware	21
4.4.1.	Introduction	21
4.4.2.	Terminal connectors with power supply - type : PB / PD / PL / PX	22
4.4.3.	Terminal connectors with power supply - type : PF / PM	24
5.	Intrinsically safe applications	26
5.4.	Battery replacement instructions	30
6.	Maintenance	31
6.1.	General directions	31
6.2.	Repair	31
Appendix A:	Technical specification	32
Appendix B:	Problem solving	35
Index of this	manual	36
List of figure	s in this manual	37
Notes		38

1. INTRODUCTION

1.1. SYSTEM DESCRIPTION OF THE F012-A

Functions and features

The flowrate / totalizer model F012-A is a microprocessor driven instrument designed to display flowrate, total and accumulated total.

This product has been designed with a focus on:

- ultra-low power consumption to allow long-life battery powered applications (type PB / PC),
- intrinsic safety for use in hazardous applications (type XI),
- several mounting possibilities with GRP or aluminum enclosures for industrial surroundings,
- ability to process all types of flowmeter signals,

Flowmeter input

This manual describes the unit with an analog (0)4-20mA input type from the flowmeter "-A version". Other versions are available to process pulse or 0-10V flowmeter signals.

One flowmeter with a passive or active (0)4-20mA signal output can be connected to the F012-A. To power the sensor, several options are available.

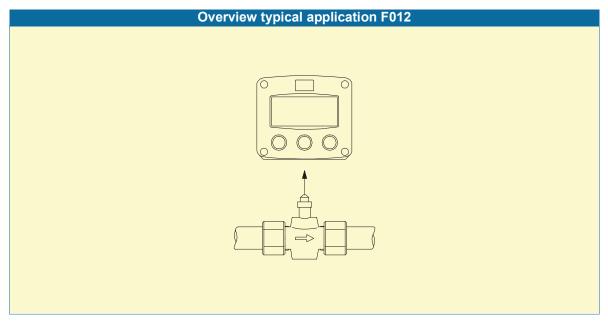


Fig. 1: Typical application for the F012-A.

Configuration of the unit

The F012-A has been designed to be implemented in many types of applications. For that reason, a SETUP-level is available to configure your F012-A according to your specific requirements. It includes several important features, such as Span, measurement units, signal selection etc. All setting are stored in EEPROM memory and will not be lost in the event of power failure. To extend the battery-life time, please use of the power-management functions as described in chapter 3.2.3.

Display information

The unit has a large transflective LCD with all kinds of symbols and digits to display measuring units, status information, trend-indication and key-word messages.

Flowrate and totals can be displayed either with the small 8mm digits or with the 17mm digits. A backup of the total and accumulated total in EEPROM memory is made every minute.

Options

The following options are available: intrinsic safety, power- and sensor-supply options, panel-mount, wall-mount and weather-proof enclosures, flame proof enclosure and LED backlight.

Page 6

2. OPERATIONAL

2.1. GENERAL

- The F012-A may only be operated by personnel who are authorized and trained by the
 operator of the facility. All instructions in this manual are to be observed.
- Take careful notice of the "Safety rules, instructions and precautionary measures " in the front of this manual.

This chapter describes the daily use of the F012-A. This instruction is meant for users / operators.

2.2. CONTROL PANEL

The following keys are available:



Fig. 2: Control Panel.

Functions of the keys



This key is used to program and save new values or settings. It is also used to gain access to SETUP-level; please read chapter 3.



This key is used to SELECT accumulated total. The arrow-key ▲ is used to increase a value after PROG has been pressed or to configure the unit; please read chapter 3.



Press this key twice to CLEAR the value for total. The arrow-key is used to select a digit after PROG has been pressed or to configure the unit; please read chapter 3.

2.3. OPERATOR INFORMATION AND FUNCTIONS

In general, the F012-A will always act at Operator level. The information displayed is dependant upon the SETUP-settings. The signal generated by the connected flowmeter is measured by the F012-A in the background, whichever screen refresh rate setting is chosen. After pressing a key, the display will be updated very quickly during a 30 second period, after which it will slow-down again.



Fig. 3: Example of display information during process.

For the Operator, the following functions are available:

Display flowrate / total or flowrate

This is the main display information of the F012-A. After selecting any other information, it will always return to this main display automatically.

Total is displayed on the upper-line of the display and flowrate on the bottom line. It is possible to display flowrate only with the large 17mm digits; in this instance press the SELECT-key to read the total.

When "-----" is shown, then the flowrate value is too high to be displayed. The arrows indicate the increase/decrease of the flowrate trend.

Clear total

The value for total can be re-initialized. To do so, press CLEAR twice. After pressing CLEAR once, the flashing text "PUSH CLEAR" is displayed. To avoid re-initialization at this stage, press another key than CLEAR or wait for 20 seconds. Re-initialization of total DOES NOT influence the accumulated total.

Display accumulated total

When the SELECT-key is pressed, total and accumulated total are displayed. The accumulated total cannot be re-initialized. The value will count up to 99,999,999,999. The unit and number of decimals are displayed according to the configuration settings for total.

Low-battery alarm

When the battery voltage drops, it must be replaced. At first "low-battery" will flash, but as soon as it is displayed continuously, the battery MUST be replaced shortly after! Only original batteries supplied by the manufacturer may be used, else the guarantee and liability will be terminated. The remaining lifetime after the first moment of indication is generally several days up to some weeks.



Fig. 4: Example of low-battery alarm. HF012AEN_v0403_03 Atex_IECEx_CSA_FM

Range error

As soon as the input value is 5% outside the calibrated measuring range, "ALARM" will be displayed. Meanwhile, the calibrated value will be displayed. After pressing the SELECT key, the reason of the alarm will be displayed: "LO RANGE" or "HI RANGE".

Alarm 01-03

When "ALARM" is displayed, press the SELECT key to display the reason of the alarm: 1-3. Please consult Appendix B: problem solving.

3. CONFIGURATION

3.1. INTRODUCTION

This and the following chapters are exclusively meant for electricians and non-operators. In these, an extensive description of all software settings and hardware connections are provided.




- Mounting, electrical installation, start-up and maintenance of the instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.
- The F012-A may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.
- Ensure that the measuring system is correctly wired up according to the wiring diagrams. The housing may only be opened by trained personnel.
- Take careful notice of the "Safety rules, instructions and precautionary measures " in the front of this manual.

3.2. **PROGRAMMING SETUP-LEVEL**

3.2.1. **GENERAL**

Configuration of the F012-A is done at SETUP-level. SETUP-level is reached by pressing the PROG/ENTER key for 7 seconds; at which time, both arrows + will be displayed. In order to return to the operator level, PROG will have to be pressed for three seconds. Alternatively, if no keys are pressed for 2 minutes, the unit will exit SETUP automatically.

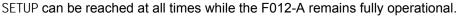




Note: A pass code may be required to enter SETUP. Without this pass code access to SETUP is denied.

To enter SETUP-level:




Matrix structure SETUP-level:

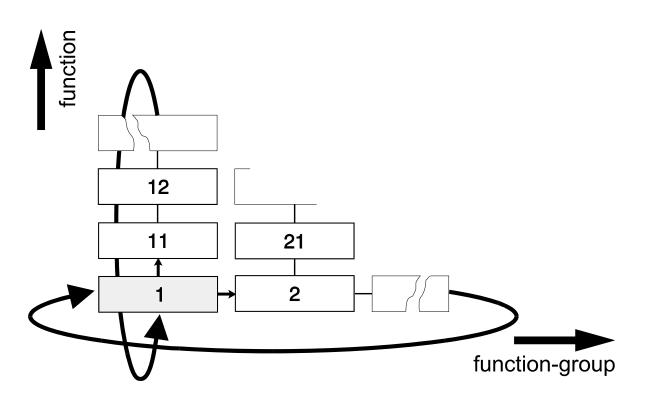

SCROLLING THROUGH SETUP-LEVEL

Selection of function-group and function:


SETUP is divided into several function groups and functions.

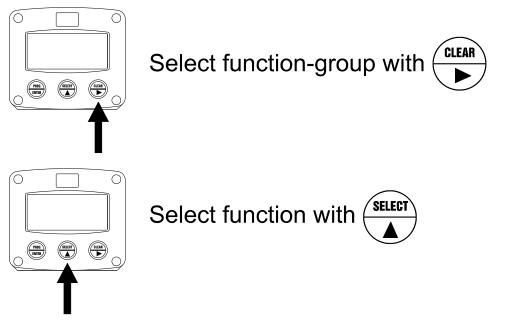

Each function has a unique number, which is displayed below the word "SETUP" at the bottom of the display. The number is a combination of two figures. The first figure indicates the function-group and the second figure the sub-function. Additionally, each function is expressed with a keyword.

After selecting a sub-function, the next main function is selected by scrolling through all "active" sub-functions (e.g. 1^{+} , 11^{+} , 12^{+} , 13^{+} , 14^{+} , 1^{+} , 2^{+} , 3^{+} , 31 etc.). The "CLEAR" button can be used to jump a step back if you missed the desired function.

To change or select a value:

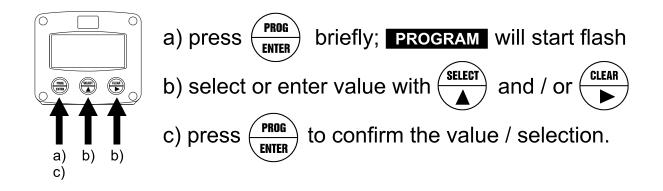

To change a value, use \blacktriangleright to select the digits and \triangleq to increase that value. If the new value is invalid, the increase sign \triangleq or decrease-sign \checkmark will be displayed while you are programming.

To select a setting, ▲ is used to select in one direction and ▶ can be used to select in the other direction.

When data is altered but ENTER is not pressed, then the alteration can still be cancelled by waiting for 20 seconds or by pressing ENTER for three seconds: the PROG-procedure will be left automatically and the former value reinstated.



Note: alterations will only be set after ENTER has been pressed!

To return to OPERATOR-level:



In order to return to the operator level, PROG will have to be pressed for three seconds. Also, when no keys are pressed for 2 minutes, SETUP will be left automatically.

3.2.2. OVERVIEW FUNCTIONS SETUP LEVEL

	SETUP FUNCTIONS AND VARIABLES					
1	TOTAL	_				
	11	UNIT	L - m3 - kg - lb - GAL - USGAL - bbl - no unit			
	12	DECIMALS	0 - 1 - 2 - 3 (Ref: displayed value)			
	13	SPAN	0.000001 - 999,999 unit / second			
	14	DECIMALS SPAN	0 - 6			
2	FLOW	RATE				
	21	UNIT	mL - L - m3 - mg - g - kg - ton - GAL - bbl - lb - cf - REV - no unit - scf - Nm3 - NL - P			
	22	TIME UNIT	sec - min - hour - day			
	23	DECIMALS	0 - 1 - 2 - 3 (Ref: displayed value)			
	24	SPAN	0.000001 - 999,999 unit / time-unit			
	25	DECIMALS SPAN	0 - 6			
3	DISPL	ÂY				
	31	FUNCTION	total - flowrate			
	32	BACKLIGHT (optional)	off - green - amber			
	33	BL. BRIGHTNESS	1 - 5			
4		R MANAGEMENT				
	41	LCD UPDATE	fast - 1 sec - 3 sec - 15 sec - 30 sec - off			
	42	BATTERY MODE	operational - shelf			
5		METER				
	51	FORMULA	interpolation, square root			
	52	FILTER	00 - 99			
	53	CUT-OFF	0.0 - 99.9%			
	54	CALIBRATE LOW	default - calibrate - calibrate set			
	55	CALIBRATE HIGH	default - calibrate - calibrate set			
6	OTHE					
	61	TYPE / MODEL	F012-A			
	62	SOFTWARE VERSION	03.xx.xx			
	63	SERIAL NO.	XXXXXX			
	64	PASS CODE	0000 - 9999			
	65	TAGNUMBER	0000000 - 9999999			

3.2.3. EXPLANATION OF SETUP-FUNCTIONS

		1 - TOTAL			
MEASUREMENT UNIT		etermines the measurement unit for total and accumulated			
11	total. The following units can be selected:				
	L - m3 - kg - lb GAL - USGAL - bbl (no unit).				
	Alteration of the measurement unit will have consequences for operator				
	and SETUP-level values. Please note that the Span has to be adapted as well; the calculation is not done automatically.				
DECIMALS 12	of digits follow	point determines for total and accumulated total the number ring the decimal point.			
	The following	can be selected:			
		0000000 - 111111.1 - 22222.22 - 3333.333			
SPAN 13	With the span, the flowmeter signal is converted to a quantity. The <u>span for Total</u> is determined on the basis of the measurement unit (setting 11) and the <u>flowrate per second</u> at 20mA. Enter the span in whole numbers (decimals are set with SETUP 14). The more accurate the span, the more accurate the functioning of the system will be:				
	Example 1	Calculating the Span. Let us assume that the flowmeter generates 20mA at a rate of 652.31 USGAL per hour, the selected unit is barrels. There are 42 gallons in one barrel; so the rate is 652.31/42 is 15.53119 barrels/hour. This is 0.0043142 barrels/second, which is the span. Enter for SETUP - 13: "004314" and for SETUP - 14 "6".			
	Example 2	Calculating the Span. Let us assume that the flowmeter generates 20mA at a flowrate of 2,481.3 Liters/minute and the selected unit is "cubic meters / m3". The rate per second is 2,481.3÷60 is 41.355 L/sec. This is 0.041355 m3/sec., which is the span. Enter for SETUP - 13: "041355" and for SETUP - 14 - decimals span "6".			
DECIMALS SPAN 14		etermines the number of decimals for the Span The following can be selected:			
	0 - 1 -	2 - 3 - 4 - 5 - 6			
	Please note that this function influences the accuracy of the Span indirectly. This setting has NO influence on the displayed number of digits for total (SETUP 12)!				

2 - FLOWRATE					
The settings for total and flowrate are entirely separate. In this way, different units of measurement					
can be used for each e.g. cubic meters for total and liters for flowrate.					
The display update time for MEASUREMENT UNIT	vupdate time for flowrate is one second or more.				
21	SETUP - 21 determines the measurement unit for flowrate.				
21	The following units can be selected:				
	mL - L - m3 - mg - g - kg - ton - GAL - bbl - lb - cf - REV - no unit - scf - Nm3 - NL - P.				
	Alteration of the measurement unit will have consequences for operator and SETUP-level values.				
	Please note that the Span has to be adapted as well; the calculation is not				
TIME UNIT	done automatically. The flowrate can be calculated per second (SEC), minute (MIN), hour				
22	(HR) or day (DAY).				
DECIMALS	This setting determines for flowrate the number of digits following the				
23	decimal point. The following can be selected:				
	00000 - 1111.1 - 2222.22 - 3333.333				
	00000 - 1111.1 - 2222.22 - 3333.333				
SPAN 24	With the span, the flowmeter signal is converted to a quantity. The <u>span for flowrate</u> is determined on the basis of the <u>selected</u> <u>measurement unit and time unit</u> at 20mA. Enter the span in whole numbers (decimals are set with SETUP 25). The more accurate the span, the more accurate the functioning of the system will be:				
	Example 1 Calculating the span for flowrate Let us assume that the flowmeter generates 20mA at a flowrate of 2,481.3 Liters/minute, the selected unit is "Liters" and time unit "minute". The span is 2481.3 Enter for SETUP - 24: "248130" and for SETUP - 25 - decimals span "2".				
	Example 2 Calculating the span for flowrate Let us assume that the flowmeter generates 20mA at a rate of 652.31 USGAL per hour, the selected unit is USG and the time unit is minute. The span is 652.31 / 60 minutes is 10.87183 (GPM). Enter for SETUP - 24: "108718" and for SETUP - 25 "4".				
DECIMALS SPAN	This setting determines the number of decimals for the Span				
25	(SETUP 24). The following can be selected:				
	0 - 1 - 2 - 3 - 4 - 5 - 6				
	Please note that this SETUP - influences the accuracy of the Span indirectly. This setting has NO influence on the displayed number of digits for "flowrate" (SETUP 23)!				

3 - DISPLAY				
FUNCTION	The large 17mm digits can be set to display total or flowrate.			
31	When "total" is selected, both total and flowrate are displayed			
	simultaneously.			
	When "flowrate" is selected, only flowrate will be displayed with it's			
	measuring unit while total will be displayed after pressing SELECT.			
The functions below will c	nly effect the optional LED-backlight.			
BACKLIGHT	If a LED backlight has been supplied, the color can be selected.			
(OPTION)	Following selections are available:			
32	OFF - GREEN - AMBER			
BRIGHTNESS	The density of the backlight can be set in following range:			
(OPTION)	1-5			
33	One is minimum and five is maximum brightness.			

4 - POWER MANAGEMENT

When used with the internal battery option, the user can expect reliable measurement over a long period of time. The F012-A has several smart power management functions to extend the battery life time significantly. Two of these functions can be set:					
LCD NEW 41	The calculation of the display-information influences the power consumption significantly. When the application does not require a fast display update, it is strongly advised to select a slow refresh rate. Please understand that NO information will be lost; the input signal will be processed and the output signal will be generated in the normal way. The following can be selected:				
	Fast - 1 sec - 3 sec - 15 sec - 30 sec - off. Example battery life-time: battery life-time with a FAST update: about 3 years. battery life-time with a 1 sec update: about 5 years.				
	<i>Note:</i> after a button has been pressed by the operator - the display				



•		Note: after a button has been pressed by the operator - the display refresh rate will always switch to FAST for 30 seconds. When "OFF" is selected, the display will be switched off after 30 seconds and will be switched on as soon as a button has been pressed.
	BATTERY-MODE	The unit has two modes: operational or shelf.
	42	After "shelf" has been selected, the unit can be stored for several years; it
		will not process the sensor signal; the display is switched off but all
		settings and totals are stored. In this mode, power consumption is
		extremely low.
		To wake up the unit again, press the SELECT-key twice.

5 - FLOWMETER				
SIGNAL 51	The F012-A can process the (0)4-20mA signal in two ways:			
	 Interpolation: the signal is processed linear R = S x I 			
	• Square root: for differential pressure $\mathbf{R} = \mathbf{S} \sqrt{\mathbf{I}}$			
	where: R = Rate: the calculated flowrate S = Span: the maximum flowrate at 20mA. The span is programmed with setting 24 for flowrate and with setting 13 for total.			
	I = Input: the scaled analog value; in these formulas value 0 (zero) for (0)4mA and value 1 (one) for 20mA.			
Continued next page >>>				

				TER (CON)		actual flow Th		
52	measured is a "snap-shot" of the real flow as it will be fluctuating. With							
		help of this digital filter a stable and accurate reading can be obtained while the filter level can be set to a desired value.						
		The filter principal is based on three input values: the filter level (01-99),						
		the last measured analog value and the last average value. The higher the filter level, the longer the response time on a value change will be. Below, several filter levels with there response times are indicated:						
Filter	VALUE		Response time on step change of analog value.					
				TIME IN S	SECONDS			
		50% INFLUE		75% INFLUENCE	90% INFLUENCE	99% INFLUEN		
0		filter disab		filter disabled	filter disabled	filter disable		
		0.3 secon		0.5 seconds	1.0 seconds	1.8 second		
02 03 05 10		0.5 secon		1.0 seconds	1.5 seconds	3 seconds		
		1.0 secon		1.8 seconds	2.8 seconds	5.3 second		
		1.8 secon		3.5 seconds	5.6 seconds	11 seconds		
2		3.5 secon		7.0 seconds	11 seconds	23 seconds		
	0	5.3 secon		10 seconds	17 seconds	34 seconds		
5		8.8 secon		17 seconds	29 seconds	57 seconds		
7		13 second		26 seconds	43 seconds	86 seconds		
9 CUT-OFF	9	17 second		34 seconds age of the flow or	57 seconds	114 second		
		ignored. The cut-off v Examples:	/alue c	an be programmed	-	signal will be 99.9%.		
FUNCTION (sotup 51)	SPAN (sotup	The cut-off v Examples: REQUIRED	/alue c	CUT-OFF	d is the range 0.0 -	-		
(setup 51)	(setup 13/24)	The cut-off v Examples: REQUIRED CUT-OFF		CUT-OFF (setup 53)	d is the range 0.0 -	99.9%.		
(setup 51) interpolation	(setup 13/24) 450 L/min	The cut-off v Examples: REQUIRED CUT-OFF 25 L/min	25/	CUT-OFF (setup 53) /450 x 100%=5.5%	d is the range 0.0 - REQUIR 16mA x 5.5%	99.9%. ED OUTPUT + 4mA = 4.88m		
(setup 51)	(setup 13/24)	The cut-off v Examples: REQUIRED CUT-OFF	25/	CUT-OFF (setup 53)	d is the range 0.0 - REQUIR 16mA x 5.5%	99.9%. ED OUTPUT + 4mA = 4.88m		
(setup 51) interpolation	(setup 13/24) 450 L/min 450 L/min	The cut-off v Examples: REQUIRED CUT-OFF 25 L/min 25 L/min With this set signal from t flowrate zero This function <i>Please note</i>	25, (25/ tting it the flov o. n will m : the ir	CUT-OFF (setup 53) /450 x 100%=5.5%	d is the range 0.0 - REQUIR 16mA x 5.5% 16mA x 0.3% rate the input value e exact 4.0 mA (or utput value at flow z	99.9%. ED OUTPUT + 4mA = 4.88m + 4mA = 4.05m e for (0)4mA as 0.0 mA) at zero.		
(setup 51) interpolation square root	(setup 13/24) 450 L/min 450 L/min	The cut-off v Examples: REQUIRED CUT-OFF 25 L/min 25 L/min With this set signal from the flowrate zero This function <i>Please note</i> signal from the signal from the flowrate zero This function <i>Please note</i> signal from the signal from the si	25, (25/ tting it the flov o. n will m <i>: the ir</i> 4mA a g: be he call es on a ng PR(ATE: v	CUT-OFF (setup 53) /450 x 100%=5.5% /450) ² x 100%=0.3% is possible to calib wmeter might not b neasure the real ou neasure the real ou	d is the range 0.0 - REQUIR 16mA x 5.5% 16mA x 0.3% rate the input value e exact 4.0 mA (or utput value at flow z version - type A-PL e offered signal is d as this function h e system! can be selected: e input will be calib	99.9%. ED OUTPUT + 4mA = 4.88m + 4mA = 4.05m for (0)4mA as 0.0 mA) at zero. - requires a is correct has major rated with the		


	5	- FLOWMETER (CONTINUED)
	TUNE MAX / 20MA 55	With this setting it is possible to calibrate the input value for 20mA as the signal from the flowmeter might not be exact 20.0 mA at maximum flowrate.
0		This function will measure the real output value at maximum flowrate.
WARNING		 Warning: be very sure that the offered signal is correct before the calibration is executed as this function has major influences on the accuracy of the system!
		 After pressing PROG, three settings can be selected: CALIBRATE: with this setting, the input will be calibrated with the actual "20mA" value. After pressing enter, CAL SET will be displayed as soon as the calibration is completed. From that moment, the analog value must be less than the calibrated value for a reliable measurement. DEFAULT: with this setting, the manufactures value is re-installed.
		 DEFAULT: with this setting, the manufactures value is re-installed. CAL SET: to select the last calibrated value.

	6 - OTHERS
TYPE OF MODEL	For support and maintenance it is important to have information about the characteristics of the F012-A.
61	Your supplier will ask for this information in the case of a serious breakdown or to assess the suitability of your model for upgrade considerations.
VERSION SOFTWARE	For support and maintenance it is important to have information about the characteristics of the F012-A.
62	Your supplier will ask for this information in the case of a serious breakdown or to assess the suitability of your model for upgrade considerations.
SERIAL NUMBER	For support and maintenance it is important to have information about the characteristics of the F012-A.
63	Your supplier will ask for this information in the case of a serious breakdown or to assess the suitability of your model for upgrade considerations.
PASS CODE 64	All SETUP-values can be pass code protected. This protection is disabled with value 0000 (zero). Up to and including 4 digits can be programmed, for example 1234.
TAGNUMBER 65	For identification of the unit and communication purposes, a unique tag number of maximum 7 digits can be entered.

4. INSTALLATION


4.1. GENERAL DIRECTIONS

 Mounting, electrical installation, start-up and maintenance of this instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.

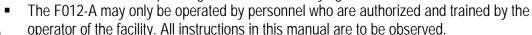


- Ensure that the measuring system is correctly wired up according to the wiring diagrams.
- Caution ! Protection against accidental contact is no longer assured when the housing cover is removed or the panel cabinet has been opened (danger from electrical shock). The housing may only be opened by trained personnel.
 - Take careful notice of the "Safety rules, instructions and precautionary measures " at the front of this manual.

4.2. INSTALLATION / SURROUNDING CONDITIONS

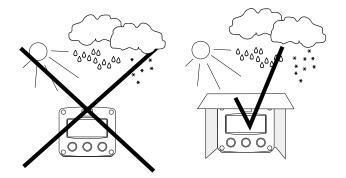

Take the relevant IP classification of the casing into account (see manufactures plate). Even an IP67 (NEMA 4X) casing should NEVER be exposed to strongly varying (weather) conditions. When panel-mounted, the unit is IP65 (NEMA 4)!

When used in very cold surroundings or varying climatic conditions, take the necessary precautions against moisture by placing a dry sachet of silica gel, for example, inside the instrument case.

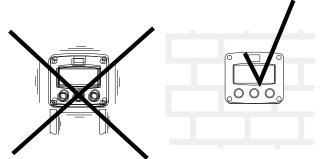

Mount the F012-A on a solid structure to avoid vibrations.

4.3. DIMENSIONS- ENCLOSURE

Aluminum enclosures:

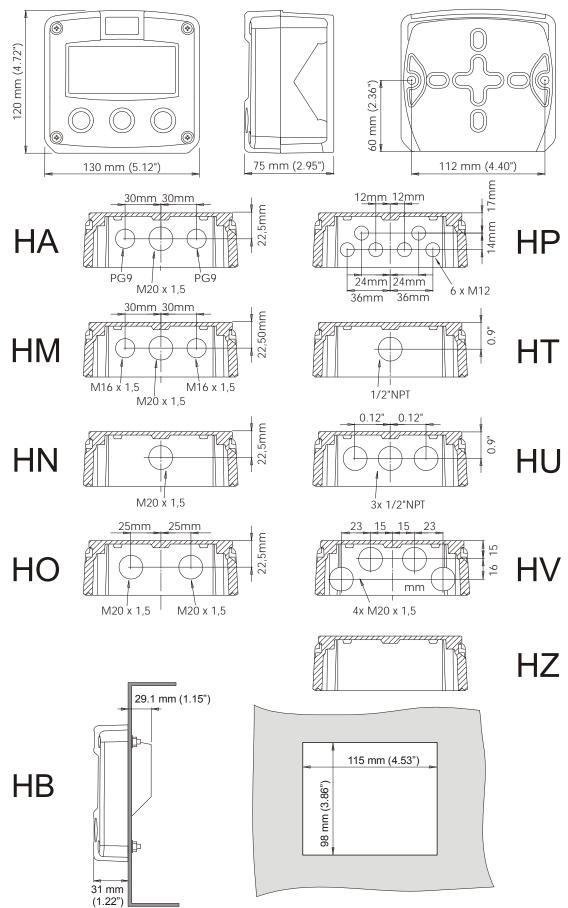


Fig. 5: Dimensions Aluminum enclosures. HF012AEN_v0403_03 Atex_IECEx_CSA_FM **GRP enclosures:**

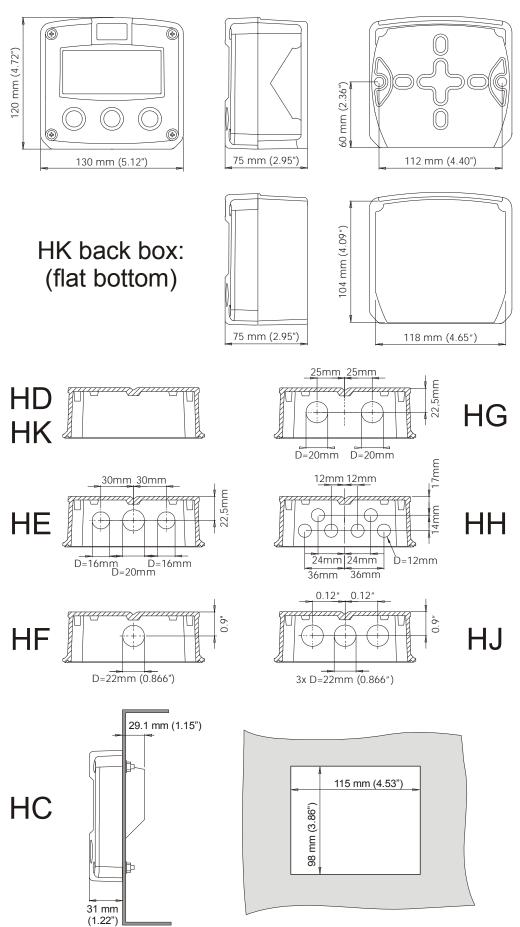


Fig. 6: Dimensions GRP enclosures. HF012AEN_v0403_03 Atex_IECEx_CSA_FM

4.4. INSTALLING THE HARDWARE

4.4.1. INTRODUCTION



Electro static discharge does inflict irreparable damage to electronics! Before installing or opening the unit, the installer has to discharge himself by touching a well-grounded object.

This unit must be installed in accordance with the EMC guidelines (Electro Magnetic Compatibility).



Do ground the aluminum casing properly as indicated, if the F012-A has been supplied with the 115-230V AC power-supply type PM. The green / yellow wire between the back-casing and removable terminal-block may never be removed.

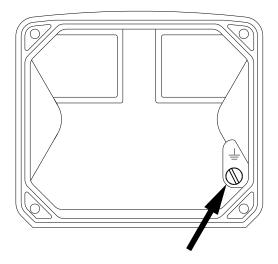


Fig. 7: Grounding aluminum enclosure with option PM 115-230V AC.

FOR INSTALLATION, PAY EMPHATIC ATTENTION TO:

- Separate cable glands with effective IP67 (NEMA4X) seals for all wires.
- Unused cable entries: ensure that you fit IP67 (NEMA4X) plugs to maintain rating.
- A reliable ground connection for both the sensor, and if applicable, for the metal casing. (above)
- An effective screened cable for the input signal, and grounding of it's screen to the "⊥ " terminal or at the sensor itself, whichever is appropriate to the application.

4.4.2. TERMINAL CONNECTORS WITH POWER SUPPLY - TYPE : PB / PD / PL / PX

For Intrinsically Safe applications: read chapter 5.

The following terminal connectors are available:

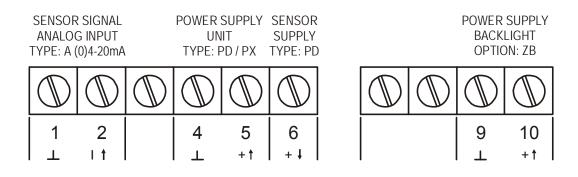



Fig. 8: Overview of terminal connectors F012-A-(PB / PD / PL / PX) and options.

REMARKS: TERMINAL CONNECTORS:

Terminals 1-2; Flowmeter input:

The F012-A requires a (0)4-20mA flowmeter signal which will be processed 4 times a second with a 16 bits accuracy. The input is not isolated.

The screen of the signal wire must be connected to the common ground terminal

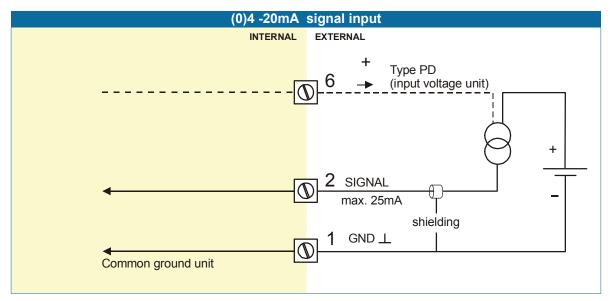

Terminals 1-2; sensor INPUT LOOP POWERED - type A-PL:

Model F012-A-PL is powered from the 4-20mA sensor signal. In the mean time, the unit will process the signal four times a second with a 16 bit accuracy. The input is not isolated. The screen of the signal wire must be connected to the common ground terminal 1.

Terminal 4-5: POWER SUPPLY UNIT - TYPE PD / PX:

To power the unit an internal battery can be used (type PB) and / or an external DC power supply of 8-30V DC (type PX) or 16-30V DC (type PD).

Connect the "-" to terminal 4 and the "+" to terminal 5. When power is applied to these terminals, the optional internal battery will be disabled / enabled automatically to extend the battery life time. The input loop powered model - type A-PL - does not have this power supply option.

Terminal 6: sensor supply voltage - type PD.

With this option, a sensor supply terminal comes available which offers the same voltage as connected to terminal 5 (internally linked).

Remark: this terminal is only available if option PD has been ordered.

Terminal 9-10: power supply backlight - type ZB (option):

To power the backlight, a voltage in the range 20-30V DC has to be connected. Maximum current 30mA. Connect the "-" to terminal 9 and the "+" to terminal 10.

4.4.3. TERMINAL CONNECTORS WITH POWER SUPPLY - TYPE : PF / PM

For Intrinsically Safe applications: read chapter 5.

The following terminal connectors are available:

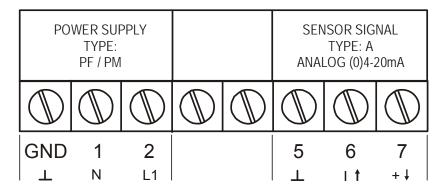


Fig. 9: Overview of terminal connectors F012-A-(PF / PM) and options.

SENSOR SUPPLY

Type PF-PM: Sensor supply: 8.2V, 12V or 24 V:

With this option, a real power supply for the sensor is available. The sensor can be powered with 8.2, 12 or 24 V DC (max. 400mA@24V).

The voltage is selected with the three switches inside the enclosure.

- Warning: be sure that all the leads to the terminals are disconnected from the unit when the internal plastic protection cover has been removed !
- HIGH VOLTAGE 400V !! NEVER connect the mains power supply to the unit when the plastic protection cover has been removed !!!

First, remove the terminal strip(s) after which the internal plastic cover can be removed. The switches are located on the right hand side as indicated:

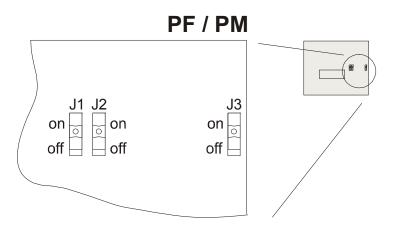


Fig. 10: switch position voltage selection (type PF and PM).

Switch positions / sensor supply voltage:

VOLTAGE SELECTION			
SWITCH	8.2V DC	12V DC	24V DC
J1	off	off	off
J2	on	on	off
J3	on	off	on or off



REMARKS: TERMINAL CONNECTORS:


			Terminal		
	Option	SENSOR SUPPLY	GND 01		02
PF	24V AC ± 10%	8.2, 12, 24V max. 400mA@24V DC		AC	AC
PF	24V DC ± 10%	8.2, 12, 24V max. 400mA@24V DC	L-	L+	
PM	115-230V AC ± 10%	8.2, 12, 24V max. 400mA@24V DC	EARTH	AC	AC
Note PF / PM The total consumption of the exceed 400mA@24V DC.		The total consumption of the sensor and backli	ght type ZE	3 may not	
		exceed 400mA@24V DC.			

Terminal GND- 01- 02; POWER SUPPLY only available with type PF / PM:

Terminals 5-7; Flowmeter input:

The F012-A requires a (0)4-20mA flowmeter signal which will be processed 4 times a second with a 16 bit accuracy. The input is not isolated.

The screen of the signal wire must be connected to the common ground terminal 5.

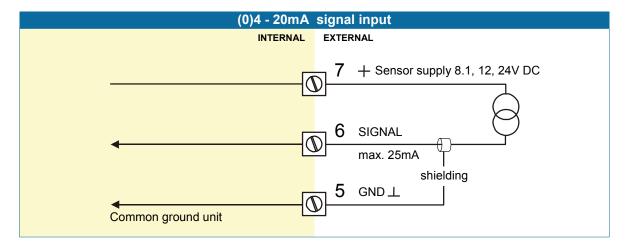

5. INTRINSICALLY SAFE APPLICATIONS

5.1. GENERAL INFORMATION AND INSTRUCTIONS:

- Mounting, electrical installation, start-up and maintenance of this device may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.
- This device may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.
- Ensure that the measuring system is correctly wired up according to the wiring diagrams. Protection against accidental contact is no longer assured when the housing cover is removed or the cabinet has been opened (danger of electric shock). The housing may only be opened by trained personnel.
- Take careful notice of the "Safety rules, instructions and precautionary measures " in the front of this manual.
- Safety Instructions
- Certificates, safety values, control drawing and declaration of compliance can be found in the document named: "Fluidwell F0..-A-XI - Documentation for Intrinsic Safety".
- For installation under ATEX directive: this intrinsically safe device must be installed in accordance with the Atex directive 94/9/EC and the product certificate KEMA 05ATEX1168 X.
- For installation under IECEx scheme: this intrinsically safe device must be installed in accordance the product certificate IECEx KEM 08.0006X.
- For installation under CSA: this intrinsically safe device must be installed in accordance with the product certificate CSA.08.2059461 X.
- For installation under FM: this intrinsically safe device must be installed in accordance with the Certificate / Project ID: 3033306.
- The control drawing number FWCD-0001 can be found in the document named: "Fluidwell F0..-A-XI - Documentation for Intrinsic Safety".
- The control drawing number FWCD-0002 can be found in the document named: "Fluidwell F0..-A-PL-XI - Documentation for Intrinsic Safety".
- Exchange of Intrinsically Safe battery FWLiBAT-00x with certificate number KEMA 03ATEX1071 U or IECEx KEM 08.0005U is allowed in Hazardous Area. See paragraph 5.4. for battery replacement instructions.
- Please note
- Special conditions for safe use mentioned in both the certificate and the installation
 instructions must be observed for the connection of power to both input and / or output circuits.
- When installing this device in hazardous areas, the wiring and installation must comply with the appropriate installation standards for your industry.
- Study the following pages with wiring diagrams per classification.

Serial number and year of production


This information can be looked-up on the display: setup function (par. 3.2.2.).




Fig. 11: Example serial number.



Label information analog input type - F0..A-XI (inside and outside the enclosure)

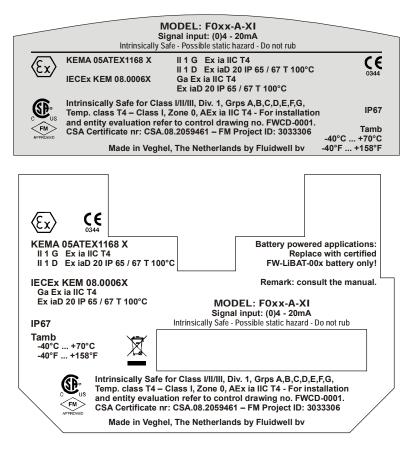

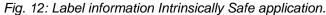

Label information analog input - loop powered - type A-PL (inside and outside the enclosure)

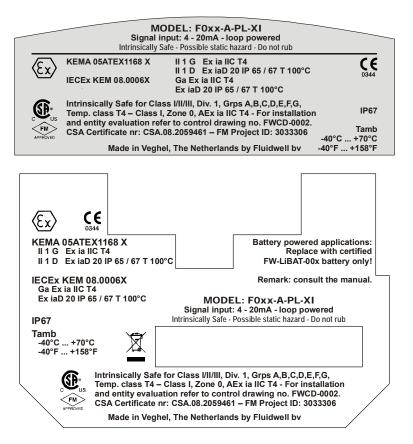


Fig. 13: Label information Intrinsically Safe application.

Page 28

5.2. TERMINAL CONNECTORS INTRINSICALLY SAFE APPLICATIONS:

Terminal connectors F012-A-(PC / PD / PL / PX)-XI-(ZB):

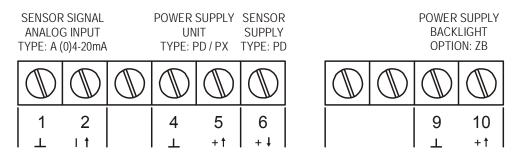


Fig. 14: Overview terminal connectors XI - Intrinsically Safe applications.

Remarks power supply options:

Type PC: offers - additional to type PX - an internal Intrinsically Safe lithium battery. This ATEX certified battery (FW-LiBATT-xxx) may be changed in hazardous area.

Type PD: offers - additional to type PX - a sensor supply terminal (terminal 6) which offers the same voltage as connected to terminal 5 (internally linked).

Type PX: as standard, all intrinsically products are supplied with terminal 4 and 5 to power the product externally.

Type PL: the unit will be powered from the 4-20mA input signal. Terminal 4-6 are not available.

5.3. CONFIGURATION EXAMPLES INTRINSICALLY SAFE APPLICATIONS:

Configuration example no. 1

	HAZARDOUS AREA		SAFE AREA	
TERMINAL CONNECTORS F0-series				
		+	Uo = max. 30 V	Power supply
Supply backlight P	Backlight option: type ZB		Io = max. 200 mA	For example
Common ground o		-	Po = max. 0,75 W	MTL5025
\square				
Ð				
Θ				
		+	Uo = max. 30 V	Power supply
Main supply to	Power supply type PX: 8-30V DC		lo = max. 200 mA	For example
Common ground 4		-	Po = max. 1,2 W	MTL5025
Crcuit depends on type of signal				
deper	I.S. flowmeter input - type A: (0)4-20mA	+	Uo = max. 30 V	Power supply
Signal N			lo = max. 150 mA	For example
	V	-	Po = max. 0,92 W	MTL5025

Fig. 15: Configuration example Intrinsically Safe.

Configuration example no. 2



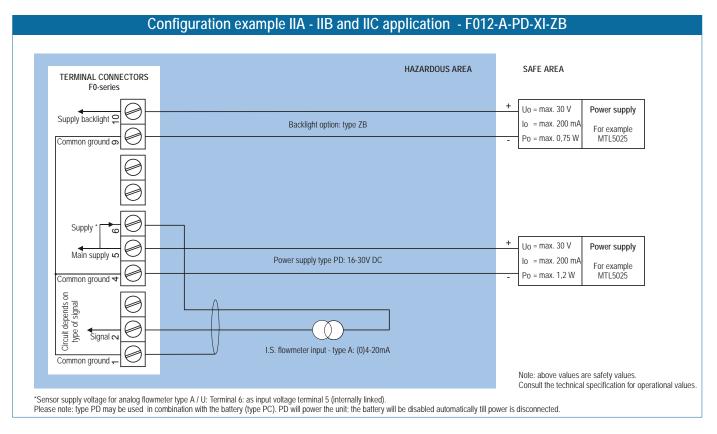


Fig. 16: Configuration example Intrinsically Safe.

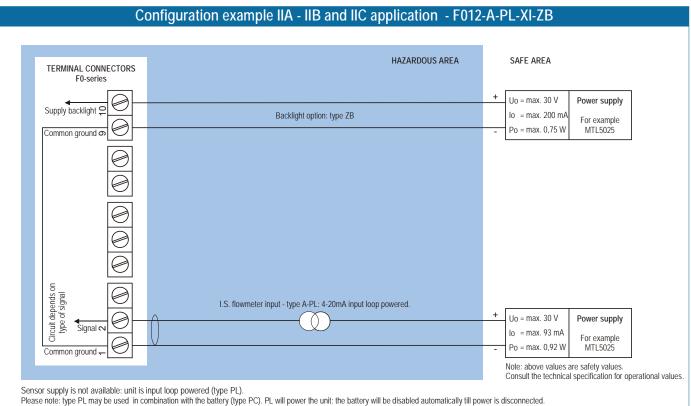

Configuration example no. 3

Fig. 17: Configuration example Intrinsically Safe.

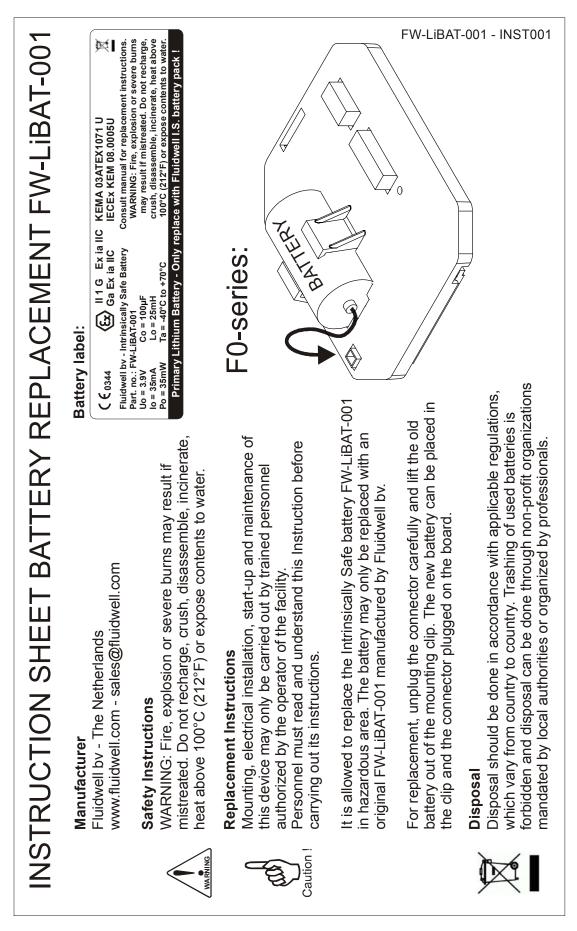

6. MAINTENANCE

6.1. GENERAL DIRECTIONS

- Mounting, electrical installation, start-up and maintenance of the instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.
 - The F012-A may only be operated by personnel who are authorized and trained by the
 - operator of the facility. All instructions in this manual are to be observed.
 - Ensure that the measuring system is correctly wired up according to the wiring diagrams.
- Protection against accidental contact is no longer assured when the housing cover is removed or the panel cabinet has been opened (danger from electrical shock). The housing may only be opened by trained personnel.
- Take careful notice of the "Safety rules, instructions and precautionary measures " in the front of this manual.

The F012-A does not require special maintenance unless it is used in low-temperature applications or surroundings with high humidity (above 90% annual mean). It is the users responsibility to take all precautions to dehumidify the internal atmosphere of the F012-A in such a way that no condensation will occur, for example by placing dry silica-gel sachet in the casing just before closing it. Furthermore, it is required to replace or dry the silica gel periodically as advised by the silica gel supplier.

Battery life-time:

It is influenced by several issues :

- Display update: fast display update uses significantly more power.
- Low temperatures; the available power will be less due to battery chemistry.



Note: It is strongly advised to use only necessary functions.

Check periodically:

- The condition of the casing, cable glands and front panel.
- The input/output wiring for reliability and aging symptoms.
- The process accuracy. As a result of wear and tear, re-calibration of the flowmeter might be necessary. Do not forget to re-enter any subsequent span alterations.
- The indication for low-battery.
- Clean the casing with soapy-water. Do not use any aggressive solvents as these might damage the coating.

6.2. REPAIR

This product cannot be repaired by the user and must be replaced with an equivalent certified product. Repairs should only be carried out by the manufacturer or his authorized agent.



APPENDIX A: TECHNICAL SPECIFICATION

GENERAL

Display		
Туре	High intensity reflective numeric and alphanumeric LCD, UV-resistant.	
Digits	Seven 17mm (0.67") and eleven 8mm (0.31"). Various symbols and measuring units.	
Refresh rate	User definable: 8 times/sec - 30 secs.	
Type ZB (option)	Bi-color configurable LED-backlight - green or amber. Intensity adjustable from the keyboard.	
Enclosures		
General	Die-cast aluminum or GRP (Glassfibre Reinforced Polyamide) enclosure with Polycarbonate	
	window, silicone and EPDM gaskets. UV stabilized and flame retardant material.	
Control Keys	Three industrial micro-switch keys. UV-resistant silicone keypad.	
Painting	Aluminum enclosure only: UV-resistant 2-component industrial painting.	
Panel-mount enclosures	Dimensions: 130 x 120 x 60mm (5.10" x 4.72" x 2.38") – LxHxD.	
Classification		
	115 x 98mm (4.53" x 3.86") LxH.	
	GRP panel-mount enclosure	
	Aluminum panel-mount enclosure	
Field/wall-mount enclosures	Dimensions: 130 x 120 x 75mm (5.10" x 4.72" x 2.95") – LxHxD.	
Classification	IP67 / NEMA4X	
Aluminum enclosures		
Туре НА		
Туре НМ		
Type HN		
Туре НО		
Type HP		
Туре НТ	Drilling: 1x ½"NPT.	
Type HU		
Type HV		
Type HZ	No drilling.	
GRP enclosures		
Type HD	No drilling.	
Type HE	Drilling: 2x 16mm (0.63") – 1x 20mm (0.78").	
Type HF	Drilling: 1x 22mm (0.87").	
Type HG	Drilling: 2x 20mm (0.78").	
Type HJ		
Type HH		
Type HK	Flat bottom - no drilling.	
ABS enclosure	Silicone free ADS analogues with EDDM and DE applicate LIV register traductor layers d	
Type HS	Silicone free ABS enclosure with EPDM and PE gaskets. UV-resistant polyester keypad.	
	(no drilling)	

Operating temperature

Operational	-40°C to +80°C (-40°F to +178°F).
Intrinsically Safe	-40°C to +70°C (-40°F to +158°F).

Power requirements	
Туре РВ	Lithium battery - life-time depends upon settings - up to 5 years.
Туре РС	Intrinsically Safe lithium battery - life-time depends upon settings - up to 5 years.
Type PD	16-30 V DC. Power consumption max. 1 Watt.
Type PF	24V AC/DC <u>+</u> 10%. Power consumption max. 15 Watt.
Type PL	Input loop powered from 4-20mA signal input. Voltage drop max. 2.6V DC
Туре РМ	115-230V AC <u>+</u> 10%. Power consumption max. 15 Watt.
Туре РХ	8-30 V DC (also available with PB / PC). Power consumption max. 0.3 Watt.
Type ZB	20-30V DC. Power consumption max. 1 Watt. Note: with type PF / PM: internally powered.
Note PF / PM	The total consumption of the sensor and backlight type ZB may not exceed 400mA@24V DC.
Note I.S. application	for intrinsically safe applications, consult the safety values in the certificate.

Sensor excitation		
Type PB / PC / PX	Sensor supply voltage: 3.2V DC for pulse signals and 1.2V DC for coil pick-up.	
5.	Please note: this is not a real sensor supply. Only suitable for sensors with a very low power	
	consumption like coils (sine wave) and reed-switches.	
	Analog sensors type A / U: sensor supply not available.	
Type PD	With pulse input type P: sensor supply 1.2, 3.2, 8.2V DC - max. 5mA@8.2V DC.	
	With analog input type A / U: as connected power supply voltage (internally linked)	
Type PF / PM	Analog sensors type A / U: sensor supply 8.2, 12 and 24V DC - max. 400mA@24V DC	
	With pulse input type P: sensor supply 1.2, 3.2, 8.2, 12 and 24V DC - max. 400mA@24V DC	

Terminal connections	
Туре:	Removable plug-in terminal strip. Wire max. 1.5mm2 and 2.5mm2

Data protection	
Туре	EEPROM backup of all settings. Data retention at least 10 years.
Pass code	Configuration settings can be pass code protected.

Hazardous area (option)	
Intrinsically safe	ATEX approval:
Туре ХІ	II 1 G Ex ia IIC T4
	II 1 D Ex iaD 20 IP 65 / 67 T 100°C
	IECEx approval:
	Ga Ex ia IIC T4
	Ex iaD 20 IP 65 / 67 T 100°C
	CSA / FM approval :
	IS Class I/II/III, Division 1 Groups A to G T4
	Class I zone 0 AEx ia IIC T4
Explosion proof	ATEX approval ref.: <ex> II 2 GD EEx d IIB T5. Weight appr. 15kg.</ex>
Type XF	Dimensions of enclosure: 350 x 250 x 200mm (13.7" x 9.9" x 7.9") LxHxD.

Environment	
Electromagnetic	Compliant ref: EN 61326 (1997), EN 61010-1 (1993)
compatibility	
Low voltage directive	Compliant ref: EN60950.

INPUTS

Flowmeter		
Type P	Coil/sine wave (minimum 20mVpp or 80mVpp - sensitivity selectable), NPN/PNP, open	
	collector, reed-switch, Namur, active pulse signals.	
Frequency	Minimum 0 Hz - maximum 7 kHz for flowrate.	
	Maximum frequency depends on signal type and internal low-pass filter.	
	E.g. Reed switch with low-pass filter: max. frequency 120 Hz.	
K-Factor	0.000010 - 9,999,999 with variable decimal position.	
Low-pass filter	Available for all pulse signals.	
Note	For coil signal input: higher sensitivity is available - type ZF (10mVpp) / type ZG (5mVpp).	
Туре А	(0)4-20mA - with signal calibration feature.	
Type U	0-10 V - with signal calibration feature.	
Accuracy	Resolution: 16 bit Error < 0.01mA / \pm 0.05% FS. Low level cut-off programmable.	
Span	0.001 - 99,999 with variable decimal position.	
Update time	Four times a second.	
Voltage drop	2.6 Volt.	
Load impedance	Load impedance 3kOhm	
Relationship	Relationship Linear and square root calculation.	
Note	For signal type A and U: external power to sensor is required; e.g. type PD / PF / PM.	

OPERATIONAL

Operator functions	
Displayed functions	total and/or flowrate.
	total and accumulated total.
	 total can be reset to zero by pressing the CLEAR-key twice.

Total	
Digits	7 digits.
Units	L, m3, GAL, USGAL, KG, lb, bbl, no unit.
Decimals	0 - 1 - 2 or 3.
Note	total can be reset to zero.

Accumulated total	
Digits	11 digits.
Units / decimals	according to selection for total.

Flowrate	
Digits	7 digits.
Units	mL, L, m3, Gallons, KG, Ton, lb, bl, cf, RND, ft3, scf, Nm3, NI, igal - no units.
Decimals	0 - 1 - 2 or 3.
Time units	/sec - /min - /hr - /day.

APPENDIX B: PROBLEM SOLVING

In this appendix, several problems are included that can occur when the F012-A is going to be installed or while it is in operation.

Flowrate displays "0 / zero" while there is flow (total is counting):

Check:

SETUP 22 / 25: are the span and time unit correct?

The pass code is unknown:

If the pass code is not 1234, there is only one possibility left: call your supplier.

Range error

 Range error (LO RANGE or HI RANGE): the input value is at least 5% above or below the calibrated measurement range SETUP 54, 55. Do recalibrate the input if desired.

ALARM

When the alarm flag starts to blink an internal alarm condition has occurred. Press the "select button" several times to display the 4-digit error code. The codes are:

- 0001: irrecoverable display-data error: data on the display might be corrupted.
- 0002: irrecoverable data-storage error: the programming cycle might have gone wrong: check programmed values.
- 0003: error 1 and error 2 occurred simultaneously

The alarm condition will almost certainly be handled internally and if all mentioned values still appear correct, no intervention by the operator is needed. If the alarm occurs more often or stays active for a longer time, please contact your supplier.

INDEX OF THIS MANUAL

accumulated total	7	loop powered	22
actual settings	40	low current	35
backlight	23	low-battery	7
color	15	main-function	10
density	15	maintenance	31
battery life time	15, 31	manual version	3
Battery replacement	30	model	17
clear total	7	operational	6
configuration	9	operator level	7
contents	4	pass code	17, 35
dimensions	19	power supply	23, 25
display		problem solving	35
function	15	range error	8, 35
display update time	15	rate / total	7
flowmeter	15	safety instructions	2
flowrate		sensor supply voltage	23, 24
decimals	14	serial number	17
decimals Span	14	setup-level	9
measuring unit	14	signal input	22
Span	14	software version	3
time unit	14	subfunction	10
functional description	5	tagnumber	17
hardware version	3	technical specification	32
high current	35	terminal connectors	22, 24
input loop powered	22	total	
input signal	22	decimals	13
installation	18	decimals Span	13
intrinsic safety	26	measuring unit	13
Intrinsic safety	26	Span	13
IP classification	18	version software	17
keys	6	voltage selection sensor supply	24

LIST OF FIGURES IN THIS MANUAL

	-
Fig. 1: Typical application for the F012-A	
Fig. 2: Control Panel	6
Fig. 3: Example of display information during process	7
Fig. 4: Example of low-battery alarm	7
Fig. 5: Dimensions Aluminum enclosures.	
Fig. 6: Dimensions GRP enclosures.	20
Fig. 7: Grounding aluminum enclosure with option PM 115-230V AC	
Fig. 8: Overview of terminal connectors F012-A-(PB / PD / PL / PX) and options	22
Fig. 9: Overview of terminal connectors F012-A-(PF / PM) and options.	
Fig. 10: switch position voltage selection (type PF and PM)	24
Fig. 11: Example serial number.	
Fig. 12: Label information Intrinsically Safe application.	27
Fig. 13: Label information Intrinsically Safe application.	27
Fig. 14: Overview terminal connectors XI - Intrinsically Safe applications	
Fig. 15: Configuration example Intrinsically Safe.	
Fig. 16: Configuration example Intrinsically Safe.	
Fig. 17: Configuration example Intrinsically Safe	
Fig. 18: Battery replacement instructions Intrinsically Safe Battery	

Page 38

NOTES

NOTES

LIST OF	CONFIGU	JRATION SET	TINGS
SETTING	DEFAULT	DATE :	DATE :
1 - TOTAL		Enter your settings here	
11 unit	L		
12 decimals	0000000		
13 span	0000001 /sec	/sec	/sec
14 decimals span	0		
2 - FLOWRATE		Enter your settings here	
21 unit	L		
22 time unit	/min		
23 decimals	0000000		
24 span	0000001 /min	/ unit	/ unit
25 decimals span	0		
3 - DISPLAY	Enter your settings here		
31 function	total		
32 backlight	off		
33 brightness	5		
4 - POWER MANAGEMENT		Enter your settings here	
41 LCD-new	1 sec.		
42 mode	operational		
5 - FLOWMETER		Enter your settings here	
51 formula	interpolation		
52 filter	01 (off)		
53 cut-off %	00.0%		
54 calibrat. low-(0)4mA	default		
55 calibrat. high-20mA	default		
6 - OTHERS		Enter your settings here	
61 model	F012-A	F012-A	F012-A
62 software version	03	03	03
63 serial number			
64 pass code	0000		
65 tagnumber	0000000		

