


F113-P

*FLOWRATE INDICATOR / TOTALIZER
WITH HIGH / LOW FLOWRATE ALARMS*

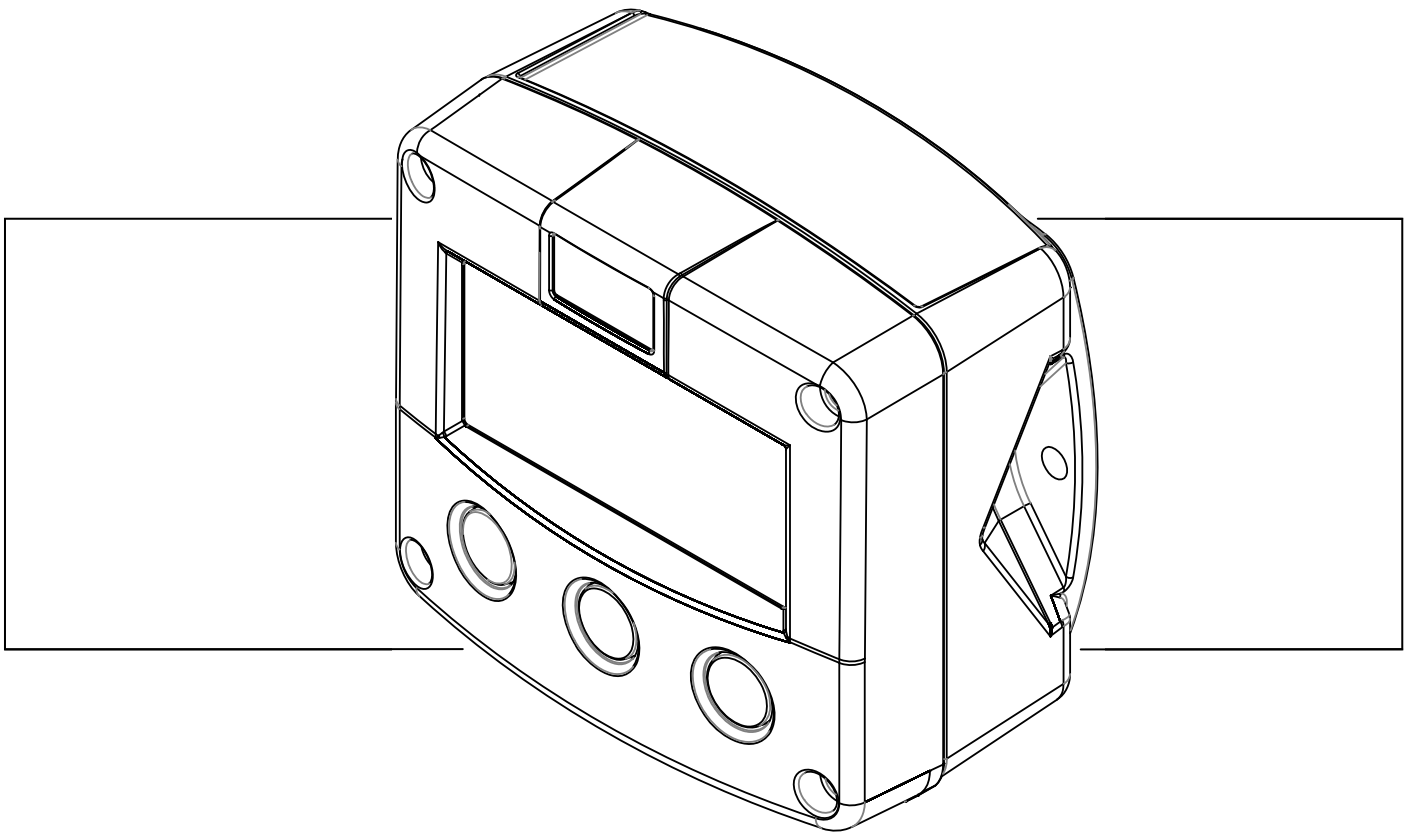

Signal input flowmeter: pulse, Namur and coil

Signal outputs: 4-20mA ref. flowrate and pulse ref. total

Alarm outputs: maximum four flowrate alarms

Options: Intrinsically Safe, Modbus communication, external reset



SAFETY INSTRUCTIONS



- *Any responsibility is lapsed if the instructions and procedures as described in this manual are not followed.*
- *LIFE SUPPORT APPLICATIONS: The F113-P is not designed for use in life support appliances, devices, or systems where malfunction of the product can reasonably be expected to result in a personal injury. Customers using or selling these products for use in such applications do so at their own risk and agree to fully indemnify the manufacturer and supplier for any damages resulting from such improper use or sale.*
- *Electro static discharge does inflict irreparable damage to electronics! Before installing or opening the unit, the installer has to discharge himself by touching a well-grounded object.*
- *This unit must be installed in accordance with the EMC guidelines (Electro Magnetic Compatibility).*
- *Do connect a proper grounding to the aluminum casing as indicated if the F113-P has been supplied with the 115-230V AC power-supply type PM. The green / yellow wire between the back-casing and removable terminal-block may never be removed.*
- *Intrinsically Safe applications: follow the instructions as mentioned in Chapter 5 and consult "Fluidwell F1...-XI - Documentation for Intrinsic Safety".*

DISPOSAL



At the end of its life this product should be disposed of according to local regulations regarding waste electronic equipment. If a battery is present in this product it should be disposed of separately. The separate collection and recycling of your waste equipment will help to conserve natural resources and ensure that it is recycled in a manner that protects the environment.

SAFETY RULES AND PRECAUTIONARY MEASURES

- The manufacturer accepts no responsibility whatsoever if the following safety rules and precautions instructions and the procedures as described in this manual are not followed.
- Modifications of the F113-P implemented without preceding written consent from the manufacturer, will result in the immediate termination of product liability and warranty period.
- Installation, use, maintenance and servicing of this equipment must be carried out by authorized technicians.
- Check the mains voltage and information on the manufacturer's plate before installing the unit.
- Check all connections, settings and technical specifications of the various peripheral devices with the F113-P supplied.
- Open the casing only if all leads are free of potential.
- Never touch the electronic components (ESD sensitivity).
- Never expose the system to heavier conditions than allowed according to the casing classification (see manufacture's plate and chapter 4.2.).
- If the operator detects errors or dangers, or disagrees with the safety precautions taken, then inform the owner or principal responsible.
- The local labor and safety laws and regulations must be adhered to..

ABOUT THE OPERATION MANUAL

This operation manual is divided into two main sections:

- The daily use of the unit is described in chapter 2 "Operation". These instructions are meant for users.
- The following chapters and appendices are exclusively meant for electricians/technicians. These provide a detailed description of all software settings and hardware installation guidance.

This operation manual describes the standard unit as well as most of the options available. For additional information, please contact your supplier.

A hazardous situation may occur if the F113-P is not used for the purpose it was designed for or is used incorrectly. Please carefully note the information in this operating manual indicated by the pictograms:



A "**warning**" indicates actions or procedures which, if not performed correctly, may lead to personal injury, a safety hazard or damage of the F113-P or connected instruments.



Caution !

A "**caution**" indicates actions or procedures which, if not performed correctly, may lead to personal injury or incorrect functioning of the F113-P or connected instruments.



Note !

A "**note**" indicates actions or procedures which, if not performed correctly, may indirectly affect operation or may lead to an instrument response which is not planned.

| | | |
|------------------|---|---------------------------------|
| Hardware version | : | 02.01.xx |
| Software version | : | 02.05.xx |
| Manual | : | HF113PEN_v0501_05 |
| © Copyright 2011 | : | Fluidwell bv - The Netherlands. |

Information in this manual is subject to change without prior notice. The manufacturer is not responsible for mistakes in this material or for incidental damage caused as a direct or indirect result of the delivery, performance or use of this material.

© All rights reserved. No parts of this publication may be reproduced or used in any form or by any means without written permission of your supplier.

CONTENTS MANUAL

| | |
|--|----|
| Safety instructions | 2 |
| Disposal | 2 |
| Safety rules and precautionary measures | 2 |
| About the operation manual | 3 |
| Contents manual..... | 4 |
| 1. Introduction | 5 |
| 1.1. System description of the F113-P | 5 |
| 2. Operational..... | 7 |
| 2.1. General | 7 |
| 2.2. Control panel..... | 7 |
| 2.3. Operator information and functions | 8 |
| 3. Configuration..... | 10 |
| 3.1. Introduction | 10 |
| 3.2. Programming SETUP-level..... | 10 |
| 3.2.1. General | 10 |
| 3.2.2. Overview functions SETUP level | 13 |
| 3.2.3. Explanation OF SETUP-functions..... | 14 |
| 1 - Total | 14 |
| 2 - Flowrate | 15 |
| 3 - Alarm | 16 |
| 4 - Display | 17 |
| 5 - Power management | 17 |
| 6 - Flowmeter | 18 |
| 7 - Analog output..... | 19 |
| 8 - Relay output..... | 21 |
| 9 - Communication (optional)..... | 22 |
| A - Others..... | 22 |
| 4. Installation | 23 |
| 4.1. General directions | 23 |
| 4.2. Installation / surrounding conditions | 23 |
| 4.3. Dimensions- Enclosure | 24 |
| 4.4. Installing the hardware..... | 26 |
| 4.4.1. Introduction | 26 |
| 4.4.2. Voltage selection sensor supply | 27 |
| 4.4.3. Terminal connectors | 28 |
| 5. Intrinsically safe applications..... | 37 |
| 5.1. General information and instructions..... | 37 |
| 5.2. Terminal connectors Intrinsically Safe applications | 38 |
| 5.3. Configuration Examples..... | 40 |
| 5.4. Battery replacement instructions..... | 42 |
| 6. Maintenance..... | 43 |
| 6.1. General directions..... | 43 |
| Appendix A: Technical specification | 44 |
| Appendix B: Problem solving..... | 48 |
| Appendix C: Communication variables..... | 49 |
| Index of this manual..... | 52 |
| List of figures in this manual | 53 |
| Notes | 54 |

1. INTRODUCTION

1.1. SYSTEM DESCRIPTION OF THE F113-P

Functions and features

The flowrate / totalizer model F113-P is a microprocessor driven instrument designed to display flowrate, total and accumulated total as well as the monitoring of the flowrate for high / low values. This product has been designed with a focus on:

- ultra-low power consumption to allow long-life battery powered applications (type PB),
- intrinsic safety for use in hazardous applications (type XI),
- several mounting possibilities with ABS or aluminum enclosures for harsh industrial surroundings,
- ability to process all types of flowmeter signals,
- transmitting possibilities with analog / pulse / alarm and communication (option) outputs.

Flowmeter input

This manual describes the unit with a pulse type input from the flowmeter "-P version". Other versions are available to process (0)4-20mA or 0-10V flowmeter signals.

One flowmeter with a passive or active pulse, Namur or coil signal output can be connected to the F113-P. To power the sensor, several options are available.

Standard outputs

- Max. four configurable alarm outputs: flowrate alarm, high-, low-, high-high- or low-low-flowrate alarm. Switched as long as the flowrate is too high or too low.
- Max. four configurable pulse outputs: a scaled pulse mirroring a certain totalised quantity. Maximum frequency 60Hz.; the pulse length can be set from 7,8msec up to 2 seconds.
- Configurable passive linear 4-20mA analog output with 10-bits resolution mirroring the actual flowrate. Flowrate levels as well as the minimum and maximum signal output can be tuned.

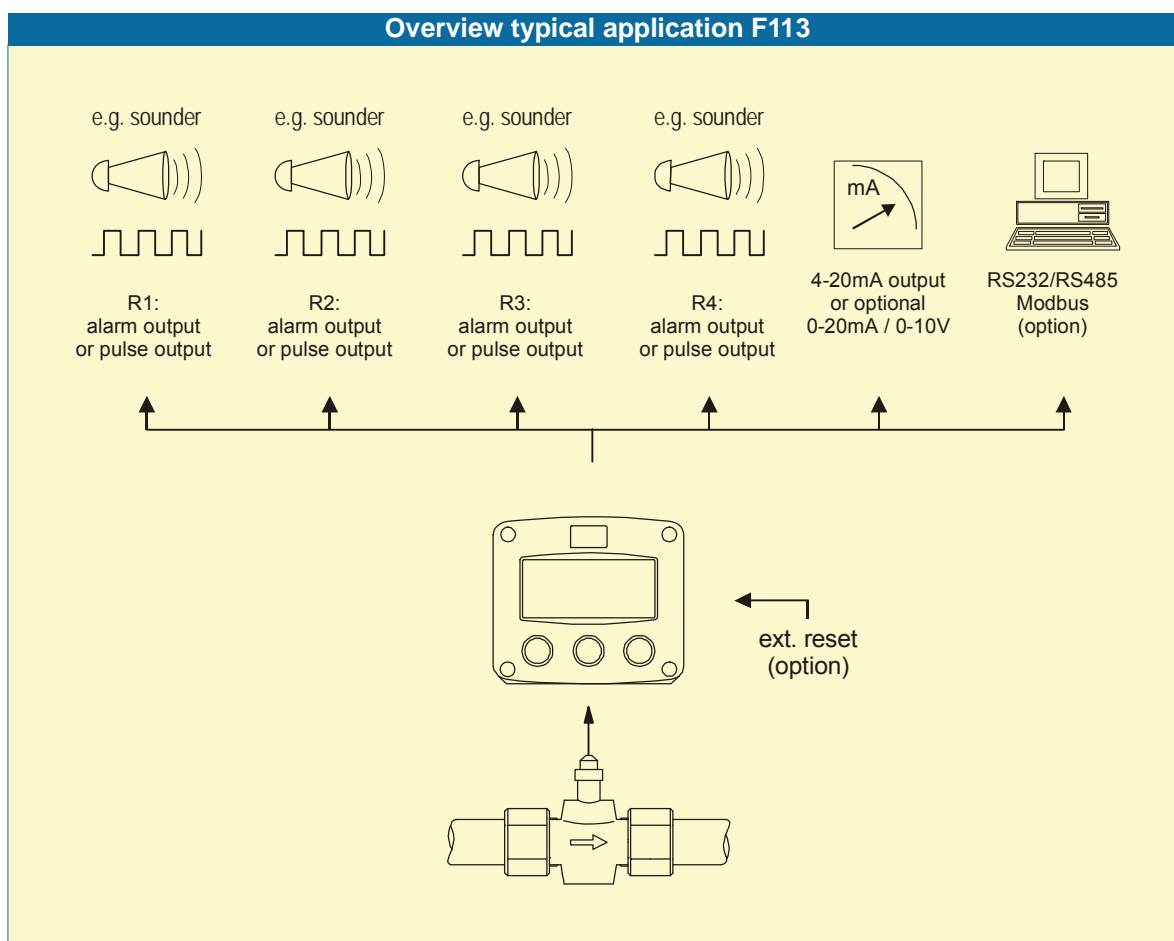


Fig. 1: Typical application for the F113-P.

Configuration of the unit

The F113-P was designed to be implemented in many types of applications. For that reason, a SETUP-level is available to configure your F113-P according to your specific requirements. SETUP includes several important features, such as K-factors, measurement units, signal selection etc. All settings are stored in EEPROM memory and will not be lost in the event of power failure or a drained battery.

To extend the battery-life time (option), please make use of the power-management functions as described in chapter 3.2.3.

Display information

The unit has a large transfective LCD with all kinds of symbols and digits to display measuring units, status information, trend-indication and key-word messages.

Flowrate and totals can be displayed either with the small 8mm digits or with the 17mm digits.

A backup of the total and accumulated total in EEPROM memory is made every minute.

Options

The following options are available: isolated or active 4-20mA / 0-10V / 0-20mA analog output, full Modbus communication RS232/485 (also battery powered), intrinsic safety, mechanical relay or active outputs, power- and sensor-supply options, panel-mount, wall-mount and weather-proof enclosures, flame proof enclosure.

2. OPERATIONAL

2.1. GENERAL



- *The F113-P may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.*
- *Take careful notice of the " Safety rules, instructions and precautionary measures " in the front of this manual.*

This chapter describes the daily use of the F113-P. This instruction is meant for users / operators.

2.2. CONTROL PANEL

The following keys are available:

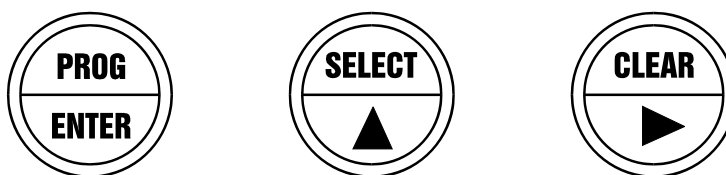


Fig. 2: Control Panel.

Functions of the keys



This key is used to program and save new values or settings.
It is also used to gain access to SETUP-level; please read chapter 3.



This key is used to SELECT accumulated total and flowrate alarm values.
The arrow-key ▲ is used to increase a value after PROG has been pressed or to configure the unit; please read chapter 3.



Press this key twice to CLEAR the value for total.
The arrow-key ► is used to select a digit after PROG has been pressed or to configure the unit; please read chapter 3.

2.3. OPERATOR INFORMATION AND FUNCTIONS

In general, the F113-P will always function at Operator level. The information displayed is dependant upon the SETUP-settings. All pulses generated by the connected flowmeter are measured by the F113-P in the background, whichever screen refresh rate setting is chosen. After pressing a key, the display will be updated very quickly during a 30 second period, after which it will slow-down again.



Fig. 3: Example of display information during process.

For the Operator, the following functions are available:

- **Display flowrate / total or flowrate**
 This is the main display information of the F113-P. After selecting any other information, it will always return to this main display automatically.
 Total is displayed on the upper-line of the display and flowrate on the bottom line.
 It is possible to display flowrate only with the large 17mm digits; in this instance press the SELECT-key to read the total.
 When "-----" is shown, then the flowrate value is too high to be displayed. The arrows \blacktriangleleft \blacktriangleright indicate the increase/decrease of the flowrate trend.
- **Clear total**
 The value for total can be re-initialized. To do so, press CLEAR twice. After pressing CLEAR once, the flashing text "PUSH CLEAR" is displayed. To avoid re-initialization at this stage, press another key than CLEAR or wait for 20 seconds.
 Re-initialization of total DOES NOT influence the accumulated total.
- **Display accumulated total**
 When the SELECT-key is pressed, total and accumulated total are displayed. The accumulated total cannot be re-initialized. The value will count up to 99,999,999,999. The unit and number of decimals are displayed according to the configuration settings for total.

- **Programming the flowrate alarm values**



Note !

Note: This function might not be immediately accessible due to a configuration setting.

When the SELECT-key is pressed a few times, following flowrate alarm values are displayed:

- low-low flowrate alarm (LL): enter here 20 L/min for example,
- low flowrate alarm: enter here 40 L/min for example,
- high flowrate alarm: enter here 200 L/min for example,
- high-high flowrate alarm (HH): enter here 250 L/min for example.

To change the alarm value, the following procedure must be executed:

- 1) press PROG: the word "PROGRAM" will flash or a pass code will be requested,
- 2) use \blacktriangleright to select the digits and \blacktriangle to increase that value,
- 3) confirm the new alarm value by pressing ENTER.



Fig. 4: Example of display information during programming minimum flowrate.

When data is altered but ENTER has not been pressed yet, then the alteration can still be cancelled by waiting for 20 seconds or by pressing ENTER during three seconds: the former value will be reinstated.

- **Flowrate alarm**

When the actual flowrate is outside the allowed range, an alarm message will be displayed indicating the type of alarm: "LO RATE", "HI RATE", "LO-LO RATE" or "HI-HI RATE". The alarm is terminated automatically as soon as the flowrate is within its range again.

- **Low-battery alarm**

When the battery voltage drops, it must be replaced. At first "low-battery" will flash, but as soon as it is displayed continuously, the battery **MUST** be replaced shortly after! Only official batteries may be used, or else the guarantee will be terminated. The remaining lifetime after the first moment of indication is generally several days up to some weeks.



Fig. 5: Example of low-battery alarm.

- **Alarm 01-03**

When "alarm" is displayed, please consult Appendix B: problem solving.

3. CONFIGURATION

3.1. INTRODUCTION

This and the following chapters are exclusively meant for electricians and non-operators. In these, an extensive description of all software settings and hardware connections are provided.



- *Mounting, electrical installation, start-up and maintenance of the instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.*
- *The F113-P may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.*
- *Ensure that the measuring system is correctly wired up according to the wiring diagrams. The housing may only be opened by trained personnel.*
- *Take careful notice of the " Safety rules, instructions and precautionary measures " in the front of this manual.*


3.2. PROGRAMMING SETUP-LEVEL

3.2.1. GENERAL

Configuration of the F113-P is done at SETUP-level. SETUP-level is reached by pressing the PROG/ENTER key for 7 seconds; at which time, both arrows \blacktriangle will be displayed. In order to return to the operator level, PROG will have to be pressed for three seconds. Alternatively, if no keys are pressed for 2 minutes, the unit will exit SETUP automatically. SETUP can be reached at all times while the F113-P remains fully operational.


Note: A pass code may be required to enter SETUP. Without this pass code access to SETUP is denied.

To enter SETUP-level:

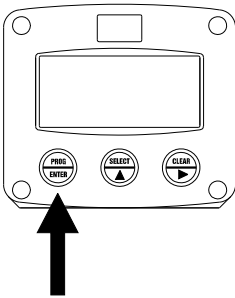

Press  for 7 seconds


Matrix structure SETUP-level:

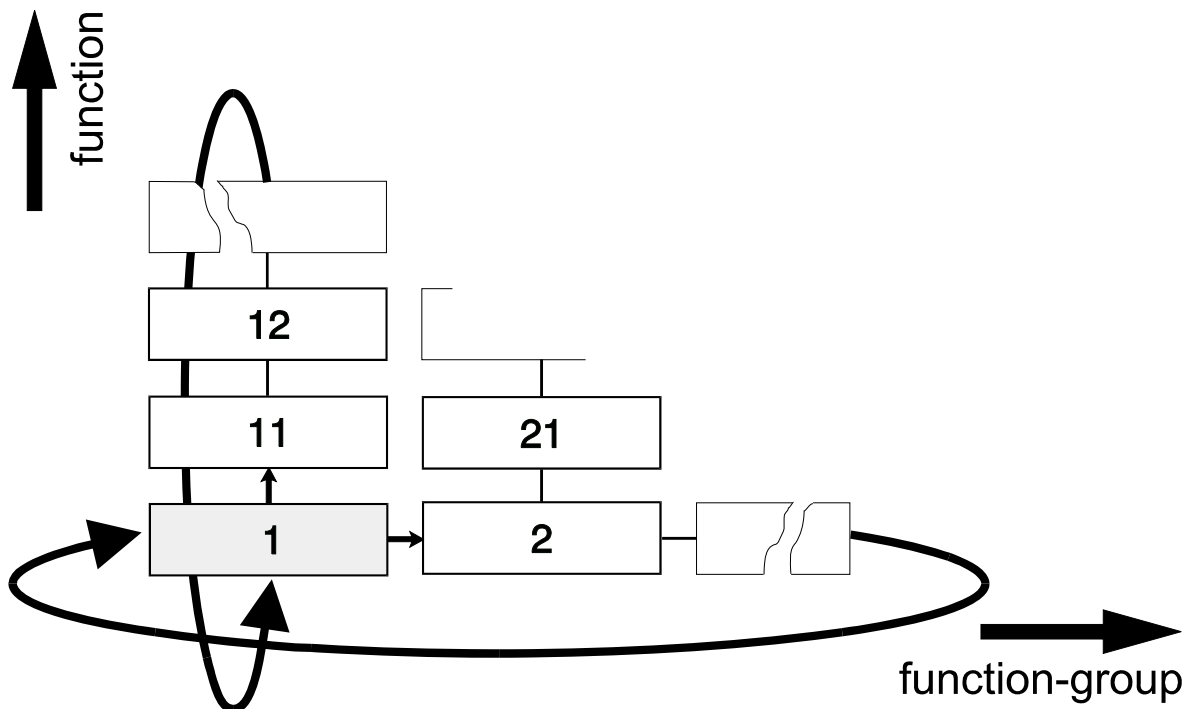


SCROLLING THROUGH SETUP-LEVEL

Selection of function-group and function:

SETUP is divided into several function groups and functions.

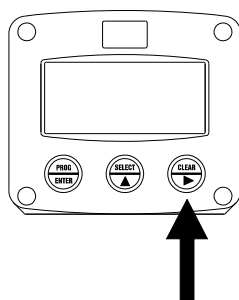

Select function-group with

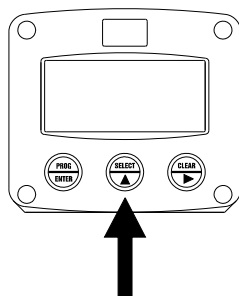


Select function with







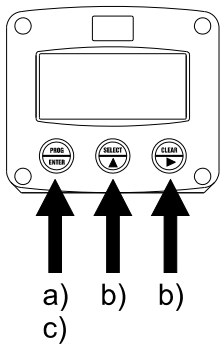

Each function has a unique number, which is displayed below the word "SETUP" at the bottom of the display. The number is a combination of two figures. The first figure indicates the function-group and the second figure the sub-function. Additionally, each function is expressed with a keyword.



After selecting a sub-function, the next main function is selected by scrolling through all "active" sub-functions (e.g. 1[▲], 11[▲], 12[▲], 13[▲], 14[▲], 1[▶], 2[▶], 3[▲], 31 etc.).



To change or select a value:



- a) press  briefly; **PROGRAM** will start flash
- b) select or enter value with  and / or 
- c) press  to confirm the value / selection.

To change a value, use  to select the digits and  to increase that value.

To select a setting, both  and  can be used.


If the new value is invalid, the increase sign  or decrease-sign  will be displayed while you are programming.


When data is altered but ENTER is not pressed, then the alteration can still be cancelled by waiting for 20 seconds or by pressing ENTER for three seconds: the PROG-procedure will be left automatically and the former value reinstated.



Note: alterations will only be set after ENTER has been pressed!

To return to OPERATOR-level:

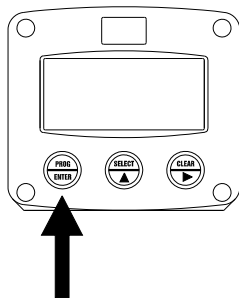

Press  for 3 seconds

In order to return to the operator level, PROG will have to be pressed for three seconds. Also, when no keys are pressed for 2 minutes, SETUP will be left automatically.

3.2.2. OVERVIEW FUNCTIONS SETUP LEVEL

| SETUP FUNCTIONS AND VARIABLES | | | |
|-------------------------------|-------------------------|--|--|
| 1 | TOTAL | | |
| 11 | UNIT | L - m3 - kg - lb - GAL - USGAL - bbl - no unit | |
| 12 | DECIMALS | 0 - 1 - 2 - 3 (Ref: displayed value) | |
| 13 | K-FACTOR: | 0.000010 - 9,999,999 | |
| 14 | DECIMALS K-FACTOR | 0 - 6 | |
| 2 | FLOWRATE | | |
| 21 | UNIT | mL, L, m3, mg, g, kg, ton, GAL, bbl, lb, cf, rev, no unit, scf, Nm3, NL, p | |
| 22 | TIME UNIT | sec - min - hour - day | |
| 23 | DECIMALS | 0 - 1 - 2 - 3 (Ref: displayed value) | |
| 24 | K-FACTOR | 0.000010 - 9,999,999 | |
| 25 | DECIMALS K-FACTOR | 0 - 6 | |
| 26 | CALCULATION | per 1 - 255 pulses | |
| 27 | CUT-OFF | 0.1 - 999.9 seconds | |
| 3 | ALARM | | |
| 31 | FLOWZERO | default - no relays - ignore | |
| 32 | ALARM LOW-LOW | 0000.000 - 9,999,999 | |
| 33 | ALARM LOW | 0000.000 - 9,999,999 | |
| 34 | ALARM HIGH | 0000.000 - 9,999,999 | |
| 35 | ALARM HIGH-HIGH | 0000.000 - 9,999,999 | |
| 36 | DELAY ALARM low-low | 0.1 - 999.9 seconds | |
| 37 | DELAY ALARM LOW | 0.1 - 999.9 seconds | |
| 38 | DELAY ALARM HIGH | 0.1 - 999.9 seconds | |
| 39 | DELAY ALARM high-high | 0.1 - 999.9 seconds | |
| 4 | DISPLAY | | |
| 41 | SET ALARM | operator - setup | |
| 42 | FUNCTION | total - flowrate | |
| 5 | POWER MANAGEMENT | | |
| 51 | LCD UPDATE | fast - 1 sec - 3 sec - 15 sec - 30 sec - off | |
| 52 | BATTERY MODE | operational - shelf | |
| 6 | FLOWMETER | | |
| 61 | SIGNAL | npn - npn_lp - reed - reed_lp - pnp - pnp_lp - namur - coil_hi - coil_lo - act_8.1 - act_12 - act_24 | |
| 7 | ANALOG | | |
| 71 | OUTPUT | disable - enable | |
| 72 | 4mA / 0V | 0000.000 - 9,999,999 | |
| 73 | 20mA / 10V | 0000.000 - 9,999,999 | |
| 74 | CUT-OFF | 0.0 - 9.9% | |
| 75 | TUNE MIN - 4mA / 0V | 0 - 9,999 | |
| 76 | TUNE MAX- 20mA / 10V | 0 - 9,999 | |
| 77 | FILTER | 00 - 99 | |
| 8 | IMPULSE | | |
| 81 | OUTPUT R1 | high - low - high-high - low-low - rate - pulse | |
| 82 | OUTPUT R2 | high - low - high-high - low-low - rate - pulse | |
| 83 | OUTPUT R3 | high - low - high-high - low-low - rate - pulse | |
| 84 | OUTPUT R4 | high - low - high-high - low-low - rate - pulse | |
| 85 | PERIOD TIME | 0 - 250 | |
| 86 | IMPULSE PER | X,XXX,XXX quantity | |
| 9 | COMMUNICATION | | |
| 91 | SPEED / BAUDRATE | 1200 - 2400 - 4800 - 9600 | |
| 92 | ADDRESS | 1 - 255 | |
| 93 | MODE | ASCII - rtu - off | |
| A | OTHERS | | |
| A1 | TYPE / MODEL | | |
| A2 | SOFTWARE VERSION | | |
| A3 | SERIAL NO. | | |
| A4 | PASS CODE | 0000 - 9999 | |
| A5 | TAGNUMBER | 0000000 - 9999999 | |

3.2.3. EXPLANATION OF SETUP-FUNCTIONS

| 1 - TOTAL | |
|---------------------------------|--|
| MEASUREMENT UNIT 11 | <p>SETUP - 11 determines the measurement unit for total, accumulated total and pulse output. The following units can be selected:</p> <p style="text-align: center;">L - m3 - kg - lb. - GAL - USGAL - bbl - _ (no unit).</p> <p>Alteration of the measurement unit will have consequences for operator and SETUP-level values. Please note that the K-factor has to be adapted as well; the calculation is not done automatically.</p> |
| DECIMALS 12 | <p>The decimal point determines for total, accumulated total and pulse output the number of digits following the decimal point. The following can be selected:</p> <p style="text-align: center;">000000 - 111111.1 - 22222.22 - 3333.333</p> |
| K-FACTOR 13 | <p>With the K-factor, the flowmeter pulse signals are converted to a quantity. The K-factor is based on the number of pulses generated by the flowmeter per selected measurement unit (SETUP 11), for example per cubic meter. The more accurate the K-factor, the more accurate the functioning of the system will be.</p> <p>Example 1: Calculating the K-factor. <i>Let us assume that the flowmeter generates 2.4813 pulses per liter and the selected unit is "cubic meters / m3". A cubic meter consists of 1000 parts of one liter which implies 2,481.3 pulses per m3. So, the K-factor is 2,481.3. Enter for SETUP - 13: "2481300" and for SETUP - 14 - decimals K-factor "3".</i></p> <p>Example 2: Calculating the K-factor. <i>Let us assume that the flowmeter generates 6.5231 pulses per gallon and the selected measurement unit is gallons. So, the K-Factor is 6.5231. Enter for SETUP - 13: "6523100" and for SETUP - 14 decimals K-factor "6".</i></p> |
| DECIMALS K-FACTOR 14 | <p>This setting determines the number of decimals for the K-factor entered. (SETUP 13). The following can be selected:</p> <p style="text-align: center;">0 - 1 - 2 - 3 - 4 - 5 - 6</p> <p>Please note that this setting influences the accuracy of the K-factor indirectly. (i.e. the position of the decimal point and thus the value given) This setting has NO influence on the displayed number of digits for total (SETUP 12)!</p> |

2 - FLOWRATE

The settings for total and flowrate are entirely separate. In this way, different units of measurement can be used for each e.g. cubic meters for total and liters for flowrate.
The display update time for flowrate is one second or more.

Note: *these settings also influence the analog output.*

| | |
|---------------------------------|---|
| MEASUREMENT UNIT 21 | <p>SETUP - 21 determines the measurement unit for flowrate. The following units can be selected:</p> <p style="text-align: center;">mL, L, m3, mg, g, kg, ton, GAL, bbl, lb, cf, rev, no unit, scf, Nm3, NL, p</p> <p>Alteration of the measurement unit will have consequences for operator and SETUP-level values. Please note that the K-factor has to be adapted as well; the calculation is not done automatically.</p> |
| TIME UNIT 22 | The flowrate can be calculated per second (SEC), minute (MIN), hour (HR) or day (DAY). |
| DECIMALS 23 | <p>This setting determines for flowrate the number of digits following the decimal point. The following can be selected:</p> <p style="text-align: center;">00000 - 1111.1 - 2222.22 - 3333.333</p> |
| K-FACTOR 24 | With the K-factor, the flowmeter pulse signals are converted to a flowrate. The K-factor is based on the number of pulses generated by the flowmeter per selected measurement unit (SETUP 21), for example per liter. The more accurate the K-factor, the more accurate the functioning of the system will be. For examples read SETUP 13. |
| DECIMALS K-FACTOR 25 | <p>This setting determines the number of decimals for the K-factor (SETUP 24). The following can be selected:</p> <p style="text-align: center;">0 - 1 - 2 - 3 - 4 - 5 - 6</p> <p>Please note that this SETUP - influences the accuracy of the K-factor indirectly. This setting has NO influence on the displayed number of digits for "flowrate" (SETUP 23)!</p> |
| CALCULATION 26 | <p>The flowrate is calculated by measuring the time between a number of pulses, for example 10 pulses. The more pulses the more accurate the flowrate will be. The maximum value is 255 pulses.</p> <p>Note: <i>this setting does influence the update time for the analog output directly (maximum update 10 times a second). If the output response is too slow, decrease the number of pulses.</i></p> <p>Note: <i>the lower the number of pulses, the higher the power consumption of the unit will be (important for battery powered applications).</i></p> <p>Note: <i>for low frequency applications (below 10Hz): do not program more than 10 pulses else the update time will be very slow.</i></p> <p>Note: <i>for high frequency application (above 1kHz) do program a value of 50 or more pulses.</i></p> |
| CUT-OFF TIME 27 | <p>With this setting, you determine a minimum flow requirement threshold, if during this time less than XXX-pulses (SETUP 26) are generated, the flowrate will be displayed as zero.</p> <p>The cut-off time has to be entered in seconds - maximum time is 999 seconds (about 15 minutes).</p> |



Note !

3 - ALARM



Note !

With these settings, it is determined how the flowrate will be monitored and the functionality of the transistor / relay outputs (terminals 03-04, 05-06 and 15-16) be determined.

Note: for transistor / relay output functions: read *SETUP 8 "relays"*.

| | |
|--|---|
| FLOW ZERO 31 | When the <u>flowrate is zero</u> , then it is possible to ignore or disable the flowrate monitoring. The following settings can be selected: DEFAULT: in case of a low-flowrate alarm and zero flow, it will switch the alarm output and indicate the alarm on the display. NO RELAY: in case of a low-flowrate alarm and zero flow, it won't switch the alarm output but will indicate the alarm on the display only. IGNORE: in case of a low-flowrate alarm and zero flow, it won't switch the alarm output and nothing will be indicated on the display. |
| ALARM VALUE LOW - LOW 32 | The low-low alarm is set with this setting. An alarm will be generated as long as the flowrate lower as this. With value 0.0 this function is disabled. |
| ALARM VALUE LOW 33 | The low alarm is set with this setting. An alarm will be generated as long as the flowrate lower as this. With value 0.0 this function is disabled. |
| ALARM VALUE HIGH 34 | The high alarm is set with this setting. An alarm will be generated as long as the flowrate higher as this. With value 0.0 this function is disabled. |
| ALARM VALUE HIGH - HIGH 35 | The high-high alarm is set with this setting. An alarm will be generated as long as the flowrate higher as this. With value 0.0 this function is disabled. |
| DELAY TIME ALARM LOW - LOW 36 | An alarm generated by SETUP 32 "low-low" can be ignored during X-time period. If the actual flowrate is still incorrect after this delay time, then an alarm will be generated. |
| DELAY TIME ALARM LOW 37 | An alarm generated by SETUP 33 "low" can be ignored during X-time period. If the actual flowrate is still incorrect after this delay time, then an alarm will be generated. |
| DELAY TIME ALARM HIGH 38 | An alarm generated by SETUP 34 "high" can be ignored during X-time period. If the actual flowrate is still incorrect after this delay time, then an alarm will be generated. |
| DELAY TIME ALARM HIGH - HIGH 39 | An alarm generated by SETUP 35 "high-high" can be ignored during X-time period. If the actual flowrate is still incorrect after this delay time, then an alarm will be generated. |

4 - DISPLAY

| | |
|------------------------|---|
| SET ALARM 41 | This function determines if the flowrate alarm values can be set at both Operator level and SETUP-level or SETUP-level only. If SETUP has been selected, the alarm values are still visible for the Operator but can not be changed. |
| FUNCTION 42 | The large 17mm digits can be set to display total or flowrate. When "total" is selected, both total and flowrate are displayed simultaneously. When "flowrate" is selected, only flowrate will be displayed with it's measuring unit while total will be displayed after pressing SELECT. |

5 - POWER MANAGEMENT

When used with the internal battery option, the user can expect reliable measurement over a long period of time. The F113-P has several smart power management functions to extend the battery life time significantly. Two of these functions can be set:

| | |
|---------------------------|---|
| LCD NEW 51 | <p>The calculation of the display-information influences the power consumption significantly. When the application does not require a fast display update, it is strongly advised to select a slow refresh rate. Please understand that NO information will be lost; every pulse will be counted and the output signals will be generated in the normal way. The following can be selected:</p> <p style="text-align: center;">Fast - 1 sec - 3 sec - 15 sec - 30 sec - off.</p> <p>Example 3: Battery life-time <i>battery life-time with a coil pick-up, 1KHz. pulses and FAST update: about 2 years.</i> <i>battery life-time with a coil pick-up, 1KHz. pulses and 1 sec update: about 5 years.</i></p> <p>Note: after a button has been pressed by the operator - the display refresh rate will always switch to FAST for 30 seconds. When "OFF" is selected, the display will be switched off after 30 seconds and will be switched on as soon as a button has been pressed.</p> |
| BATTERY-MODE 52 | <p>The unit has two modes: operational or shelf. After "shelf" has been selected, the unit can be stored for several years; it will not count pulses, the display is switched off but all settings and totals are stored. In this mode, power consumption is extremely low. To wake up the unit again, press the SELECT-key twice.</p> |



Note !



Note !

| 6 - FLOWMETER | | | | |
|----------------------|---|----------------------|----------------|------------------------------------|
| SIGNAL 61 | The F113-P is able to handle several types of input signal. The type of flowmeter pickup / signal is selected with SETUP 61. Note: The selections "active pulse" offer a detection level of 50% of the supply voltage. Read also par. 4.4.3. Flowmeter input terminal 09-11. | | | |
| TYPE OF SIGNAL | EXPLANATION | RESISTANCE | FREQ. / MV | REMARK |
| NPN | NPN input | 100K pull-up | 6 kHz. | (open collector) |
| NPN - LP | NPN input with low pass filter | 100K pull-up | 2.2 kHz. | (open collector) less sensitive |
| REED | Reed-switch input | 1M pull-up | 1.2 kHz. | |
| REED - LP | Reed-switch input with low pass filter | 1M pull-up | 120 Hz. | Less sensitive |
| PNP | PNP input | 100K pull-down | 6 kHz. | |
| PNP - LP | PNP input with low pass filter | 100K pull-down | 700 Hz. | Less sensitive |
| NAMUR | Namur input | 820 Ohm pull-down | 4 kHz. | External power required |
| COIL HI | High sensitive coil input | - | 20mV p.t.p. | Sensitive for disturbance! |
| COIL LO | Low sensitive coil input | - | 90mV p.t.p. | Normal sensitivity |
| ACT_8.1 | Active pulse input 8.1 VDC | 3K9 | 10KHz. | External power required |
| ACT_12 | Active pulse input 12 VDC | 4K | 10KHz. | External power required |
| ACT_24 | Active pulse input 24 VDC | 3K | 10KHz. | External power required |

7 - ANALOG OUTPUT

A linear 4-20mA signal (type AB: 0-20mA or type AU: 0-10V) output signal is generated according to the flowrate with a 10 bits resolution. The settings for flowrate (SETUP - 2) directly influence the analog output.

Note: When the analog output is not used, please make sure that setting 71 is disabled, or else the battery life time will be reduced significantly!

When a power supply is available but the output is disabled, a 3.5mA signal will be generated.

The relationship between rate and analog output is set with the following functions:

| | |
|--------------------------------|--|
| DISABLE / ENABLE 71 | The D/A converter has a relatively high power consumption. If the analog output is not being used, select "disable" to switch-off the converter. For more information read par. 4.4.3. |
|--------------------------------|--|

| | |
|--------------------------------|---|
| MINIMUM FLOWRATE 72 | Enter here the flowrate at which the output should generate a 4mA signal (or 0mA / 0V) - in most applications at flowrate "zero". The number of decimals displayed depend upon SETUP 23. The time and measuring units (L/min for example) are dependant upon SETUP 21 and 22 but are not displayed. |
|--------------------------------|---|

| | |
|--------------------------------|--|
| MAXIMUM FLOWRATE 73 | Enter here the flowrate at which the output should generate a 20mA (or 10V) - in most applications at maximum flow. The number of decimals displayed depend upon SETUP 23. The time and measuring units (L/min for example) are dependant upon SETUP 21 and 22 but can not be displayed. |
|--------------------------------|--|

| | |
|-----------------------|--|
| CUT-OFF 74 | To ignore leakage of the flow for example, a low flow cut-off can be set as a percentage of the full range of 16mA (or 20mA / 10V). When the flow is less than the required rate, the current will be 4mA. Examples: |
|-----------------------|--|

| 4mA (SETUP 72) | 20mA (SETUP 73) | CUT-OFF (SETUP 74) | REQUIRED RATE | OUTPUT |
|-------------------|--------------------|-----------------------|---------------------------------------|--------------------------------|
| 0 L/min | 100 L/min | 2% | $(100-0)*2\% = 2.0 \text{ L/min}$ | $4+(16*2\%) = 4.32\text{mA}$ |
| 20 L/min | 800 L/min | 3.5% | $(800-20)*3.5\% = 27.3 \text{ L/min}$ | $4+(16*3.5\%) = 4.56\text{mA}$ |

| | |
|------------------------------|---|
| TUNE MIN / 4MA 75 | The initial minimum analog output value is 4mA (or 0mA / 0V). However, this value might differ slightly due to external influences such as temperature for example. The 4mA value (or 0mA / 0V) can be tuned precisely with this setting. |
|------------------------------|---|

- ***Before tuning the signal, be sure that the analog signal is not being used for any application!***

After pressing PROG, the current will be about 4mA (or 0mA / 0V). The current can be increased/decreased with the arrow-keys and is directly active.

Press ENTER to store the new value.

| | |
|-------------------------------|---|
| TUNE MAX / 20MA 76 | The initial maximum analog output value is 20mA (or 10V). However, this value might differ slightly due to external influences such as temperature for example. The 20mA value (or 10V) can be tuned precisely with this setting. |
|-------------------------------|---|

- ***Before tuning the signal, be sure that the analog signal is not being used for any application!***

After pressing PROG, the current will be about 20mA. The current can be increased/decreased with the arrow-keys and is directly active. Press ENTER to store the new value.

Continued next page >>>



Note !



7 - ANALOG OUTPUT (CONTINUED)

| | | | | |
|----------------------|---|----------------------|----------------------|----------------------|
| FILTER 77 | <p>This function is used to stabilize the analog output signal. The output value is updated every 0.1 second. With the help of this digital filter a more stable but less precise reading can be obtained. The filter principal is based on three input values: the filter level (01-99), the last analog output value and the last average value. The higher the filter level, the longer the response time on a value change will be. Below, several filter levels with their response times are indicated:</p> | | | |
| FILTER VALUE | RESPONSE TIME ON STEP CHANGE OF ANALOG VALUE. TIME IN SECONDS | | | |
| | 50% INFLUENCE | 75% INFLUENCE | 90% INFLUENCE | 99% INFLUENCE |
| 01 | filter disabled | filter disabled | filter disabled | filter disabled |
| 02 | 0.1 second | 0.2 second | 0.4 second | 0.7 second |
| 03 | 0.2 second | 0.4 second | 0.6 second | 1.2 seconds |
| 05 | 0.4 second | 0.7 second | 1.1 seconds | 2.1 seconds |
| 10 | 0.7 second | 1.4 seconds | 2.2 seconds | 4.4 seconds |
| 20 | 1.4 seconds | 2.8 seconds | 4.5 seconds | 9.0 seconds |
| 30 | 2.1 seconds | 4 seconds | 7 seconds | 14 seconds |
| 50 | 3.5 seconds | 7 seconds | 11 seconds | 23 seconds |
| 75 | 5.2 seconds | 10 seconds | 17 seconds | 34 seconds |
| 99 | 6.9 seconds | 14 seconds | 23 seconds | 45 seconds |

8 - RELAY OUTPUT

These settings determine the function of the switch outputs.

Note: If the unit is Intrinsically Safe, it will have two outputs. If type OS has been supplied, it will have four outputs. Else it has three outputs.

Note: the alarm settings - *SETUP 3* - need to correspond with the selections below.



Note !

OUTPUT R1 81

Assign the output function to R1:
high alarm, low alarm, high-high alarm, low-low alarm, flowrate alarm or pulse output (max 5Hz).

Note: *Intrinsically safe applications: this setting has no influence on any output; please read 83: R3.*

OUTPUT R2 82

Assign the output function to R2:
high alarm, low alarm, high-high alarm, low-low alarm, flowrate alarm or pulse output (max 60Hz).



Note !

OUTPUT R3 83

Assign the output function to R3:
high alarm, low alarm, high-high alarm, low-low alarm, flowrate alarm or pulse output (max 60Hz).

Note: *Intrinsically safe applications: This fast output is assigned to output R1 and not R3.*



Note !

OUTPUT R4 84

This output is only available if type OS has been supplied (four mechanic relay outputs). Assign the output function to R4:
high alarm, low alarm, high-high alarm, low-low alarm, flowrate alarm or pulse output. (max 5 Hz).



Note !

PERIOD TIME PULSE OUTPUT 85

The period time determines the time that the transistor or relay will be switched; in other words the pulse length. The minimum time between the pulses is as long as the period time.

One period is approx. 7.8 msec. If the value selected is "zero", the pulse output is disabled. The maximum value is 255 periods.

Note: *If the frequency should go out of range - when the flowrate increases for example - an internal buffer will be used to "store the missed pulses": As soon as the flowrate reduces again, the buffer will be "emptied".*

It might be that pulses will be missed due to a buffer-overflow, so it is advised to program this setting within it's range.

If mechanic relays are used for the pulse output(s), it is recommended to reduce the max. output frequency to 0.5Hz, else the life time will be reduced significantly.

| NUMBER OF PERIODS | PERIOD TIME | MAX. FREQUENCY |
|-------------------|----------------|----------------|
| 0 | disabled | disabled |
| 1 | 0,0078 seconds | 64 Hz. |
| 2 | 0,0156 seconds | 32 Hz. |
| 3 | 0,0234 seconds | 21 Hz. |
| 64 | 0,5000 seconds | 1 Hz. |
| 255 | 1,9922 seconds | 0.25 Hz. |
| | | |

PULSE PER 86

According to the measurement unit settings for total, a pulse will be generated every X-quantity. Enter this quantity here while taking the displayed decimal position and measuring unit into account.

| 9 - COMMUNICATION (OPTIONAL) | |
|---|--|
| The functions described below deal with hardware that is not part of the standard delivery. Programming of these functions does not have any effect if this hardware has not been installed. Consult Appendix C and the Modbus communication protocol description for a detailed explanation. | |
| BAUDRATE 91 | For external control, the following communication speeds can be selected: 1200 - 2400 - 4800 - 9600 baud |
| BUS ADDRESS 92 | For communication purposes, a unique identity can be attributed to every F113-P. This address can vary from 1-255. |
| MODE 93 | The communication protocol is Modbus ASCII or RTU mode. Select OFF, to disable this communication function. |

| A - OTHERS | |
|--------------------------------------|---|
| TYPE OF MODEL A1 | For support and maintenance it is important to have information about the characteristics of the F113-P. Your supplier will ask for this information in the case of a serious breakdown or to assess the suitability of your model for upgrade considerations. |
| VERSION SOFTWARE A2 | For support and maintenance it is important to have information about the characteristics of the F113-P. Your supplier will ask for this information in the case of a serious breakdown or to assess the suitability of your model for upgrade considerations. |
| SERIAL NUMBER A3 | For support and maintenance it is important to have information about the characteristics of the F113-P. Your supplier will ask for this information in the case of a serious breakdown or to assess the suitability of your model for upgrade considerations. |
| PASS CODE A4 | All SETUP-values can be pass code protected. This protection is disabled with value 0000 (zero). Up to and including 4 digits can be programmed, for example 1234. |
| TAGNUMBER A5 | For identification of the unit and communication purposes, a unique tag number of maximum 7 digits can be entered. |

4. INSTALLATION




Caution!

4.1. GENERAL DIRECTIONS

- Mounting, electrical installation, start-up and maintenance of this instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.
- The F113-P may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.
- Ensure that the measuring system is correctly wired up according to the wiring diagrams. Protection against accidental contact is no longer assured when the housing cover is removed or the panel cabinet has been opened (danger from electrical shock). The housing may only be opened by trained personnel.
- Take careful notice of the " Safety rules, instructions and precautionary measures " at the front of this manual.


4.2. INSTALLATION / SURROUNDING CONDITIONS

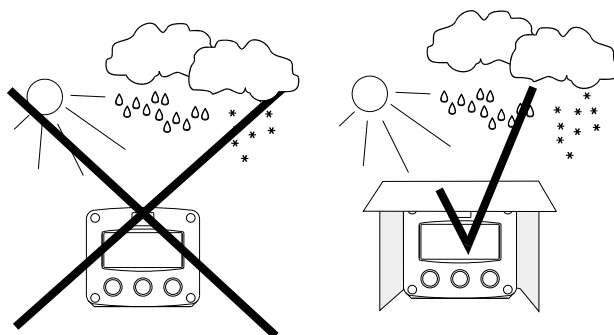

Take the relevant IP classification of the casing into account (see manufactures plate). Even an IP67 (NEMA 4X) casing should NEVER be exposed to strongly varying (weather) conditions.

When panel-mounted, the unit is IP65 (NEMA 4X)!

When used in very cold surroundings or varying climatic conditions, take the necessary precautions against moisture by placing a dry sachet of silica gel, for example, inside the instrument case.

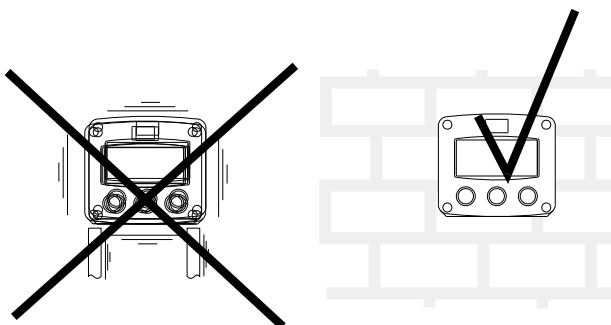

Mount the F113-P on a solid structure to avoid vibrations.

4.3. DIMENSIONS- ENCLOSURE

Aluminum enclosures:



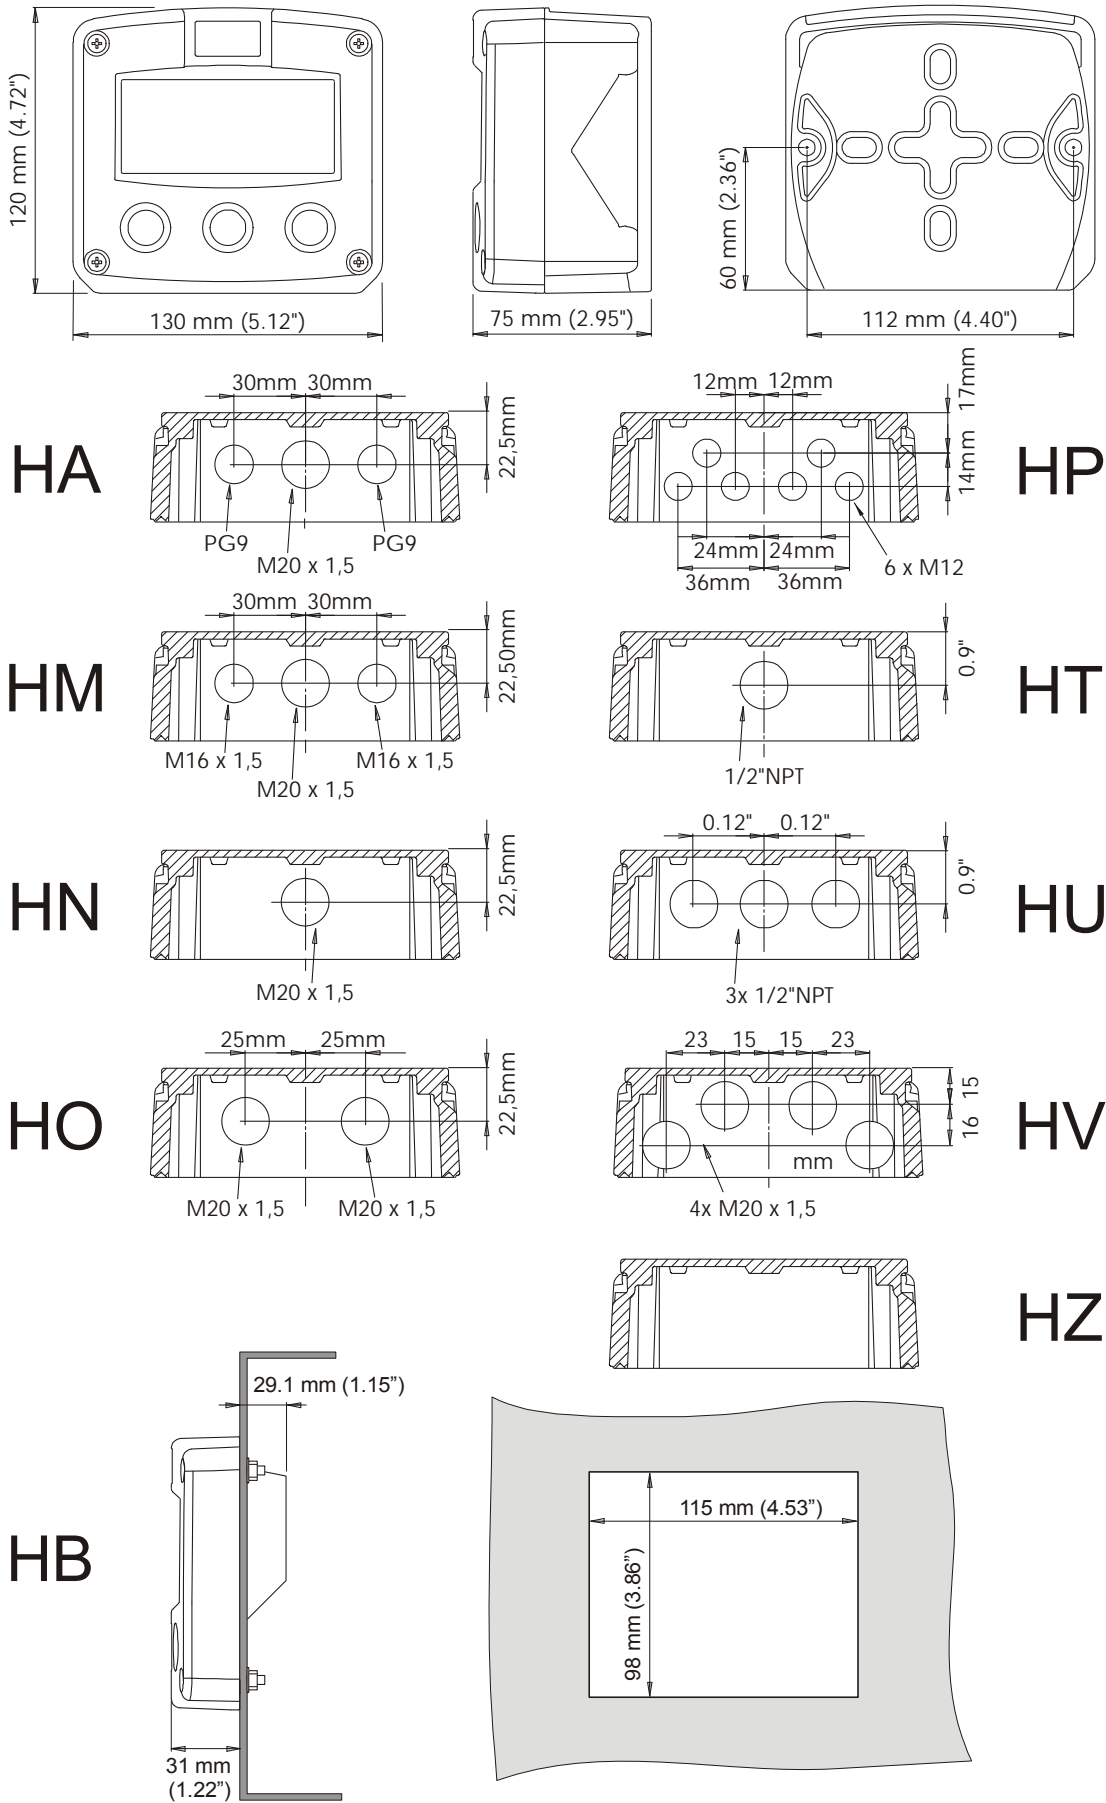


Fig. 6: Dimensions aluminum enclosures.



GRP enclosures:

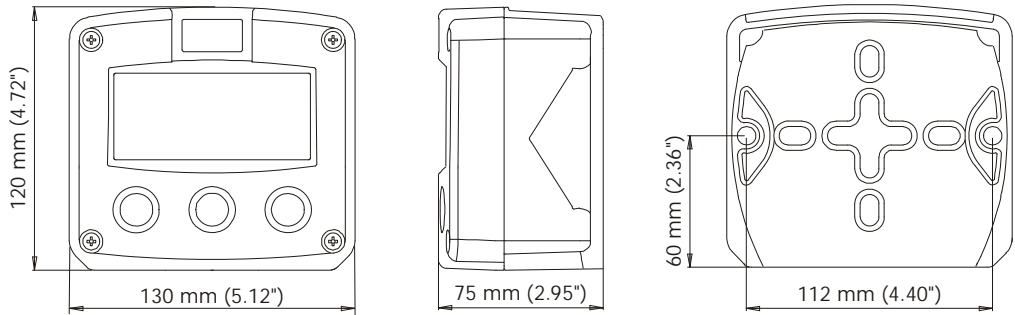

HK back box:
(flat bottom)


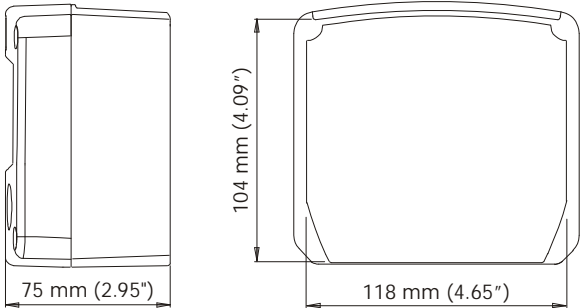


HD
HK

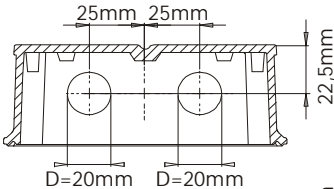



HG

HE

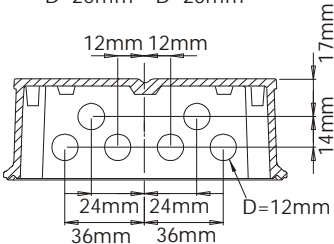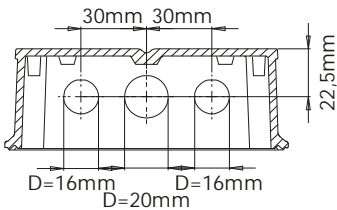

HH

HF

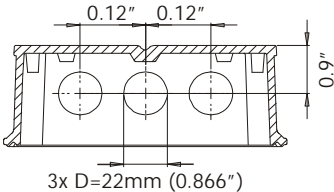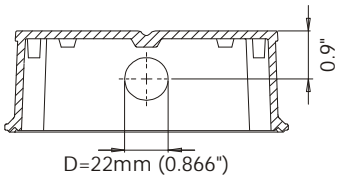

HJ

HC


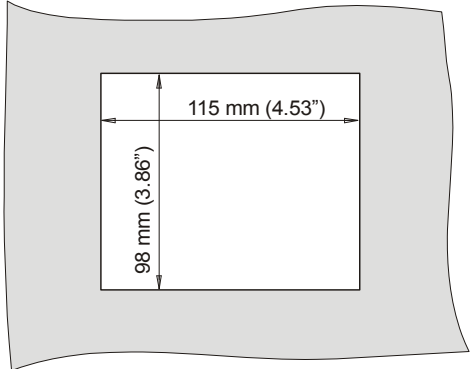


Fig. 7: Dimensions GRP enclosures.

4.4. INSTALLING THE HARDWARE

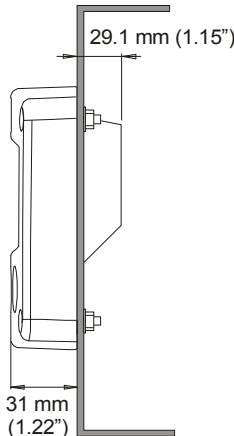

4.4.1. INTRODUCTION

- Electro static discharge does inflict irreparable damage to electronics! Before installing or opening the unit, the installer has to discharge himself by touching a well-grounded object.
- This unit must be installed in accordance with the EMC guidelines (Electro Magnetic Compatibility).



Aluminum enclosures

- When installed in an aluminum enclosure and a potentially explosive atmosphere requiring apparatus of equipment protection level Ga and Da, the unit must be installed such that, even in the event of rare incidents, an ignition source due to impact or friction sparks between the enclosure and iron/steel is excluded.
- Do ground the aluminum enclosure properly as indicated, if the F113-P has been supplied with the 115-230V AC power-supply type PM. The green / yellow wire between the back-casing and removable terminal-block may never be removed.

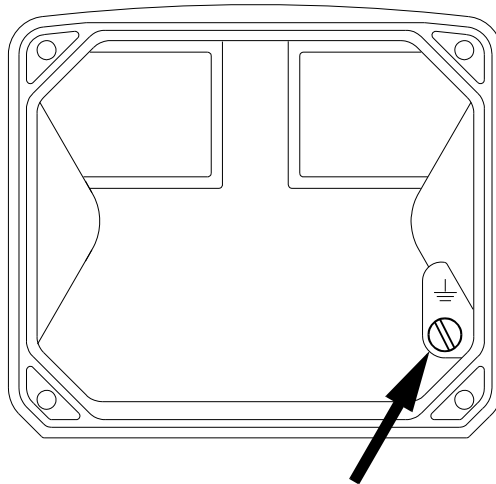


Fig. 8: Grounding aluminum enclosure with type PM 115-230V AC.

FOR INSTALLATION, PAY EMPHATIC ATTENTION TO:

- Separate cable glands with effective IP67 (NEMA4X) seals for all wires.
- Unused cable entries: ensure that you fit IP67 (NEMA4X) plugs to maintain rating.
- A reliable ground connection for both the sensor, and if applicable, for the metal casing.
- An effective screened cable for the input signal, and grounding of its screen to terminal 9 (GND) or at the sensor itself, whichever is appropriate to the application.

4.4.2. VOLTAGE SELECTION SENSOR SUPPLY

For Intrinsicly Safe applications: read chapter 5.

Type PB / PC / PX (AP) - battery powered and output loop-powered applications:

Terminal 11 provides a limited supply voltage of 3.2 V DC (coil signals 1.2V) for the signal output of the flowmeter.



Note: This voltage MAY NOT be used to power the flowmeters electronics, converters etc, as it will not provide adequate sustained power ! All energy used by the flowmeters pick-up will directly influence the battery life-time. It is strongly advised to use a "zero power" pickup such as a coil or reed-switch when operating without external power. It is possible to use some low power NPN or PNP output signals, but the battery life time will be significantly reduced (consult your distributor).

Type PD / PF / PM: Sensor supply: 1.2 - 3.2V - 8.2V - 12V or 24 V DC:

With this option, a real power supply for the sensor is available. The flowmeter can be powered with 8.2 - 12 or 24 V DC.

Total power consumption PD: max. 50mA@24V and PF / PM: max. 400mA@24V.

The voltage is selected with the three switches inside the enclosure.



- **Warning:** be sure that all the leads to the terminals are disconnected from the unit when the internal plastic protection cover has been removed !
- **HIGH VOLTAGE 400V !! NEVER connect the mains power supply to the unit when the plastic protection cover has been removed !!!**

First, remove the terminal strip(s) after which the internal plastic cover can be removed. The switches are located in the top left corner (type PD) or on the right hand (type PF / PM) as indicated:

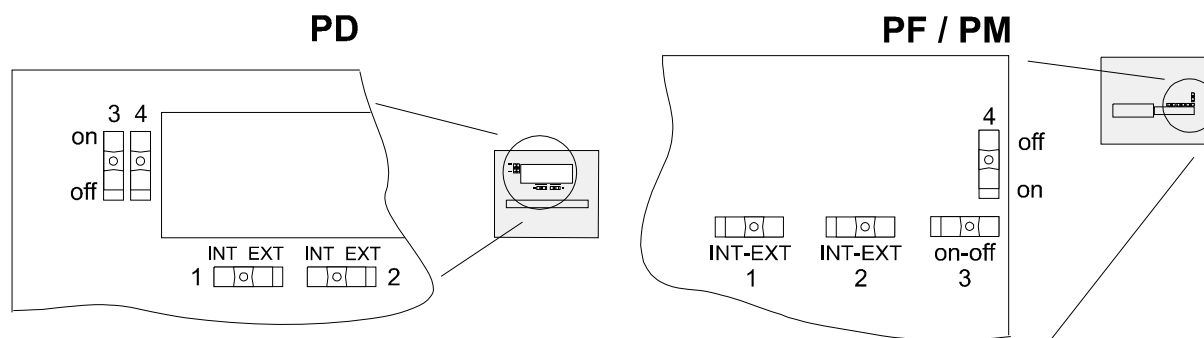


Fig. 9: switch position voltage selection (type PD, PF and PM).

Switch positions

| SENSOR A | |
|----------|------------|
| SWITCH 1 | VOLTAGE |
| internal | 3.2 V DC |
| external | switch 3+4 |

| SENSOR B | |
|----------|---------|
| SWITCH 2 | VOLTAGE |
| | |
| | |

| VOLTAGE SELECTION | | |
|-------------------|----------|----------|
| SWITCH 3 | SWITCH 4 | VOLTAGE |
| on | on | 8.2 V DC |
| on | off | 12 V DC |
| off | off | 23 V DC |

Function switch 1: voltage selection sensor A - terminal 11.

Function switch 2: not available for this Model.

Function switch 3+4: the combination of these switches determine the voltage as indicated. Do move switch 1 to the OFF position to enable the selected voltage with switch 3+4.

4.4.3. TERMINAL CONNECTORS

For *Intrinsically Safe* applications: read chapter 5.

The following terminal connectors are available:

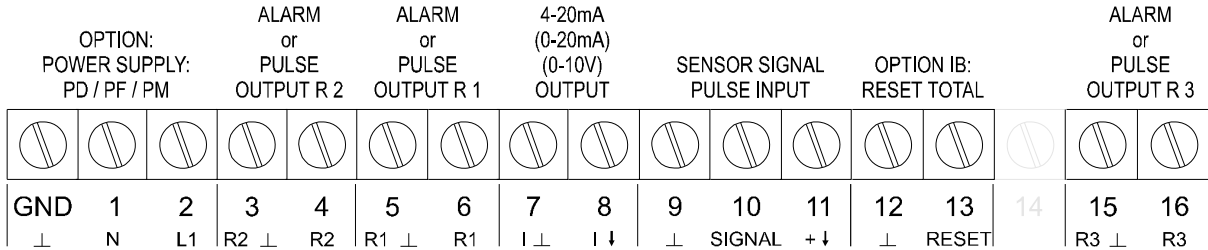


Fig. 10: Overview of terminal connectors standard configuration F113-P and options.

REMARKS: TERMINAL CONNECTORS:

Power Supply: Terminal GND- 01- 02 **only available with type PD / PF or PM:**

| TYPE | SENSOR SUPPLY | Terminal | | | backlight | TYPE AA | TYPE AU | Type OA | Type OR |
|----------------------|---|----------|----|----|-----------|---------|---------|---------|---------|
| | | GND | 01 | 02 | | | | | |
| PD 8-24V AC | 8,2-12-24V max. 50mA | | AC | AC | ◇ | ◇ | ◇ | ◇ | |
| PD 8-30V DC | 8,2-12-24V max. 50mA | L- | L+ | | ◇ | ◇ | ◇ | ◇ | |
| PF 24V AC ± 15% | 8,2-12-24V max. 400mA | | AC | AC | ◇ | ◇ | ◇ | | ◇ |
| PF 24V DC ± 15% | 8,2-12-24V max. 400mA | L- | L+ | | ◇ | ◇ | ◇ | | ◇ |
| PM 115-230V AC ± 15% | 8,2-12-24V max. 400mA | EARTH | AC | AC | ◇ | ◇ | ◇ | ◇ | ◇ |
| Note PD | do not use a AC autotransformer (Spartrafo) without a galvanic isolation. | | | | | | | | |
| Note PF / PM | The total consumption of the sensors and outputs may not exceed 400mA@24V | | | | | | | | |

◇=option

For *Intrinsically Safe* applications: read chapter 5.

Terminal 03-04; alarm / pulse output R2:

This output is always a fast output. With SETUP 8, the function of this output is set to a flowrate alarm output or pulse output.

If pulse output function is selected: the maximum pulse frequency of this output is 60Hz. If a relay output option has been supplied, be sure that the output frequency does not exceed 0,5Hz else the life-time of the relay will be reduced significantly.


Terminal 05-06; alarm / pulse output R1:

This output is always a slow output. With SETUP 8, the function of this output is set to a flowrate alarm output or pulse output.


If pulse output function is selected: the maximum pulse frequency of this output is 0,5Hz.

Type OA:

An active 24V DC signal flowrate alarm output or pulse output is available with this option. Max. driving capacity 50mA@24V per output. (Requires power supply type PD / PF / PM).

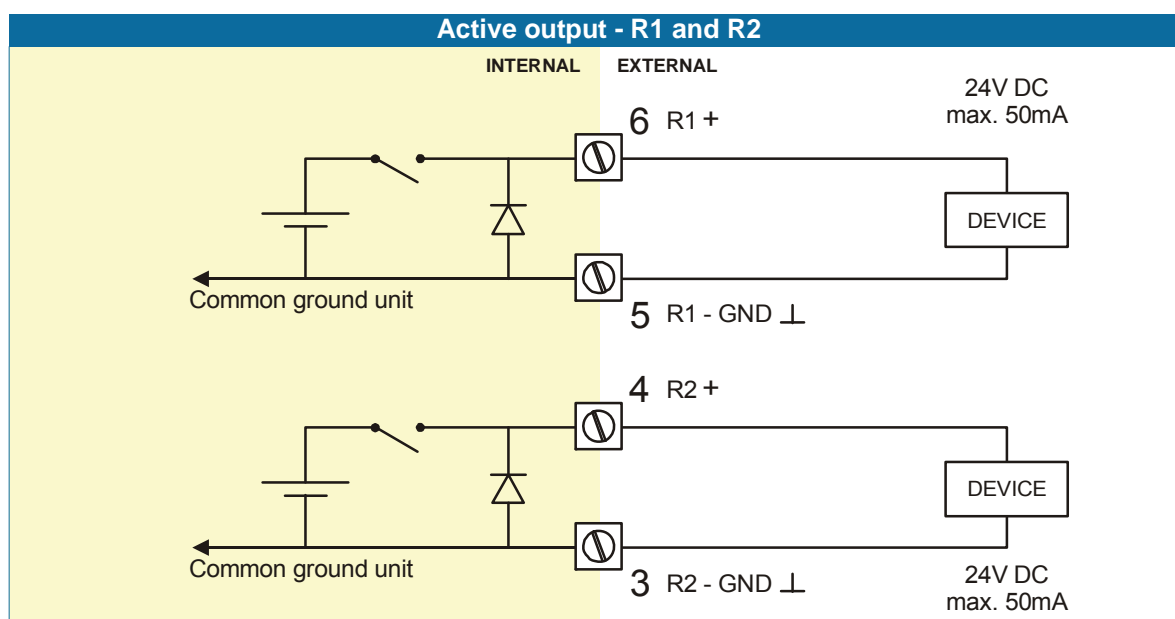
**Type OR:**

A mechanical relay output flowrate alarm output or pulse output is available with this option. Max. switch power 240V 0,5A per output. (Requires power supply type PF / PM).

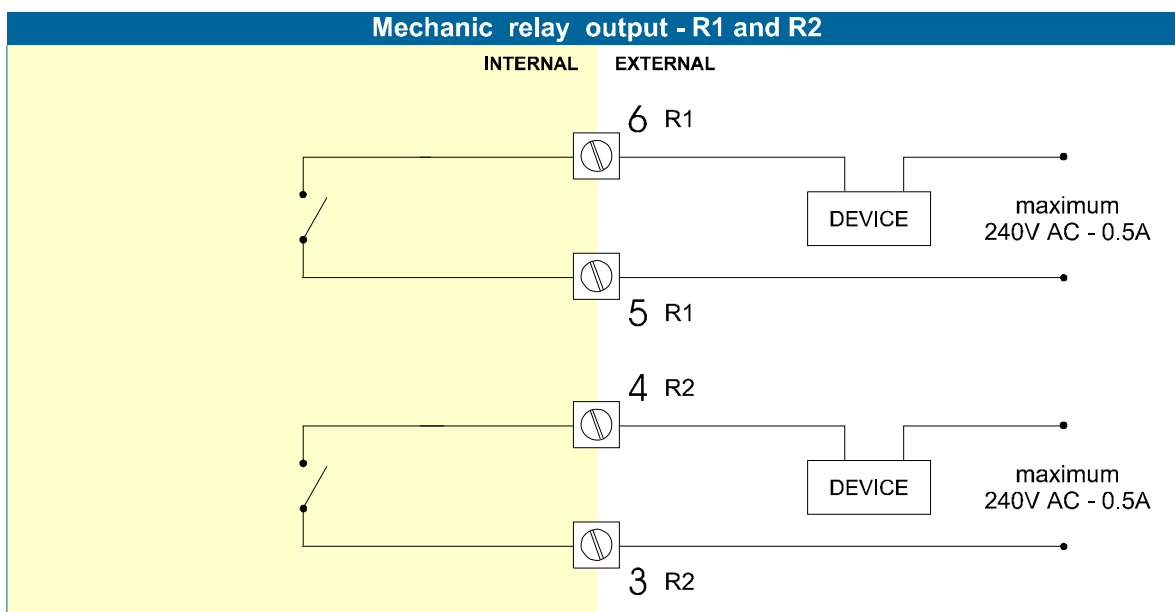

Type OT:

A passive transistor output is available with this option. Max. driving capacity 300mA@50V DC.

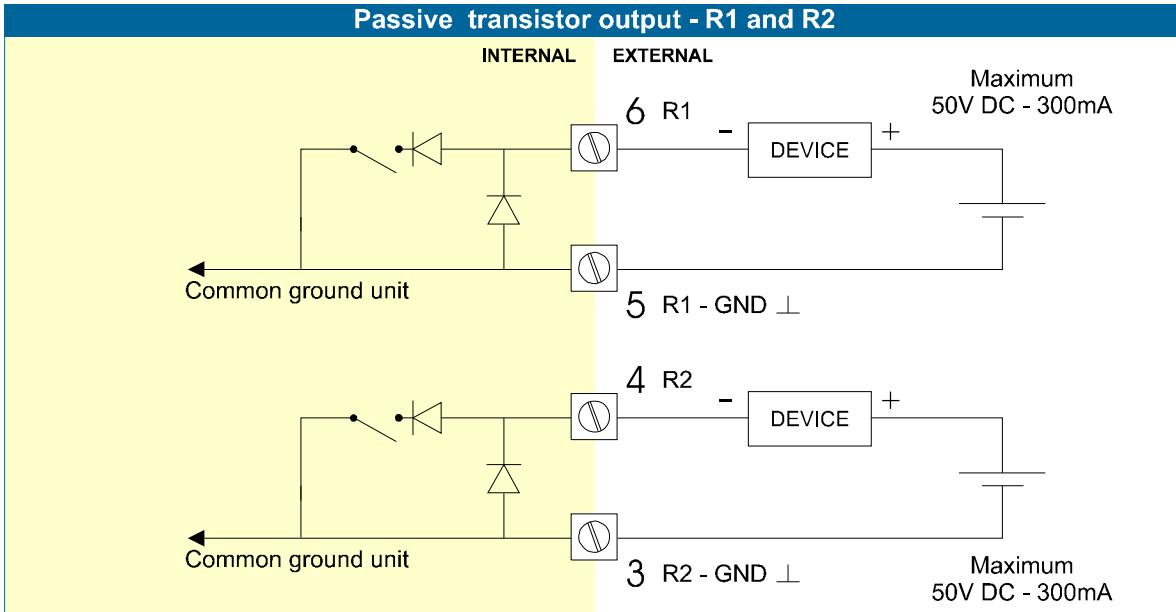

Terminal 07-08 POWER SUPPLY type PX - output loop powered:


Connect an external power supply of 8-24 volts AC or 8-30VDC to these terminals or a 4-20mA loop. For a DC supply: connect the "-" to terminal 7 and the "+" to terminal 8. When power is applied to these terminals, the (optional) internal battery will be disabled / enabled automatically to extend the battery life time. (Only valid for standard passive output).

Terminal 07-08 analog output (SETUP 7) :

An analog output signal proportional to the ratio is available as standard.

Type AA:


An active 4-20mA signal proportional to the flowrate is available with this option. When the output is disabled, a 3.5mA signal will be generated on these terminals. Max. driving capacity 1000 Ohm @ 24VDC. (Requires power supply type PD / PF / PM).

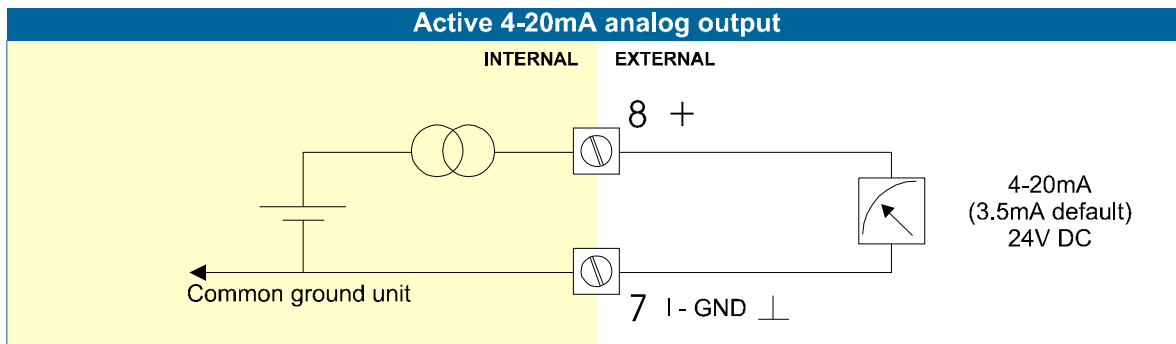

Type AB:

An active 0-20mA signal proportional to the flowrate is available with this option.

Max. driving capacity 1000 Ohm @ 24VDC. (Requires power supply type PD / PF / PM).

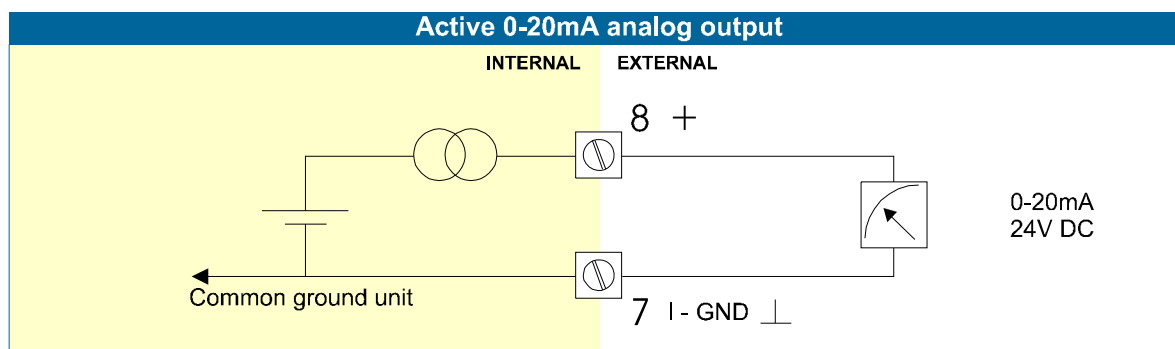**Type AF:**

For the Intrinsically Safe floating 4-20mA signal: please read Chapter 5.


Type AI:

An isolated 4-20mA signal proportional to the flowrate is available with this option.

When the output is disabled, a 3.5mA signal will be generated on these terminals.


Max. driving capacity 1000 Ohm @ 30VDC.

This option can be battery powered but the life time of the battery is about 2 -3 years.

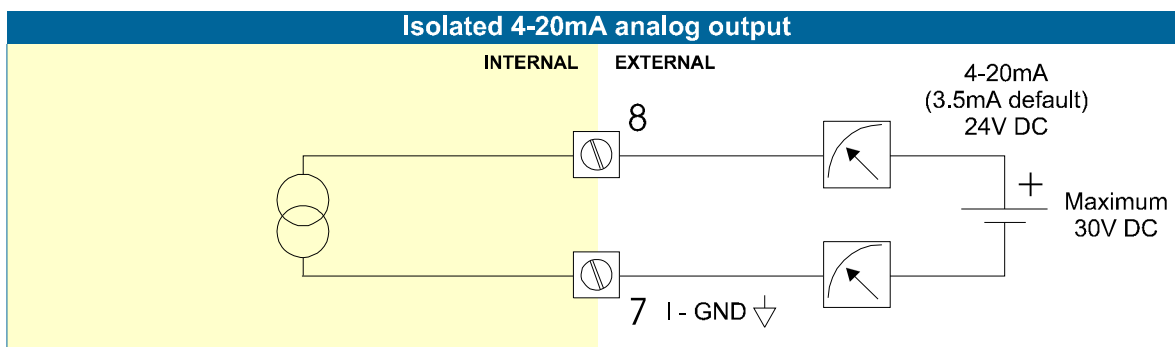**Type AP:**


A passive 4-20mA signal proportional to the flowrate is available with this option. When a power supply is connected but the output is disabled, a 3.5mA signal will be generated.

Max. driving capacity 1000 Ohm. This output does loop power the unit as well (type PX).

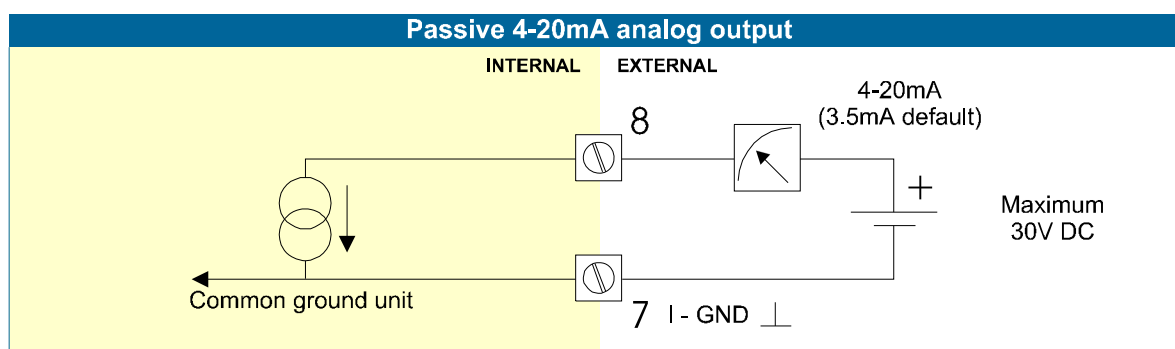

Type AU:

A 0-10VDC signal proportional to the flowrate is available with this option.
 Max. load 10mA @ 10VDC. (Requires power supply type PD / PF / PM).

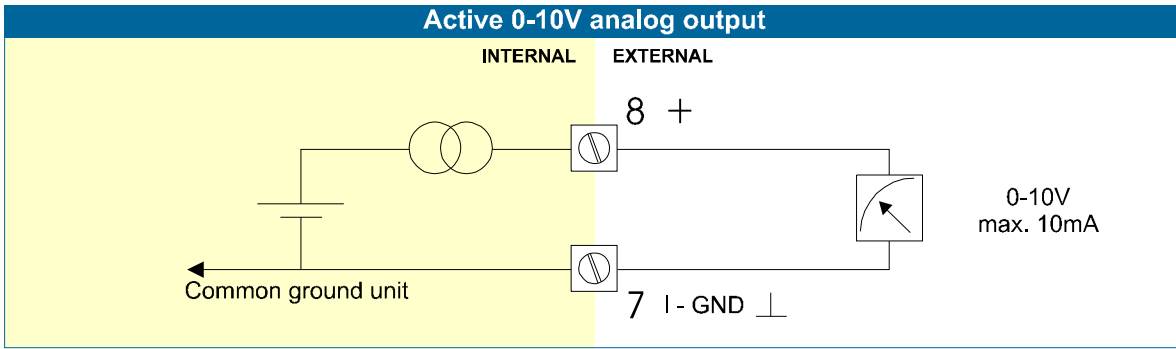

Terminal 09-11; Flowmeter input:

Three basic types of flowmeter signals can be connected to the unit: pulse, active pulse or coil. The screen of the signal wire must be connected to the common ground terminal 09. (unless earthed at the sensor itself) The maximum input frequency is approximately 10 kHz (depending on the type of signal). The input signal type has to be selected with the correct SETUP-function (read par. 3.2.3.)

Coil-signal:


The F113-P is suitable for use with flowmeters which have a coil output signal. Two sensitivity levels can be selected with the SETUP-function:

COIL LO: sensitivity from about 120mV peak to peak.

COIL HI: sensitivity from about 20mV peak to peak.


Type ZF offers for setting COIL HI : sensitivity from about 10mV peak to peak.

Type ZG offers for setting COIL HI : sensitivity from about 5mV peak to peak.

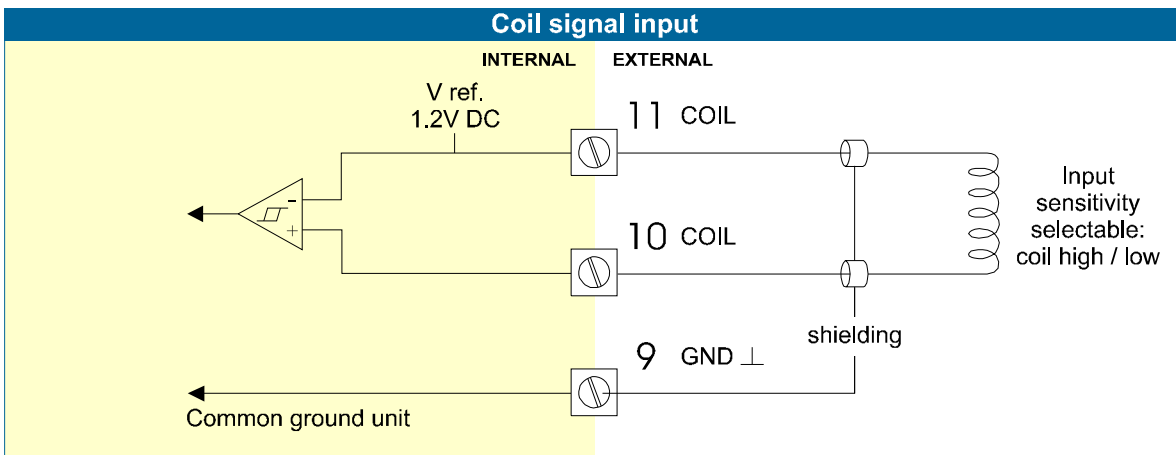

Pulse-signal NPN / NPN-LP:


The F113-P is suitable for use with flowmeters which have a NPN output signal. For reliable pulse detection, the pulse amplitude has to go below 1.2V. Signal setting NPN-LP employs a low-pass signal noise filter, which limits the maximum input frequency - read par. 3.2.3.

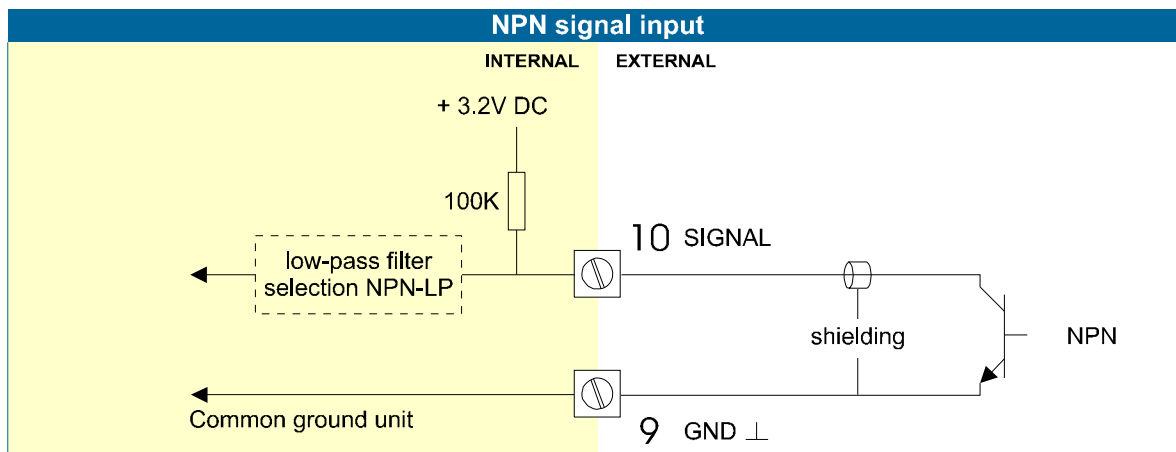**Pulse-signal PNP / PNP-LP:**

The F113-P is suitable for use with flowmeters which have a PNP output signal. 3.2V is offered on terminal 11 which has to be switched by the sensor to terminal 10 (SIGNAL). For a reliable pulse detection, the pulse amplitude has to go above 1.2V. Signal setting PNP-LP employs a low-pass signal noise filter, which limits the maximum input frequency - read par. 3.2.3.


A sensor supply voltage of 8.1 -12 or 24V DC can be provided via types PD-PM.

For a signal detection level of 50% of the supply voltage: please refer to "active signals".

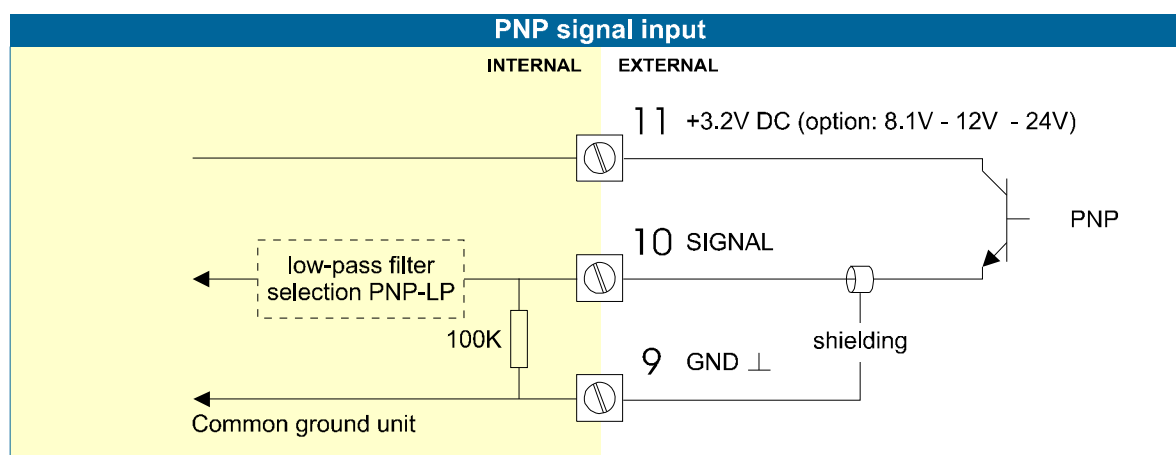


Active signals 8.1V - 12V and 24V:

If a sensor gives an active signal, please read par. 3.2.3. The detection levels are 50% of the selected supply voltage; approximately 4V (ACT_8.1) or 6V (ACT_12) or 12V (ACT_24). Active signal selection may well be desired in the case of types PD-PM

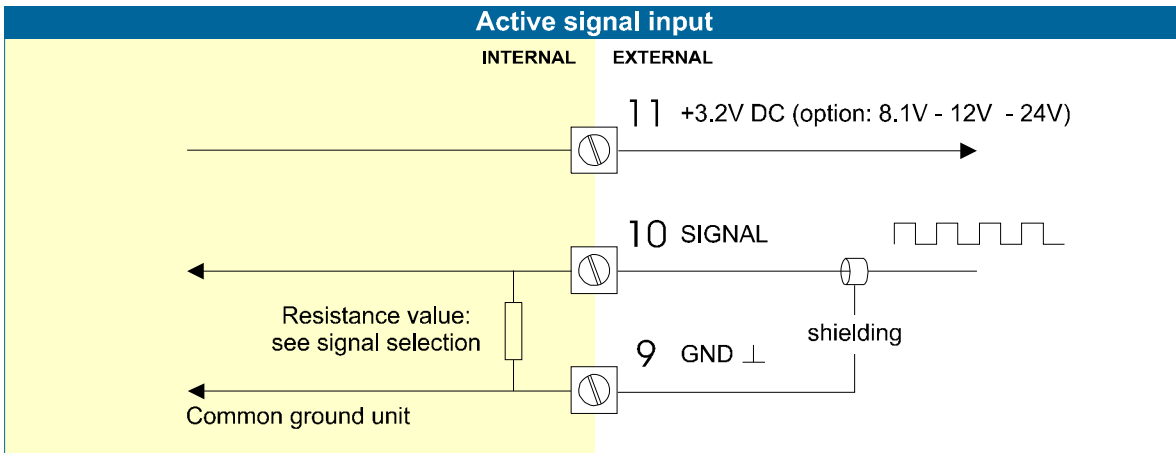


Reed-switch:

The F113-P is suitable for use with flowmeters which have a reed-switch. To avoid pulse bounce from the reed-switch, it is advised to select REED LP - low-pass filter (read par. 3.2.3.)

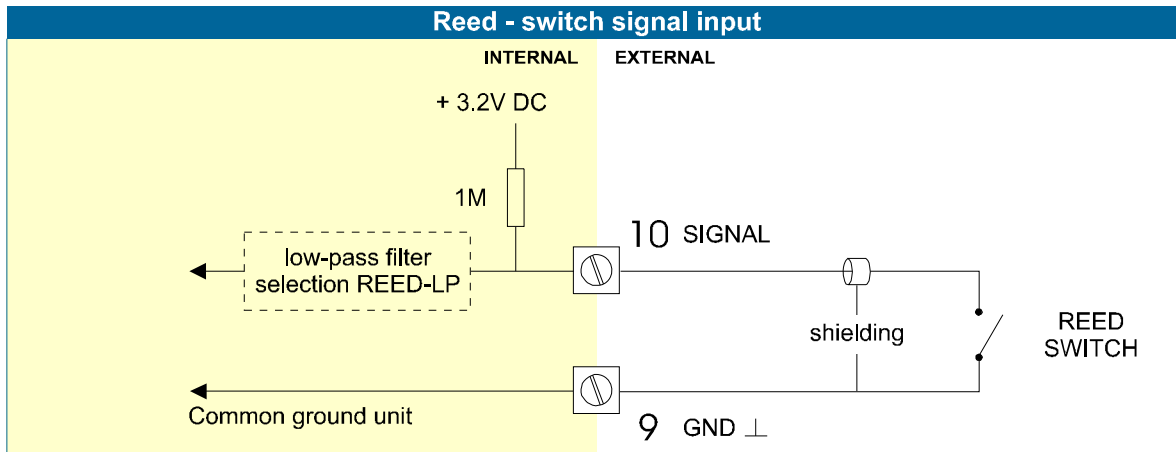


NAMUR-signal:

The F113-P is suitable for flowmeters with an Namur signal. The standard F113-P is not able to power the Namur sensor, as an external power supply for the sensor is required. However, a 8.2V sensor supply voltage (terminal 11) can be provided via types PD-PM.

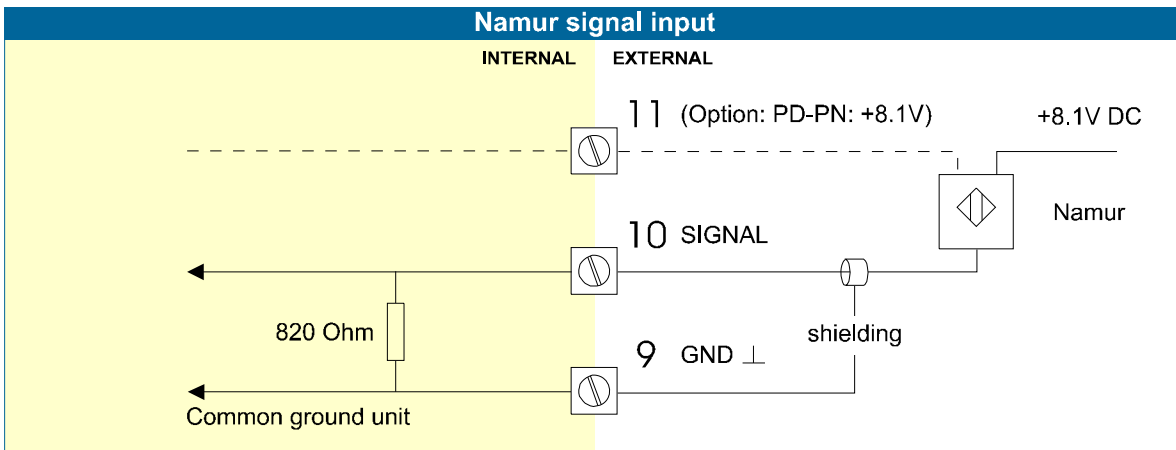

Type IB - Terminal 12-13; external reset:

With this function, the total can be reset to zero with an external switch. The input must be switched with a potential free contact to the GND-terminal number 12.

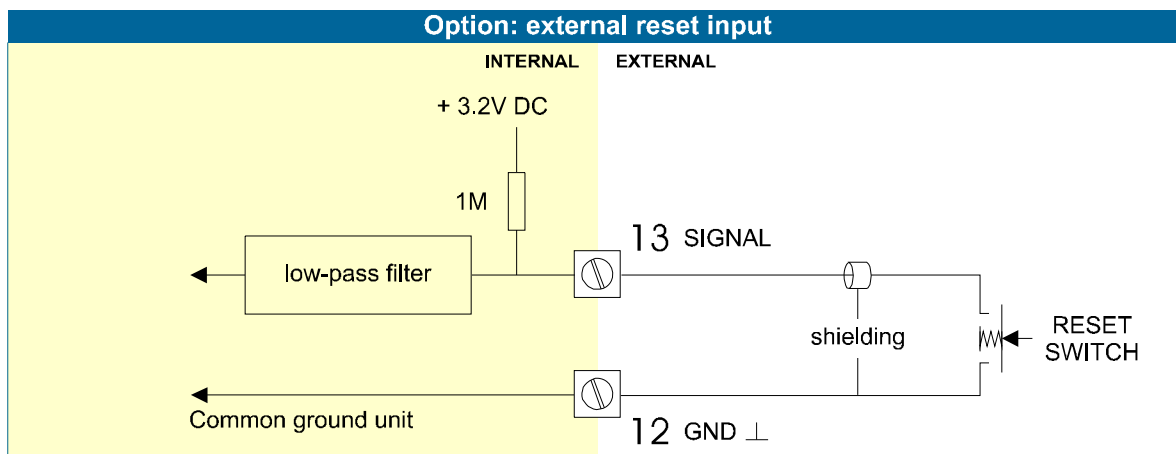

Terminal 14-15; alarm / pulse output R3:


This output is always a fast transistor output. With SETUP 8, the function of this output is set to a flowrate alarm output or pulse output.

If used as a pulse output: the maximum frequency of this output is 60Hz.

Type OA:


An active 24V DC flowrate alarm output or pulse output is available with this option.

Max. driving capacity 20mA@. (Requires power supply type PD / PF / PM).

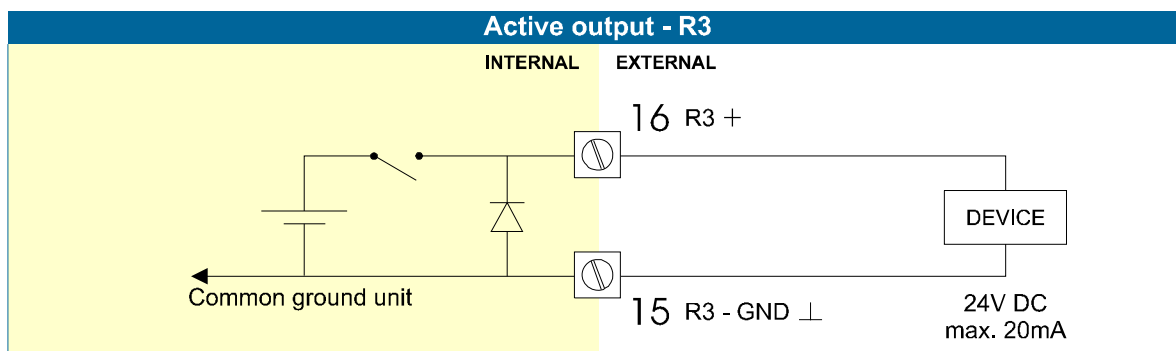

Type OT:

A passive transistor output is available with this option. Max. driving capacity 300mA@50V DC.

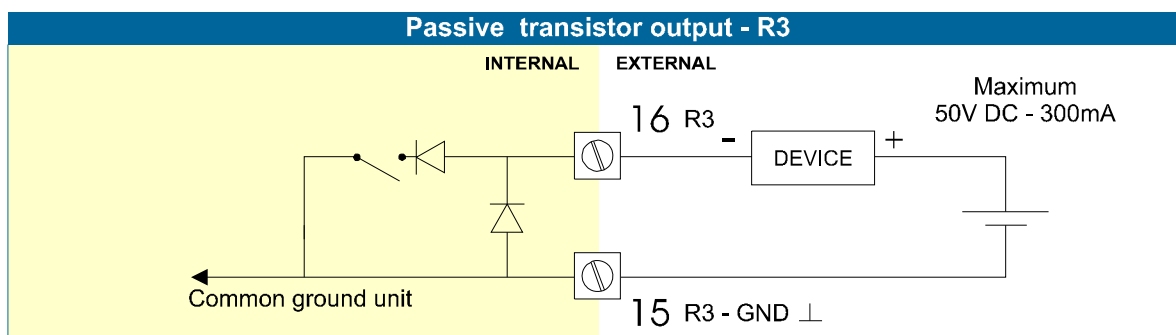

**Terminal 26 - 31: type CB / CH / CI / CT - communication RS232 / RS485 / TTL:
see the manufacturer's plate.**

- Full serial communications and computer control in accordance with RS232 (length of cable max. 15 meters) or RS485 (length of cable max. 1200 meters) is possible.
- Read the Modbus communication protocol and Appendix C.

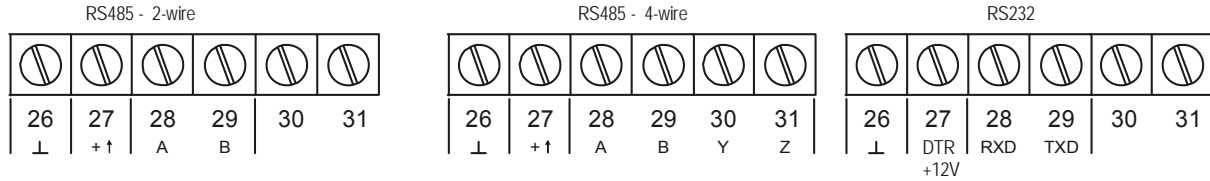


Fig. 11: Overview terminal connectors communication option.

When using the RS232 communication option, terminal 27 is used for supplying the interface. Please connect the DTR (or the RTS) signal of the interface to this terminal and set it active (+12V). If no active signal is available it is possible to connect a separate supply between terminals 26 and 27 with a voltage between 8V and 24V.

Terminal 26-31: backlight option - type ZB:

Note: if the unit is supplied with a power supply type PD, PF or PM, the backlight supply is integrated, so the text following is not applicable.

To power the backlight, provide a 12-24V DC to terminal 26 (-) and 27 (+). An external trimmer 1kOhm trimmer can be used to tune the brightness of the backlight, or if not desired, a short-cut between these terminals have to be made which will result in the maximum brightness. Note: Intrinsically Safe as well as 4-wire RS485 communication is not possible in combination with option ZB.

Option type ZB: adjustable backlight

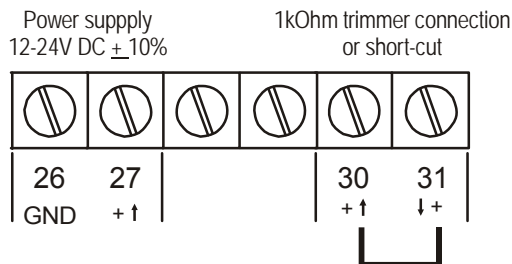


Fig. 12: Overview terminal connectors backlight option.

5. INTRINSICALLY SAFE APPLICATIONS

5.1. GENERAL INFORMATION AND INSTRUCTIONS



Caution !

Cautions

- Mounting, electrical installation, start-up and maintenance of this device may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.
- This device may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.
- Ensure that the measuring system is correctly wired up according to the wiring diagrams. Protection against accidental contact is no longer assured when the housing cover is removed or the cabinet has been opened (danger of electric shock). The housing may only be opened by trained personnel.
- To maintain the degree of protection of at least IP65 in accordance with IEC 60529, certified cable entries in accordance with IEC 61241-0 must be used and correctly installed. Unused openings must be closed with suitable blanking elements.
- When the enclosure of the Indicator is made of aluminum alloy, when used in a potentially explosive atmosphere requiring apparatus of equipment protection level Ga and Da, the unit must be installed such that, even in the event of rare incidents, an ignition source due to impact or friction sparks between the enclosure and iron/steel is excluded.
- Take careful notice of the " Safety rules, instructions and precautionary measures " in the front of this manual.



Safety Instructions

- When two or more active intrinsically safe circuits are connected to the indicator, in order to prevent voltage and/or current addition, applicable to the external circuits, precautions must be taken to separate the intrinsically safe circuits in accordance with IEC 60079-11.
- For the combined connection of the different supply, input and output circuits, the instructions in this manual must be observed.
- From the safety point of view the circuits shall be considered to be connected to earth.
- For installation under ATEX directive: this intrinsically safe device must be installed in accordance with the ATEX directive 94/9/EC and the product certificate KEMA 03ATEX1074 X.
- For installation under IECEx scheme: this intrinsically safe device must be installed in accordance with the product certificate IECEx DEK 11.0042X.
- Exchange of Intrinsically Safe battery FWLiBAT-0xx with certificate number KEMA 03ATEX1071 U or IECEx KEM 08.0005U is allowed in Hazardous Area. See paragraph 5.4. for detailed battery replacement instructions.



Note !



Please Note

- Certificates, safety values and declaration of compliance can be found in the document named: "Fluidwell F1...-XI - Documentation for Intrinsic Safety".
- Special conditions for safe use mentioned in both the certificate and the installation instructions must be observed for the connection of power to both input and / or output circuits.
- When installing this device in hazardous areas, the wiring and installation must comply with the appropriate installation standards for your industry.
- Study the following pages with wiring diagrams per classification.

Label information (inside and outside the enclosure)


Indicated labels on the back cover (below) and on the inside cover (right) show the type labels for intrinsically safe certified units.

For details on usage see the separate “Fluidwell F1...-IX Documentation for Intrinsic Safety”.

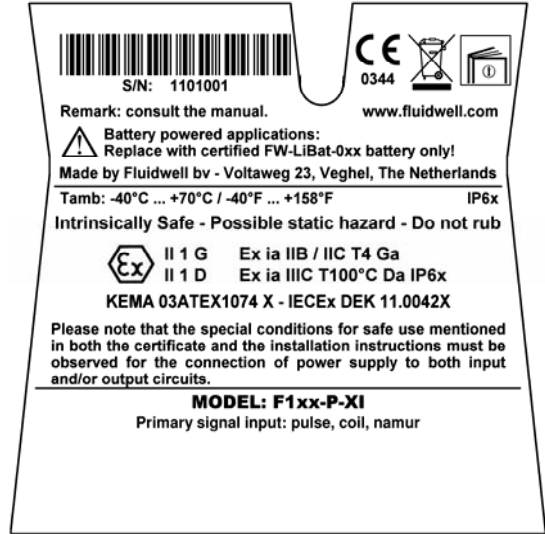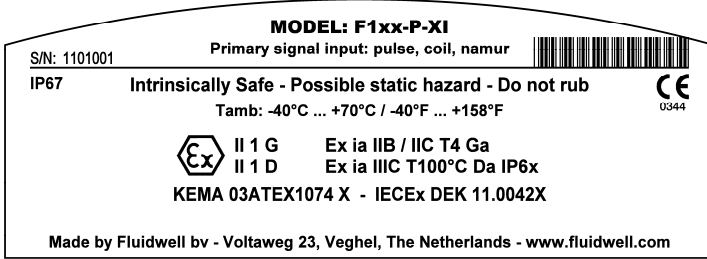

Serial number and year of production

This information can be looked-up on the display: See setup function (par. 3.2.2.) for details.

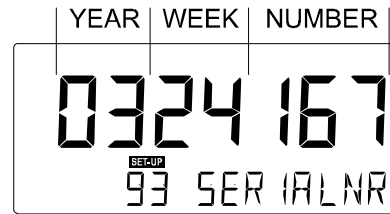

5.2. TERMINAL CONNECTORS INTRINSICALLY SAFE APPLICATIONS




The unit is classified as group IIB/IIIC by default.

Classification of the unit as group IIC is only possible under the following conditions:

- The indicator is either supplied by
 - the internal supply (option -PC); or
 - the external supply connected to terminals 0 and 1 (option -PD); or
 - the circuit supply connected to terminals 7 and 8 (option -AP);
 The maximum values for any of those circuits are those as defined for group IIB/IIIC;
- No other active external intrinsically safe circuits may be connected to the indicator, with exception of circuits connected to terminals 3 and 4 and/or terminals 5 and 6; the maximum values for any of those circuits are those as defined for group IIB/IIIC

Terminal connectors F113-P-XI:

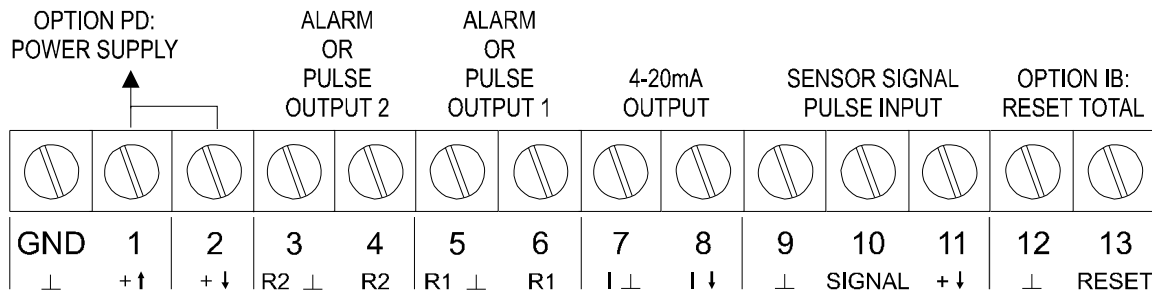


Explanation Intrinsically Safe options:

Type AF - Intrinsically Safe floating 4-20mA analog output:

A floating 4-20mA signal proportional to the flowrate is available with this option.

When the output is disabled, a 3.5mA signal will be generated.

Max. driving capacity 1000 Ohm @ 30V DC.

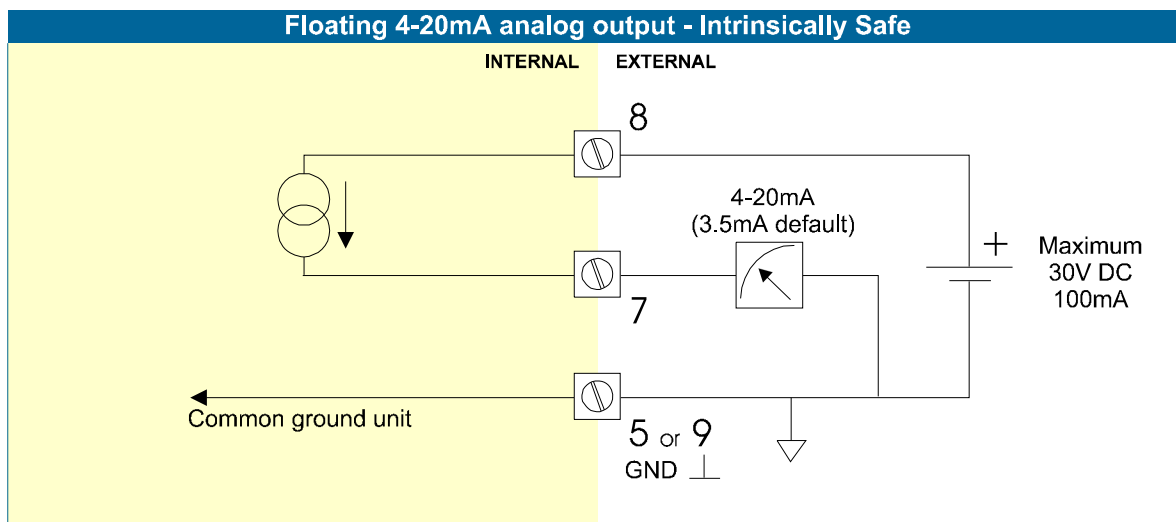

Type PD - Intrinsically Safe power supply and sensor supply - Terminal GND- 01 and 11.

| TYPE | SENSOR SUPPLY | Terminal | | | |
|------|----------------------------|------------|----|----|--|
| | | GND | 01 | 02 | |
| PD | Input voltage: 8-30V DC | 3,2 - 8,1V | L- | L+ | output voltage is according the input voltage; internally linked with terminal 01. |

Terminal 02: this terminal offers the same voltage as connected to terminal 01.

Terminal 11: this terminal offers a 3.2V or 8.1V to power the sensor.

This voltage is selected with the switch(es) inside the enclosure. First, remove the terminals after which the internal plastic cover can be removed.

| Switch position terminal 11 | | Switch position no function | |
|-----------------------------|----------|-----------------------------|--|
| SWITCH 1 | VOLTAGE | SWITCH 2 | |
| on | 8.1 V DC | not available | |
| off | 3.2 V DC | | |

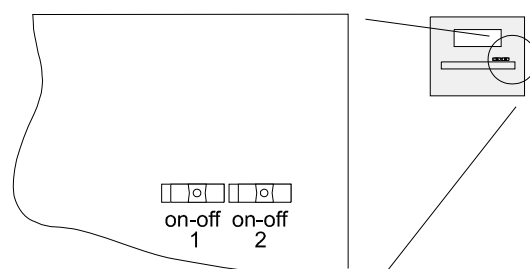


Fig. 13: Switch position voltage selection type PD-XI.

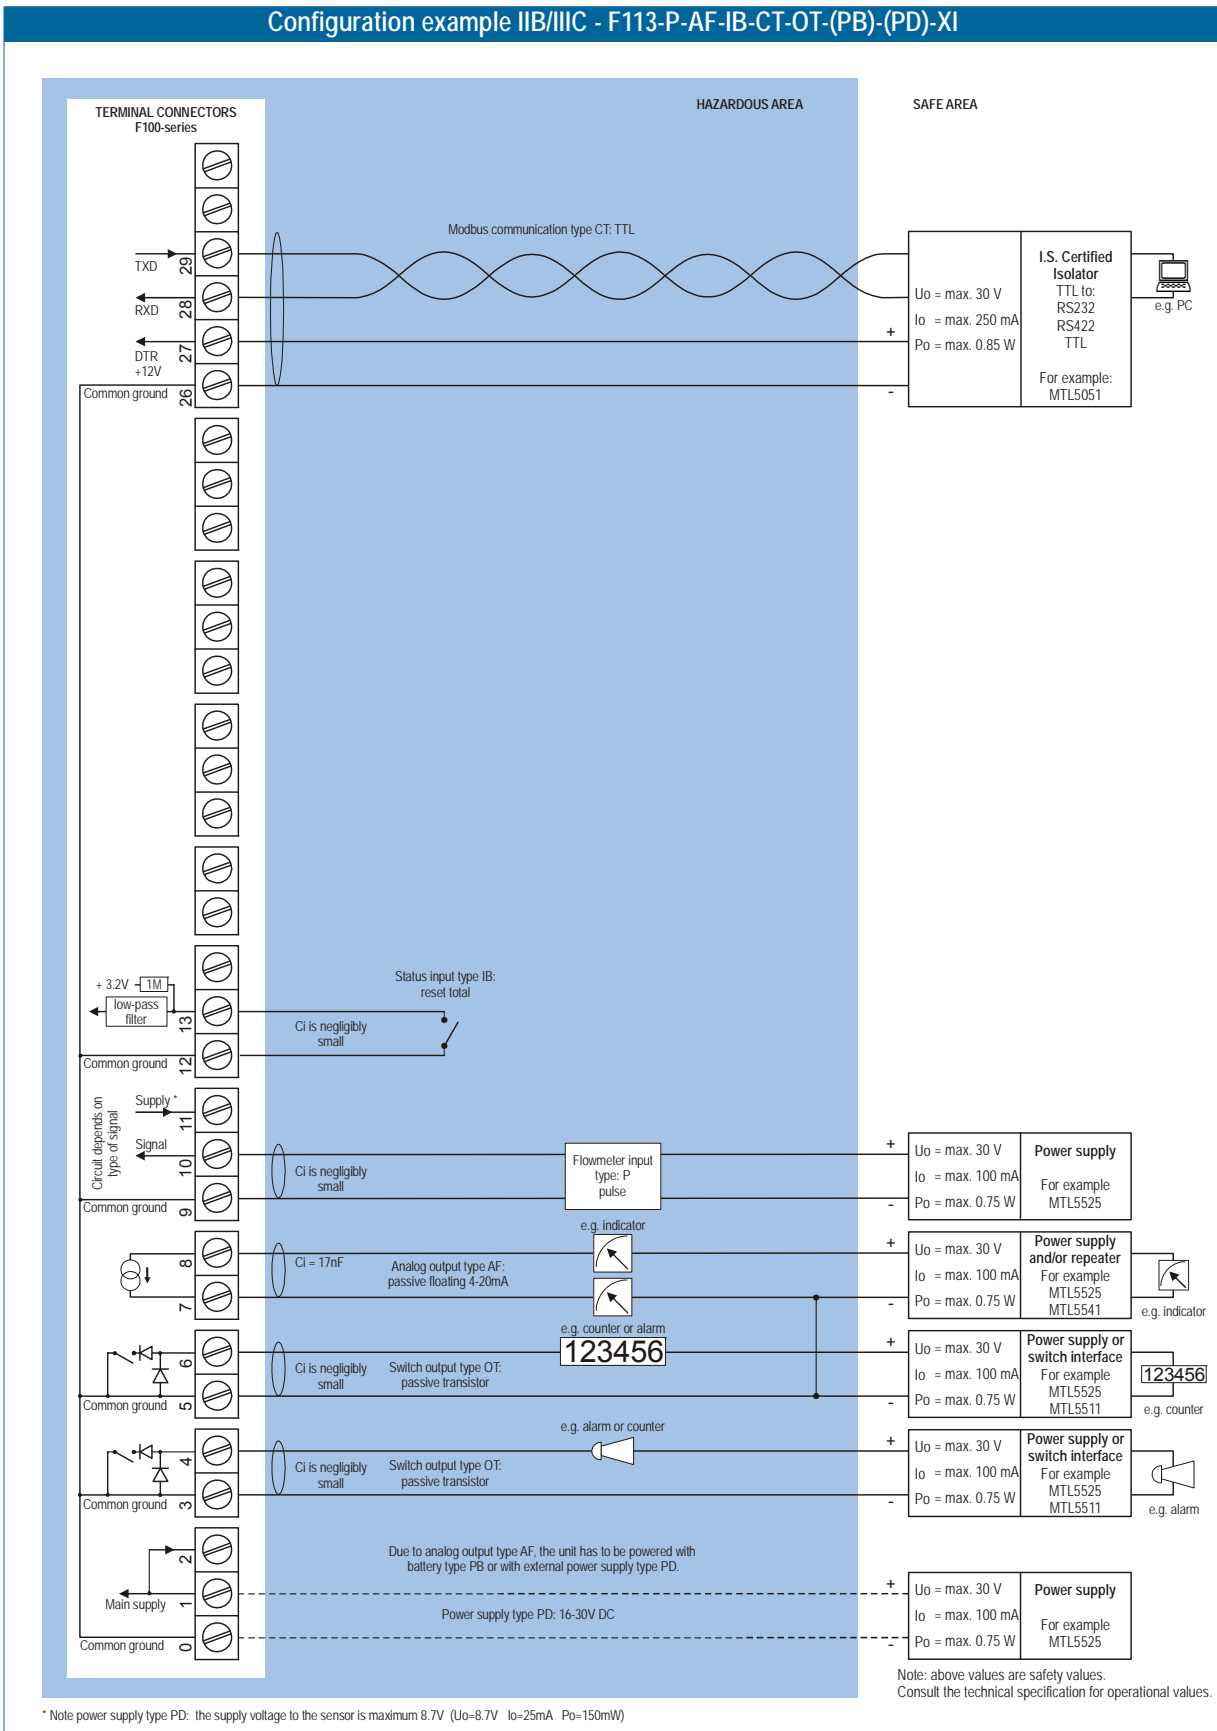


Fig. 14: Configuration example 1 Intrinsically Safe

Configuration example IIB/IIIC and IIC - F113-P-AP-IB-(CT)-OT-PD-XI

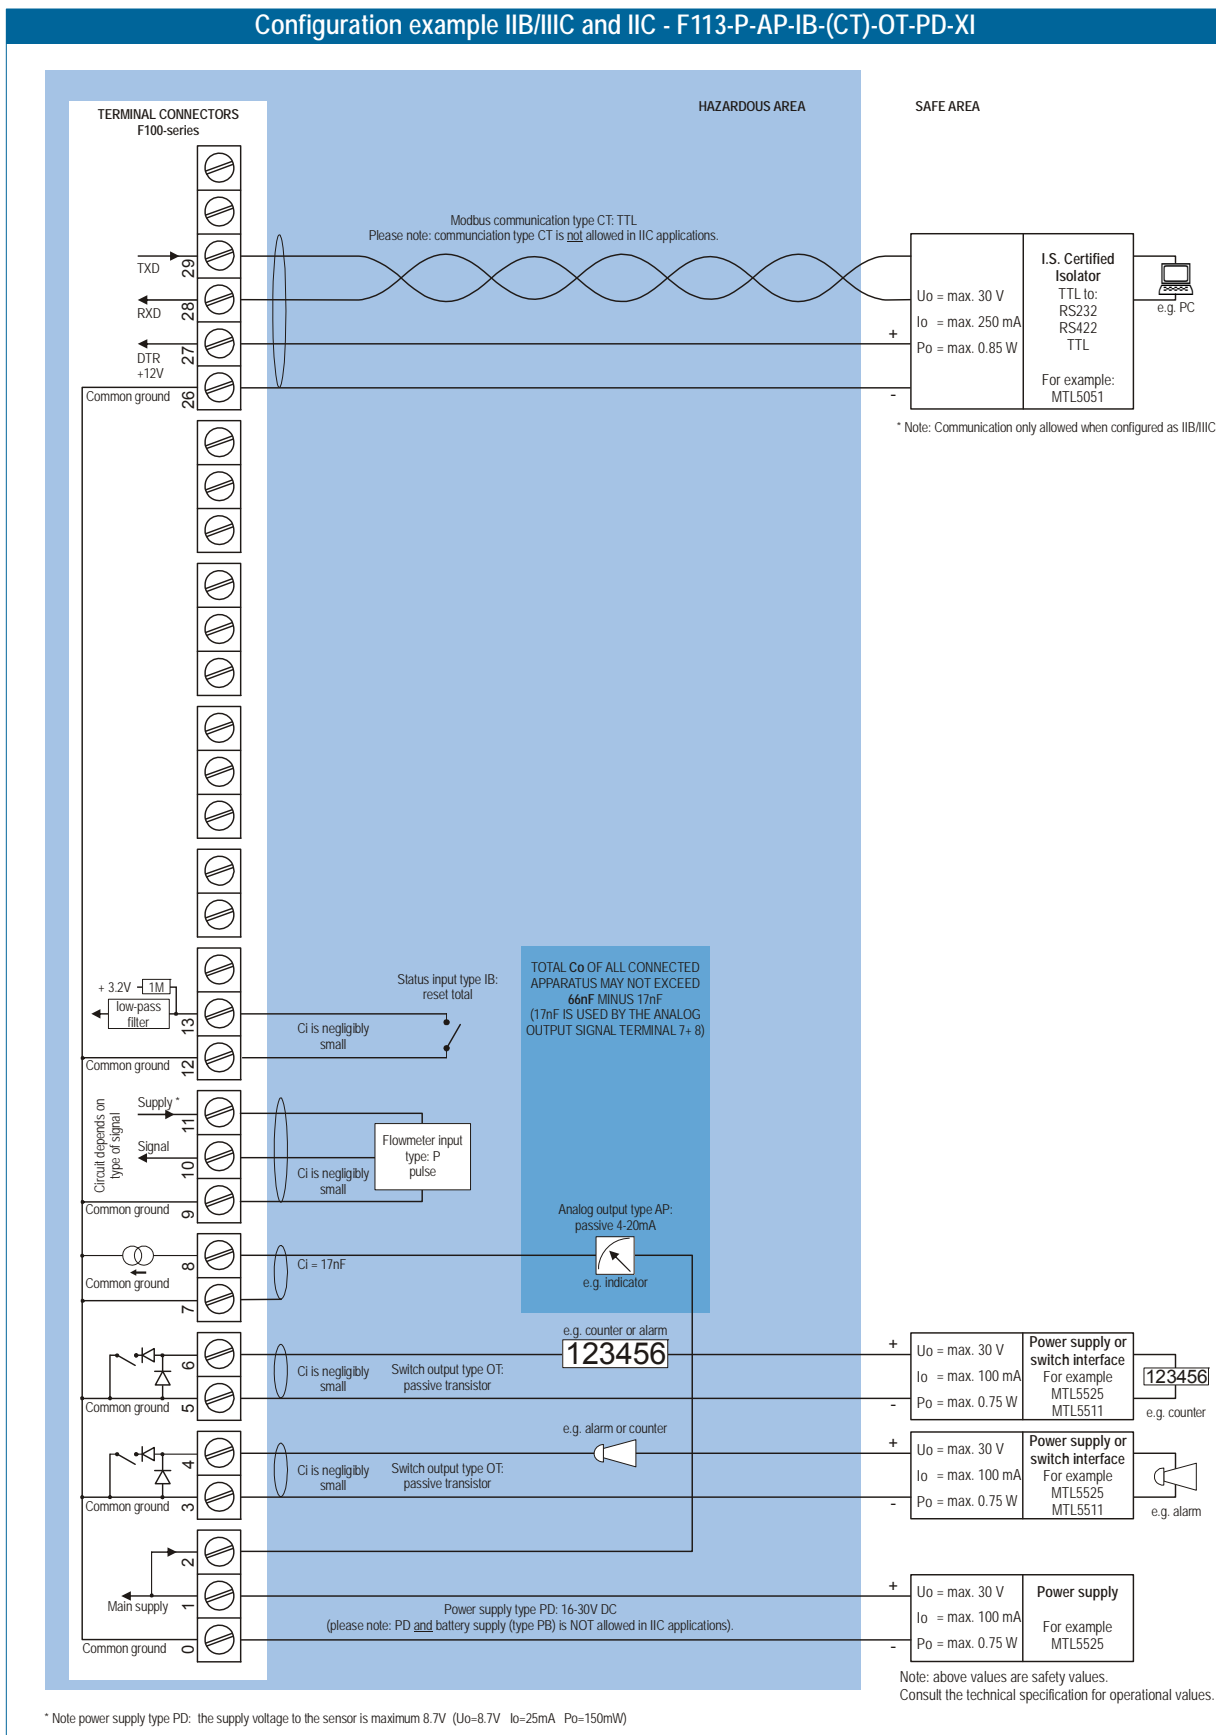


Fig. 15: Configuration example 2 Intrinsically Safe.

5.4 BATTERY REPLACEMENT INSTRUCTIONS



Safety Instructions

- **Fire, explosion or severe burns may result if mistreated.** Do not recharge, crush, disassemble, incinerate, heat above 100°C (212°F) or expose contents to water.
- Mounting, electrical installation, start-up and maintenance of this device may only be carried out by trained personnel authorized by the plant operator. Personnel must read and understand this instruction before carrying out the replacement procedure.
- Always follow the instructions listed in the supplied Battery Replacement Instruction Sheet.
- Batteries pose an environmental hazard. Return used batteries to a recycling point.




Safety instructions for hazardous areas

- Verify the correct battery is supplied: **Only batteries with indicated Ex label are certified for replacement and use in hazardous areas.** Batteries for use in safe areas have no Ex label. **DO NOT EXCHANGE:** Using the wrong type of battery can pose a SERIOUS RISK.
- **For use in hazardous areas Fluidwell recommends FW-LiBAT batteries (manufactured by Fluidwell bv) only.**

Battery replacement procedure



Depending on the production batch, one of two visualized Intrinsically Safe certified battery types may have been installed in the unit. They are interchangeable.

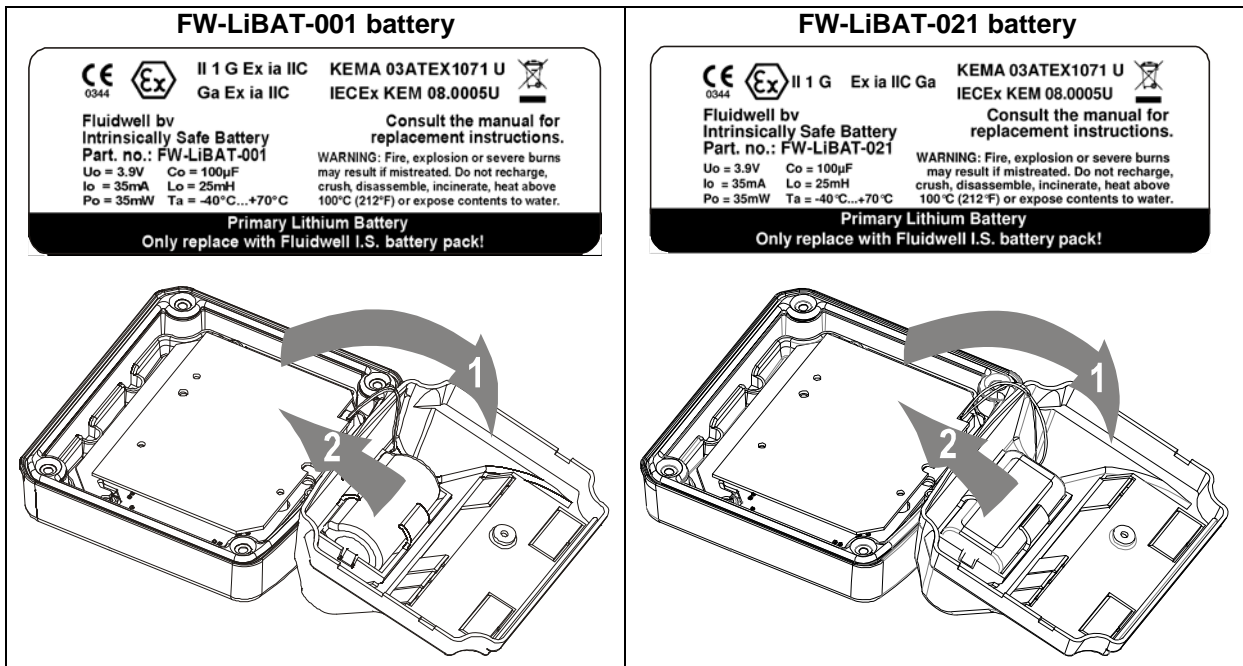

1. To replace the battery, open the unit to gain access to the back inside cover of the unit.
2. Unplug the field connectors from the back inside of the unit.
3. Remove the screw that holds the plastic inside cover.
4. Open the cover and unplug the battery connector.
5. Remove the battery from the inside of the plastic cover. *Do not remove the battery clip!*
6. Install the new battery and re-assemble the unit in reverse order.
7. Start-up the unit

6. MAINTENANCE

6.1. GENERAL DIRECTIONS



- *Mounting, electrical installation, start-up and maintenance of the instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.*
- *The F113-P may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.*
- *Ensure that the measuring system is correctly wired up according to the wiring diagrams. Protection against accidental contact is no longer assured when the housing cover is removed or the panel cabinet has been opened (danger from electrical shock). The housing may only be opened by trained personnel.*
- *Take careful notice of the " Safety rules, instructions and precautionary measures " in the front of this manual.*

The F113-P does not require special maintenance unless it is used in low-temperature applications or surroundings with high humidity (above 90% annual mean). It is the users responsibility to take all precautions to dehumidify the internal atmosphere of the F113-P in such a way that no condensation will occur, for example by placing dry silica-gel sachet in the casing just before closing it. Furthermore, it is required to replace or dry the silica gel periodically as advised by the silica gel supplier.

Battery life-time:

It is influenced by several issues :

- Type of sensor: read chapter 3.2.3. NPN and PNP inputs consume more energy than coil inputs.
- Input frequency: the higher the frequency, the shorter the battery life-time.
- Flowrate calculation: the lower number of pulses (SETUP 26) the shorter the battery life-time.
- Analog output signal; be sure that an external power supply is connected or that the function is disabled if not in use; or else it will have a major influence on the battery life-time (SETUP 71).
- Display update: fast display update uses significantly more power; SETUP 51.
- Pulse output and communications .
- Low temperatures; the available power will be less due to battery chemistry.



Note !

Note: *It is strongly advised to disable unused functions.*

Check periodically:

- The condition of the casing, cable glands and front panel.
- The input/output wiring for reliability and aging symptoms.
- The process accuracy. As a result of wear and tear, re-calibration of the flowmeter might be necessary. Do not forget to re-enter any subsequent K-factor alterations.
- The indication for low-battery.
- Clean the casing with soapy-water. Do not use any aggressive solvents as these might damage the polyester coating.

APPENDIX A: TECHNICAL SPECIFICATION

GENERAL

| Display | |
|--------------|--|
| Type | High intensity reflective numeric and alphanumeric LCD, UV-resistant. |
| Digits | Seven 17mm (0.67") and eleven 8mm (0.31"). Various symbols and measuring units. |
| Refresh rate | User definable: 8 times/sec - 30 secs. |
| Type ZB | Transflective LCD with green LED backlight. Good readings in full sunlight and darkness. Note: only available for safe area applications. Power requirements: 12-24V DC + 10% or type PD, PF, PM. Power consumption max. 1 Watt. |

| Enclosures | |
|-----------------------------|--|
| General | Die-cast aluminum or GRP (Glassfibre Reinforced Polyamide) enclosure with Polycarbonate window, silicone and EPDM gaskets. UV stabilized and flame retardant material. |
| Control Keys | Three industrial micro-switch keys. UV-stabilized silicone keypad. |
| Painting | Aluminum enclosure only; UV-resistant 2-component industrial painting. |
| Panel-mount enclosures | Dimensions: 130 x 120 x 60mm (5.10" x 4.72" x 2.38") – LxHxD. |
| Classification | IP65 / NEMA4X |
| Panel cut-out | 115 x 98mm (4.53" x 3.86") LxH. |
| Type HC | GRP panel-mount enclosure |
| Type HB | Aluminum panel-mount enclosure |
| Field/wall-mount enclosures | Dimensions: 130 x 120 x 75mm (5.10" x 4.72" x 2.95") – LxHxD. |
| Classification | IP67 / NEMA4X |
| Aluminum enclosures | |
| Type HA | Drilling: 2x PG9 – 1x M20. |
| Type HM | Drilling: 2x M16 – 1x M20. |
| Type HN | Drilling: 1x M20. |
| Type HO | Drilling: 2x M20. |
| Type HP | Drilling: 6x M12. |
| Type HT | Drilling: 1x ½"NPT. |
| Type HU | Drilling: 3x ½"NPT. |
| Type HZ | No drilling. |
| GRP enclosures | |
| Type HD | No drilling. |
| Type HE | Drilling: 2x 16mm (0.63") – 1x 20mm (0.78"). |
| Type HF | Drilling: 1x 22mm (0.87"). |
| Type HG | Drilling: 2x 20mm (0.78"). |
| Type HH | Drilling: 6x 12mm (0.47"). |


| Operating temperature | |
|-----------------------|----------------------------------|
| Operational | -40°C to +80°C (-40°F to +176°F) |
| Intrinsically Safe | -40°C to +70°C (-40°F to +158°F) |

| Power supply | |
|------------------------|--|
| Type PB | Lithium battery - life-time depends upon settings - up to 5 years. |
| Type PC | Intrinsically Safe lithium battery - life-time depends upon settings - up to 5 years. |
| Type PD | 8-24V AC / DC ± 10%. Power consumption max. 10 Watt. Intrinsically safe: 16-30V DC; power consumption max. 0.75 Watt. |
| Type PF | 24V AC / DC ± 10%. Power consumption max. 15 Watt. |
| Type PL | Input loop powered from sensor signal 4-20mA (type A, non IS). |
| Type PM | 115-230V AC ± 10%. Power consumption max. 15 Watt. |
| Type PX | Output loop powered: 8-30V DC. Power consumption max. 0.5 Watt. |
| Note PF / PM | The total consumption of the sensors', backlight and outputs may not exceed 400mA@24V. |
| Note I.S. applications | For intrinsically safe applications, consult the safety values in the certificate. |

| Sensor excitation | |
|-------------------|--|
| Type PB / PC / PX | 3.2V DC for pulse signals and 1.2V DC for coil pick-up. Note: This is not a real sensor supply. Only suitable for pulse sensors with a very low power consumption like coils (sine wave) and reed-switches. |
| Type PD | 1.2 - 3.2 - 8.2 - 12 and 24V DC - max. 50mA@24V DC |
| Type PD-XI | Intrinsically safe: Pulse signals: 1.2 - 3.2 - 8.2 - max. 7mA@8.2V DC. Analog signals: the sensor supply voltage is according to the power supply voltage connected to terminal 1. Also terminal 2 offers the same voltage. |
| Type PF / PM | 1.2 - 3.2 - 8.2 - 12 and 24V DC - max. 400mA@24V DC. |

| Terminal connections | |
|----------------------|--|
| Type: | Removable plug-in terminal strip. Wire max. 1.5mm ² and 2.5mm ² (Type PM / PF) |

| Data protection | |
|-----------------|---|
| Type | EEPROM backup of all setting. Backup of running totals every minute. Data retention at least 10 years. |
| Pass code | Configuration settings can be pass code protected. |

| Hazardous area (option) | |
|-------------------------------|---|
| Intrinsically safe Type XI | ATEX approval:  II 1 G Ex ia IIB/IIC T4 Ga II 1 D Ex ia IIIC T100°C Da IP6x IECEx approval: Ex ia IIB/IIC T4 Ga Ex ia IIIC T100°C Da IP6x |
| Explosion proof Type XD/XF | ATEX approval ref.: <EX> II 2 GD EEx d IIB T5. Weight appr. 15kg. Dimensions of enclosure: 350 x 250 x 200mm (13.7" x 9.9" x 7.9") LxHxD. |

| Environment | |
|-------------------------------|--|
| Electromagnetic compatibility | Compliant ref: EN 61326 (1997), EN 61010-1 (1993). |

INPUTS

| Flowmeter | |
|-----------------|---|
| Type P | Coil/sine wave (minimum 20mVpp or 80mVpp - sensitivity selectable), NPN/PNP, open collector, reed-switch, Namur, active pulse signals 8 - 12 and 24V. |
| Frequency | Minimum 0 Hz - maximum 7 kHz for total and flowrate. Maximum frequency depends on signal type and internal low-pass filter. E.g. Reed switch with low-pass filter: max. frequency 120 Hz. |
| K-Factor | 0.000010 - 9,999,999 with variable decimal position. |
| Low-pass filter | Available for all pulse signals. |
| Type A | (0)4-20mA - with signal calibration feature. |
| Type U | 0-10 V, 0-5 V, 1-5 V - with signal calibration feature. |
| Accuracy | Resolution: 14 bit.. Error < 0.025mA / ±0.125% FS. Low level cut-off programmable. |
| Span | 0.000010 - 9,999,999 with variable decimal position. |
| Update time | Four times a second. |
| Voltage drop | 2.5 Volt. |
| Load impedance | 3kOhm |
| Relationship | Linear and square root calculation. |
| Note | For signal type A and U: external power to sensor is required; e.g. type PD. |

| Reset (option) | |
|----------------|---|
| Type IB | Make contact - external reset totalizer. Additional functionality to lock the RESET button of the keyboard (as long as this contact is being made). |
| Duration | Minimum 100mSec. to reset Total. |

OUTPUTS

| Analog output | |
|---------------|---|
| Function | transmitting flowrate. |
| Resolution | 10-bit. |
| Accuracy | error < 0.05% - update 10 times a second. Software function to calibrate the (0)4.00mA and 20.00mA / 0 and 10V levels precisely. |
| Load | max. 1 kOhm |
| Type AA | Active 4-20mA output (requires type OA + PD, PF or PM). |
| Type AB | Active 0-20mA output (requires type OA + PD, PF or PM). |
| Type AF | Floating 4-20mA output for Intrinsically Safe applications (isolated output) |
| Type AI | Galvanically isolated output - also for battery powered models. |
| Type AP | Passive 4-20mA output - output loop powered (type PX) |
| Type AU | Active 0-10V output (requires type OA + PD, PF or PM). |

| Alarm outputs | |
|---------------|--|
| Function | User defined: flowrate alarm or pulse output. |
| Alarm output | low, high, low-low, high-high or flowrate alarm. |
| Pulse output | Max. frequency 60Hz. Pulse length user definable between 7,8msec up to 2 seconds. |
| Type OA | Three active 24V DC output; max. 50mA per output (requires type PD or PM). |
| Type OR | Two electro-mechanical relay outputs; max. switch power 230V AC - 0,5A and one OT output (requires type PF or PM). |
| Type OS | Four electro-mechanical relay outputs; max. switch power 230V AC - 0,5A (requires type AP, OR and PD). |
| Type OT | Three passive transistor outputs - not isolated. Load: max. 50V DC - 300mA |

| Communication option | |
|----------------------|--|
| Functions | reading display information, reading / writing all settings. |
| Protocol | Modbus ASCII or RTU |
| Speed | 1200 - 2400 - 4800 - 9600 baud |
| Addressing | maximum 255 addresses. |
| Type CB | RS232 |
| Type CH | RS485 2-wire |
| Type CI | RS485 4-wire |
| Type CT | TTL Intrinsically Safe communication. |
| Type CX | no communication. |

OPERATIONAL

| Operator functions | |
|---------------------------|--|
| Displayed functions | <ul style="list-style-type: none"> total and/or flowrate. total and accumulated total. total can be reset to zero by pressing the CLEAR-key twice. alarm value's low - high - low-low and high-high flowrate alarm value's can be entered (this function can be disabled) |
| Total | |
| Digits | 7 digits. |
| Units | L, m3, GAL, USGAL, KG, lb, bbl, no unit. |
| Decimals | 0 - 1 - 2 or 3. |
| Note | total can be reset to zero. |
| Accumulated total | |
| Digits | 11 digits. |
| Units / decimals | according to selection for total. |
| Flowrate | |
| Digits | 7 digits. |
| Units | mL, L, m3, Gallons, KG, Ton, lb, bl, cf, RND, ft3, scf, Nm3, NI, ical - no units. |
| Decimals | 0 - 1 - 2 or 3. |
| Time units | /sec - /min - /hr - /day. |
| Alarm values | |
| Digits | 7 digits. |
| Units | According to selection for flowrate. |
| Decimals | According to selection for flowrate. |
| Time units | According to selection for flowrate. |
| Type of alarm | low, high, low-low or high-high flowrate alarm. Includes delay time alarm and configurable alarm outputs. |

APPENDIX B: PROBLEM SOLVING

In this appendix, several problems are included that can occur when the F113-P is going to be installed or while it is in operation.

Flowmeter does not generate pulses:

Check:

- Signal selection SETUP - 61,
- Pulse amplitude (par. 4.4.3.),
- Flowmeter, wiring and connection of terminal connectors (par. 4.4.3.),
- Power supply of flowmeter (par. 4.4.2.).

Flowmeter generates "too many pulses":

Check:

- Settings for total and Flowrate: SETUP 11-14 and 21-27,
- Type of signal selected with actual signal generated - SETUP - 61,
- Sensitivity of coil input - SETUP - 61 and par. 4.4.3.
- Proper grounding of the F113-P - par. 4.4.1.
- Use screened wire for flowmeter signals and connect screen to terminal 9. (unless connected at sensor)

Analog output does not function properly:

Check:

- SETUP 71 - is the function enabled?
- SETUP 72 / 73: are the flow-levels programmed correctly?
- connection of the external power-supply according to the specification.

Pulse output does not function:

Check:

- SETUP 85 - pulse per "x" quantity; is the value programmed reasonable and will the maximum output be under 20Hz?
- SETUP 86 - impulse width; is the external device able to recognize the selected pulse width and frequency?

Flowrate displays "0 / zero" while there is flow (total is counting):

Check:

- SETUP 22 / 25: are the K-factor and time unit correct?
- SETUP 26 / 27: The unit has to count the number of pulses according to SETUP 26 within the time according to SETUP 27. Make sure that 27 is set to 10.0 seconds for example : the result is that the unit has at least 10 seconds time to measure the number of pulses according to SETUP 26.

The pass code is unknown:

If the pass code is not 1234, there is only one possibility left: call your supplier.

ALARM

When the alarm flag starts to blink an internal alarm condition has occurred. Press the "select button" several times to display the 5-digit error code. The codes are:

0001: irrecoverable display-data error: data on the display might be corrupted.

0002: irrecoverable data-storage error: the programming cycle might have gone wrong: check programmed values.

0003: error 1 and error 2 occurred simultaneously

The alarm condition will almost certainly be handled internally and if all mentioned values still appear correct, no intervention by the operator is needed. If the alarm occurs more often or stays active for a longer time, please contact your supplier.

APPENDIX C: COMMUNICATION VARIABLES

Remarks:

- Below, an overview of the F113-P specific variables; other common variables are described in the standard table.
- All numbers are decimal numbers, unless otherwise noted.
- The following variables of the standard table (var00-var30) are not valid for this product and will be responded with value 1: var00, 03-05, 07,08, 16-22, 24, 26-29.

| CONFIGURATION VARIABLES F113-P - SETUP-LEVEL: | | | | |
|---|-------------------|-------|---|---|
| VAR | DESCRIPTION | BYTES | VALUE | REMARKS |
| TOTAL | | | | |
| 32 (20h) | unit | 1 | 0=L 1=m3 2=kg 3=lb 4=gal 5=usgal 6=bbl 7=none | |
| 33 (21h) | decimals | 1 | 0...3 | |
| 34 (22h) | K-factor | 3 | 1....9.999.999 | K-f 0000001 - K-f 0000009 is allowed when decs < 6! (VAR37) |
| 37 (25h) | decimals K-factor | 1 | 0...6 | |
| FLOWRATE | | | | |
| 48 (30h) | unit | 1 | 0=mL 1=L 2=m3 3=mg 4=g 5=kg 6=ton 7=gal 8=bbl 9=lb 10=cf 11=rev (revolutions for RPM) 12=none 13=scf 14=NM3 15=NL 16=p | |
| 49 (31h) | time unit | 1 | 0=sec 1=min 2=hour 3=day | |
| 50 (32h) | decimals | 1 | 0...3 | |
| 51 (33h) | K-factor | 3 | 1....9.999.999 | K-f 0000001 - K-f 0000009 is allowed when decs < 6! (VAR54) |
| 54 (36h) | decimals K-factor | 1 | 0...6 | |
| 55 (37h) | number of pulses | 1 | 1..255 | |
| 56 (38h) | cut-off time | 2 | 1 .. 9999 | steps of 100ms |

| VAR | DESCRIPTION | BYTES | VALUE | REMARKS |
|------------------------|-----------------------------------|-------|--|------------------------------------|
| 234 EAh | minimum flowrate | 3 | 0-9,9999 | decimals: see 50 (32h) |
| 237 EDh | maximum flowrate | 3 | 0-9,9999 | decimals: see 50 (32h) |
| 205 CDh | delay time alarm min. flowrate | 2 | 1...9,999 | steps of 0.1 second |
| DDh | delay time alarm max. flowrate | 2 | 1...9,999 | steps of 0.1 second |
| 44h | edit flowrate alarm | 1 | 0=operator 1=SETUP level | |
| 46h | alarm at flowrate zero | 1 | 0=ignore 1=default 2=no relay | |
| DISPLAY | | | | |
| 64 (40h) | display function | 1 | 0=total 1=flowrate | |
| 68 (44h) | set flowrate monitor | 1 | 0=operator level 1=SETUP level | |
| POWERMANAGEMENT | | | | |
| 80 (50h) | LCD update time | 1 | 0=fast 1=1sec 2=3sec 3=15sec 4=30sec 5=off | |
| 81 (51h) | power-mode battery | 1 | 0=operational 1=shelf | |
| FLOWMETER | | | | |
| 96 (60h) | flowmeter signal | 1 | 0=npn 1=npn-lp 2=reed 3=reed LP 4=ppn 5=ppn-lp 6=namur 7=coil hi 8=coil lo | |
| ANALOG OUTPUT | | | | |
| 112 (70h) | analog output | 1 | 0=disable 1=enable | |
| 113 (71h) | minimum rate | 3 | 0..9999999 | unit, time, decimals acc. var48-50 |
| 116 (74h) | maximum rate | 3 | 0..9999999 | unit, time, decimals acc. var48-50 |
| 119 (77h) | cut off percentage | 1 | 0..99 | steps of 0.1% |
| 120 (78h) | tune minimum rate | 2 | 0..9999 | |
| 122 (7Ah) | tune maximum rate | 2 | 0..9999 | |
| 99 (63h) | filter | 1 | 0....99 | |

| VAR | DESCRIPTION | BYTES | VALUE | REMARKS |
|---------------------|----------------------|-------|----------------------------|--------------------------------|
| PULSE OUTPUT | | | | |
| 128 (80h) | impulse width | 1 | 0=off 1=short 2=long | |
| 129 (81h) | pulse per X quantity | 3 | 1..9999999 | unit, decimals acc. var32 -33 |
| OTHERS | | | | |
| 168 (A8h) | pass code | 2 | xxxx | read only! |
| 170 AAh | tagnumber | 3 | 0..9999999 | Other vars: see standard table |

OTHER F113-P VARIABLES FOR COMMUNICATION

TOTAL - variable number 566 (236h) – 6 bytes

Read total: The value of total read using RS communications might differ from the value that appears on the display. This is due to the fact that the display can only display up to seven digits (for example when two decimals are selected for total and total has a value of 123456,78 the display will show 23456,78 while communication will read a "total" of 12345678 and a "total decimals" of 2).

Write total: total can only be cleared. This means writing a value different from 0 will result in the reply of an error message. Only writing 6 bytes of zero's to total will be accepted.

ACCUMULATED TOTAL - variable number 560 (230h) – 6 bytes

Read acc. total: A difference between the read value and the display value, as explained for "Read total", might appear here too.

Write acc. total: Not possible.

When reading or writing total or accumulated total it should be noted that the used values are given including the decimals. This means that a read/write to one of these variables should be accompanied with a read/write to the variable that holds the number of decimals for this variable:

Example: read var. 566 for total:

Read var. 33 for total decimals and calculate the real value of total by multiplying total with $10^{-(total\ decimals)}$

FLOWRATE - variable number 572 (23Ch) – 4 bytes

Read flowrate: The value difference as mentioned with total/acc. total might appear here too.

Write flowrate: Not possible.

INDEX OF THIS MANUAL

| | | | |
|----------------------------|--------|---------------------------------|--------|
| accumulated Total | 8 | Intrinsically Safe options | 39 |
| actual settings | 53, 54 | IP classification | 23 |
| analog | | keys | 7 |
| 0-10V output | 32 | low-battery | 9 |
| floating output. | 39 | Low-battery alarm | 9 |
| flowrate min. | 19 | main-function | 11 |
| intrinsically safe output. | 39 | maintenance | 43 |
| isolated output. | 31 | model | 22 |
| output loop powered. | 30 | NAMUR-signal | 34 |
| battery life time | 17, 43 | Operator level | 8 |
| Clear Total | 8 | pass code | 22, 48 |
| Coil-signal | 32 | power supply | 28 |
| communication | 36 | power supply - loop powered | 30 |
| family-specific variables | 49 | power supply intrinsically safe | 39 |
| terminal connection | 36 | Problem solving | 48 |
| Configuration | 10 | pulse output | |
| Dimension enclosures | 24, 25 | pulse length / period time | 21 |
| display | | pulse per quantity | 21 |
| function | 17 | Pulse-signal NPN/PNP | 33 |
| display update | 17 | rate/Total | 8 |
| external reset option | 35 | Reed-switch: | 34 |
| flowmeter | | relay output | |
| signal | 18 | function | 21 |
| Flowmeter input | 32 | serial number | 22 |
| flowrate | | SETUP-level | 10 |
| alarm | 9 | subfunction | 11 |
| calculation | 15 | tagnumber | 22 |
| decimals | 15 | Technical specification | 44 |
| decimals k-factor | 15 | terminal connectors | 28 |
| enter alarm value | 9 | total | |
| measuring unit | 15 | decimals | 14 |
| time unit | 15 | decimals k-factor | 14 |
| high alarm output | 29, 35 | k-factor | 14, 15 |
| Installation | 23 | measuring unit | 14 |
| Intrinsic safety | 37 | version software | 22 |

LIST OF FIGURES IN THIS MANUAL

| | |
|--|----|
| Fig. 1: Typical application for the F113-P..... | 5 |
| Fig. 2: Control Panel..... | 7 |
| Fig. 3: Example of display information during process. | 8 |
| Fig. 4: Example of display information during programming minimum flowrate. | 9 |
| Fig. 5: Example of low-battery alarm..... | 9 |
| Fig. 6: Dimensions aluminum enclosures. | 24 |
| Fig. 7: Dimensions GRP enclosures. | 25 |
| Fig. 8: Grounding aluminum enclosure with type PM 115-230V AC..... | 26 |
| Fig. 9: switch position voltage selection (type PD, PF and PM)..... | 27 |
| Fig. 10: Overview of terminal connectors standard configuration F113-P and options. | 28 |
| Fig. 11: Overview terminal connectors communication option..... | 36 |
| Fig. 12: Overview terminal connectors backlight option..... | 36 |
| Fig. 13: Switch position voltage selection type PD-XI..... | 39 |
| Fig. 14: Configuration example 1 Intrinsically Safe | 40 |
| Fig. 15: Configuration example 2 Intrinsically Safe..... | 41 |

NOTES

| LIST OF CONFIGURATION SETTINGS | | | |
|---------------------------------------|--------------------------|--------|--------|
| SETTING | DEFAULT | DATE : | DATE : |
| 1 - TOTAL | Enter your settings here | | |
| 11 unit | L | | |
| 12 decimals | 0000000 | | |
| 13 K-factor | 0000001 | | |
| 14 decimals K-factor | 0 | | |
| 2 - FLOWRATE | | | |
| 21 unit | L | | |
| 22 time unit | /min | | |
| 23 decimals | 0000000 | | |
| 24 K-factor | 0000001 | | |
| 25 decimals K-factor | 0 | | |
| 26 calculation / pulses | 010 | | |
| 27 cut-off time | 30.0 sec. | | |

| SETTING | DEFAULT | DATE : | DATE : |
|-------------------------------|----------------|--------|--------|
| 3 - ALARM | | | |
| Enter your settings here | | | |
| 31 flow zero | ignore | | |
| 32 alarm value low-low | 0 | | |
| 33 alarm value low | 0 | | |
| 34 alarm value high | 0 | | |
| 35 alarm value high-high | 0 | | |
| 36 delay time alarm low-low | 0.0 sec | | |
| 37 delay time alarm low | 0.0 sec | | |
| 38 delay time alarm high | 0.0 sec | | |
| 39 delay time alarm high-high | 0.0 sec | | |
| 4 - DISPLAY | | | |
| 41 set alarm | operator level | | |
| 42 function | total | | |
| 5 - POWER MANAGEMENT | | | |
| 51 LCD-new | 1 sec. | | |
| 52 mode | operational | | |
| 6 - FLOWMETER | | | |
| 61 signal | coil-lo | | |
| 7 - ANALOG OUTPUT | | | |
| 71 output | disabled | | |
| 72 min. flowrate 4-mA | 0000000 | | |
| 73 max. flowrate 20mA | 9999999 | | |
| 74 cut off percentage | 0.0% | | |
| 75 tune min - 4mA | 0160 | | |
| 76 tune max - 20mA | 6656 | | |
| 77 filter | 01 (off) | | |
| 8 - PULSE OUTPUT | | | |
| 81 relay1 | off | | |
| 82 relay 2 | off | | |
| 83 relay 3 | off | | |
| 84 relay 4 | off | | |
| 85 impulse width | 000 periods | | |
| 86 pulse per | 0001000 | | |
| 9 - COMMUNICATION | | | |
| 91 baud-rate | 2400 | | |
| 92 address | 1 | | |
| 93 mode | BUS-ASC | | |
| A - OTHERS | | | |
| A4 pass code | 0000 | | |
| A5 tagnumber | 0000000 | | |

